

# FRIGIDAIRE

## quick start guide

### ELECTRIC RANGE



#### BEFORE YOU START



##### Set up your oven

Remove all packaging material and tape and make sure your oven racks are in place prior to operating the range. Check out your Use & Care Manual for tips to help care for your range.



##### Set your clock

It's easy! Press . Press the Up or Down arrow until "CLoC" appears in the display. Press START. Press and hold the Up or Down arrow until the correct time appears in the display, then press START.



##### Before cooking for the first time

Set your oven to Bake at 350°F/ 177°C for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.


#### YOU'RE IN CONTROL



##### Your oven controls

Using your oven starts with pressing the keys on your oven control.

#### GET STARTED

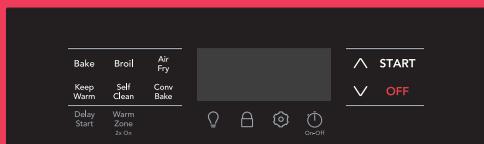

1 Press **BAKE**.



350° will appear in the display.

2 Use the **UP** and **DOWN** arrow keys to change to desired cooking temperature.

3 Press **START**.

4 To cancel **BAKE** at any time, press **OFF**.

#### OVEN MODE HIGHLIGHTS


-  Bake with multiple racks and get improved results with **Convection Bake**. Heated air flows around the food from all sides for even cooking and browning.
-  Cooking is more convenient with **Cook Time**. Choose the amount of time you want your oven to cook, then the oven will turn off.
-  Meals stay warm and ready to serve in the oven with **Keep Warm**.



#### REMEMBER

- Do not use aluminum foil or any other materials to line the oven bottom, walls, racks or any part of the oven.
- All oven racks should be removed before a self clean operation.
- For more cooking and rack position tips, refer to your Use & Care Manual.

## OVEN MODES

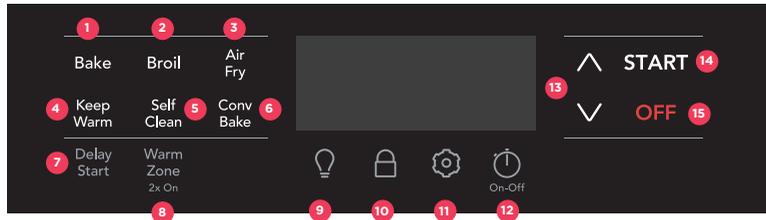

1. **BAKE** is for foods that need heat to rise and move gently in the oven.
2. **BROIL** is for broiling and grilling foods under direct, high heat.
3. **AIR FRY** quickly and evenly circulates heated air to deliver crispy, golden results with little to no oil.
4. **KEEP WARM** is used to keep cooked foods at serving temperature in the oven.
5. **SELF CLEAN** starts a self-cleaning cycle.
6. **CONV BAKE** uses a fan to circulate heat for quick and even results when baking with multiple racks.
7. **DELAY START** sets a delayed starting time to oven cooking or cleaning functions.

8. **WARM ZONE** uses radiant heat to keep cooked foods at serving temperature on the cooktop.\*
9. **OVEN LIGHT** turns the interior light on and off at a touch.
10. **LOCKOUT** locks the control panel to prevent accidental key presses.
11. **SETTINGS** key is used to set user preferences for various control functions.
12. **TIMER ON-OFF** is used to set or cancel the minute timer.
13. **UP and DOWN** keys are used to set temperature and time.
14. **START** starts cooking functions and sets the clock.
15. **OFF** turns off all cooking functions.

### \*Using Warm Zone on the cooktop



**To turn on Warm Zone**  
Press the Warm Zone key **twice (2X)**.



**To turn off Warm Zone**  
Press the Warm Zone key **once**.

## QUICK CARE



### A little love goes a long way

Quick ongoing care keeps your range working great for years to come! Use a ceramic cooktop cleaning cream before cooking for the first time to protect your cooktop from scratches.



### Be gentle

Clean with warm water and mild soap, or use Frigidaire ReadyClean™ Oven and Microwave Cleaner.



### Choose your clean cycle

**SELF CLEAN** uses high temperatures to eliminate heavier soils and reduces them to a powdered ash you can easily wipe away.

## FAQs

### Why does my range make noises when I'm cooking?

Temperature changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up and cool down different parts of the oven, even when it's off. These sounds are normal.

### This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call Frigidaire Owner Support if you need help!

### Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Watch food to prevent burning.




Find more troubleshooting tips in the back of your Use & Care Guide.

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range.

Look for the Photoregister<sup>SM</sup> icon on your registration card.

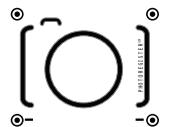

WE ARE  
**here**  
FOR YOU



Have a question?



Want help?



Need service?

owner support

frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

