


Dishwasher Use & Care Manual



24 inch Built-In Dishwasher

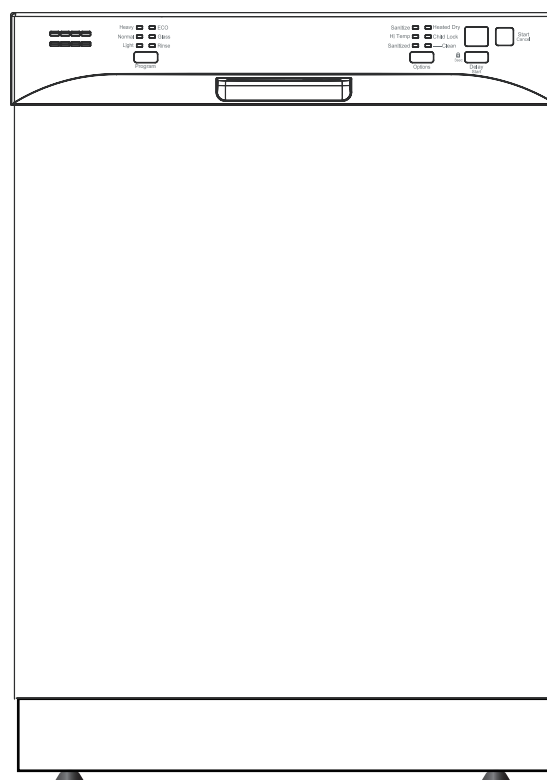

ENB6632PEBB
ENB6632PEBS
ENB6632PEBW

TABLE OF CONTENTS

Important Safety Instructions	2-3	Dishwasher Dispenser and Detergents	11
Dishwasher Features	4	Care and Cleaning	12-13
Operating Instructions	5-7	Troubleshooting.....	14-15
Preparing and Loading Dishes.....	8-10	Warranty.....	16

IMPORTANT SAFETY INSTRUCTIONS



WARNING!


When using the dishwasher, follow basic precautions, including the following:

- Water supply temperature should be 120 F or 149 F.
- Dispose of the discarded appliance and packing material properly.
- The dishwasher must be grounded, or it can result in a risk of electric shock.
- If there is any damage of the dishwasher, please contact your dealer. Do not attempt to repair or replace any part by yourself.




WARNING!

To reduce the risk of fire, explosion, or electrical shock, and to prevent damage, or personal injury, observe the following:

- Read all instructions before using the dishwasher.
- The manual does not cover every possible condition and situation that may occur.
- Use the dishwasher only for its intended function as described in this manual.
- When loading items to be washed:
 - Load sharp items and knives so that they are not likely to damage the door seal and tub.
 - Load sharp items and knives with the handles up to reduce the risk of cut type injury.
 - Do not wash plastic items unless marked “dishwasher safe” or the equivalent. If not marked, check with the manufacturer for a recommendation.
 - If the dishwasher drains into a food disposal, make sure the disposal is completely empty before running.
 - Do not operate your dishwasher unless all enclosure panels are in the proper place.
 - Do not tamper with or override controls and interlocks.
-  Do not touch the **HEATING ELEMENT** during or immediately after use, especially if the sanitize option has been selected.
- Do not sit or stand on the door or dish racks of the dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE**. If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not store or use combustible materials, gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Use only detergents or rinse agents recommended for use in a dishwasher and keep them out of the reach of children.
- Keep young children and infants away from the dishwasher when it is operating.


IMPORTANT SAFETY INSTRUCTIONS

- Do not use the dishwasher if it has a damaged power line or plug. Do not plug the dishwasher into a damaged outlet. Failure to observe these instructions may result in electrical shock.
- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.
-  Do not touch the **STEAM** on the pannel during the washing cycle, especially if the sanitize option has been selected.
- After unpacking the dishwasher, keep the packaging out of the reach of children.
- Failure to follow these instructions can result in death, fire or electrical shock:
 - Electrically ground the dishwasher.
 - Connect the ground wire to the green ground connector in the junction box.
 - Do not use an extension cord.


SAVE THESE INSTRUCTIONS

DISHWASHER FEATURES

Capacity	14 place settings
Dimension	606x650x857mm(WxDxH)
Power Supply	120 V, 60 Hz
Rated Power Usage	Wash motor 50 W Heater 840 W
Water Feed Pressure	20 - 120 psi (138 - 828 kPa)

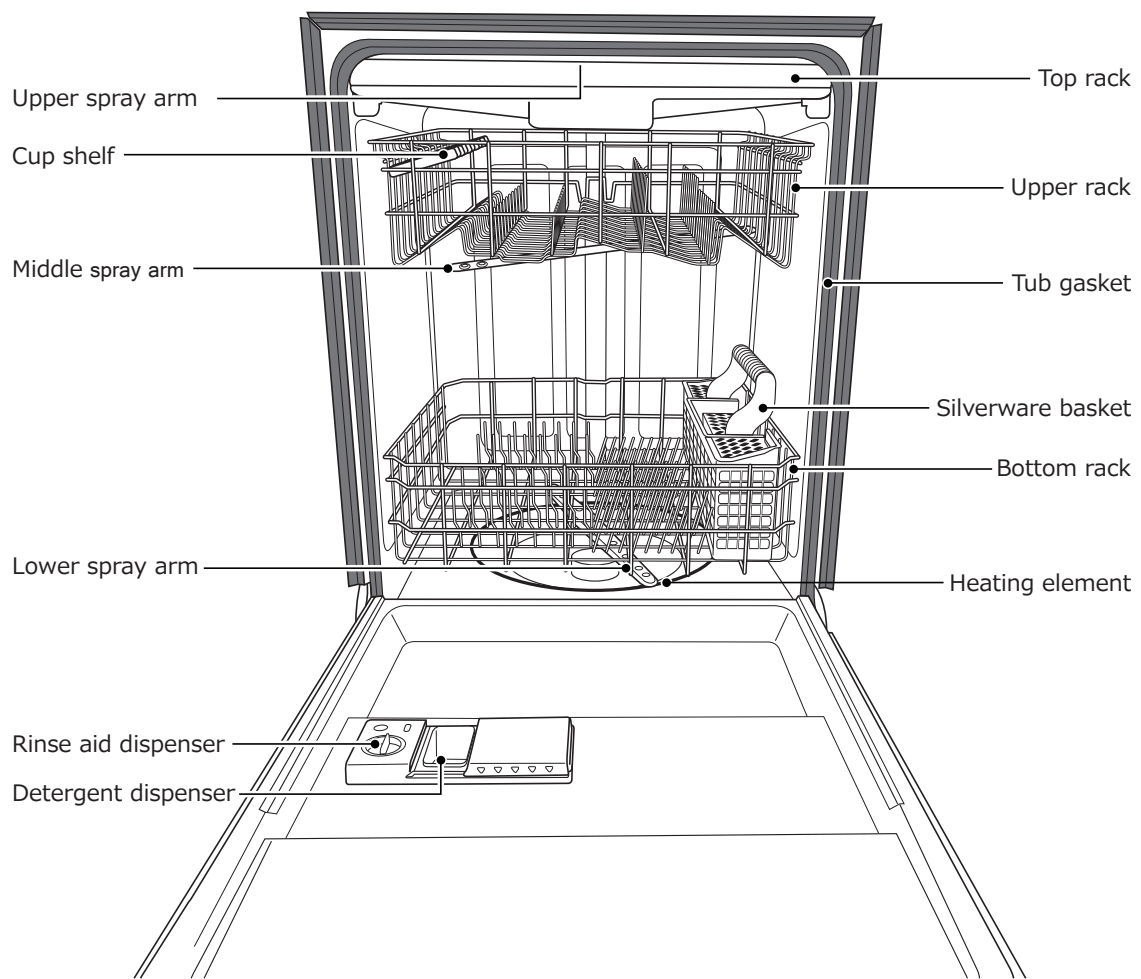

OPERATING INSTRUCTIONS

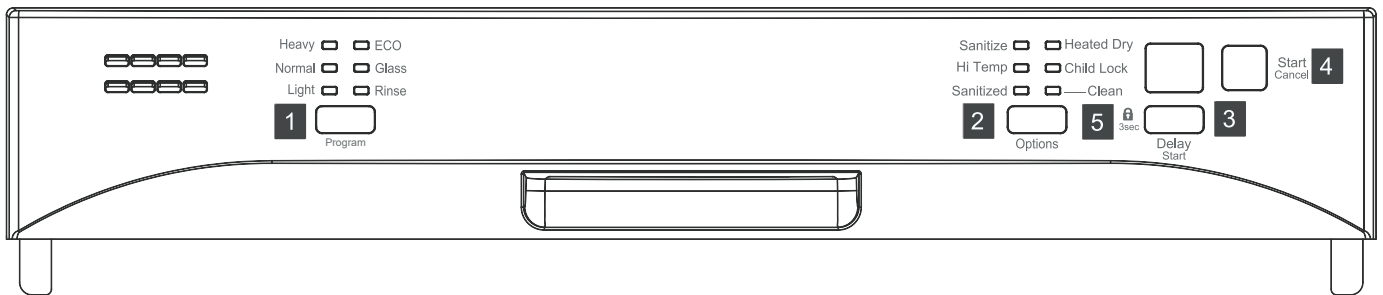

1 Program

With the dishwasher door closed, you can press the Program button to select a wash cycle. A light on the display will indicate which cycle has been selected.

Wash Cycle Selections

Heavy Wash

This cycle is for hard-to-clean, heavily soiled dishes, pots, pans, and dishes.

Normal Wash

This cycle is for regularly soiled dinner dishes or silverware.

Light Wash

This cycle is for lightly soiled and pre-rinsed dishes and silverware.

Eco

This cycle is for all items. It can determine the condition of soil on the dishes and initiate the optimal cycle to obtain the best cleaning performance.

Glass

This cycle is for delicate dishes or glasses.

Light Wash

This cycle is for pre-rinsing dishes or glasses. This is only a rinse that keeps food from drying on your dishes and reduces odor buildup in your dishwasher until you are ready to wash a full load. Do not use detergent.

2 Options

When the wash cycle has been selected, you can choose the option by pressing the "Options" button.

About the Options

Sanitize

To sanitize your dishes and glassware, select the Sanitize option. When selected, the light above the pad will turn on and remain on until end of cycle. The water temperature in the final rinse will be raised. The option is available in Heavy, Normal, Light and ECO wash.

Hi-Temp Wash

This option can increase the water temperature in the main wash and rinse. This increase in water temperature helps the dishwasher detergent remove food, grease and soil from dishes more effectively. The option is available in Heavy, Normal, Light and ECO wash.

Heated Dry

This option is available on all cycles except rinse only. The Heated Dry option, in combination with rinse aid, will enhance drying performance. You can turn this option off by pressing Heated Dry so the light goes off during the period of the washing.

OPERATING INSTRUCTIONS

3 Delay Start

To delay the start of a selected cycle, press the Delay Start button until the desired delay time shows in the LED indicator. This allows you to automatically start your dishwasher for a 1 to 24 hour delay.

To cancel the Delay Start option and begin the cycle before the delay period is over, press the Start/Cancel button.

4 Start/Cancel

Push door firmly closed. The door latches automatically. Select the wash cycle and options desired, the indicator light above the button will turn on. To start, press the Start/Cancel button once, the light will turn on and the wash action begins. To cancel when a cycle is running, press Start/Cancel button once and the dishwasher will start a 60 second drain and then shut off. At the end of the drain, you can select the desired cycle.

When you want to load more dishes or pause the dishwasher while it is already running, make sure to open the door slowly and carefully, as there is a possibility of injury from the hot steam inside the dishwasher. You can add more dishes before the main wash starts. Open the door and check the detergent dispenser. If the main wash section of the detergent dispenser is still closed, you can add items. If the door is opened while the dishwasher is running, a safety mechanism is activated and stops the cycle.

5 Child Lock

You can lock all controls to prevent children from accidentally changing the dishwasher cycle or starting the dishwasher.

Press and hold the Delay Start button for 3 seconds, the lock graphic light will turn on.

To unlock the control, press and hold the Delay Start button for 3 seconds, the lock graphic light will turn off.

Indicator Light

Sanitized

When the "sanitize" option is selected, the temperature of the water will reach a maximum of 70°C (158°F).

Certified residential dishwashers are not intended for licensed food establishments. The sanitize cycle is NSF certified.

Warning: The sanitize option is available with Heavy, Normal, Light and ECO cycle.

Clean

The clean light will turn on at the end of the cycle.

Status Window

01-24

If the Delay Start option is selected, the number of delay start hours shows in the Status Window. If the dishwasher is working and the wash cycle time is more than an hour, the number of hours and left, shows alternately, in Status Window.

CL

Flashes once the program has been entered and the Start/Cancel key is pressed. It also flashes if the door is opened during a wash cycle. Close the dishwasher door to begin or continue a wash cycle.

MINUTES

Number of minutes left in a cycle (0-59 or 1H-2H). It shows hours and minutes alternately.

Note : In standby mode, if there is not any button operation or door opening and closing operation for 3 minutes, the dishwasher will enter a power-saving state, all displays will be turned off. If there is any button operation or door opening and closing operation, the display will be turned on, and the time will be counted again for 3 minutes.

OPERATING INSTRUCTIONS

NOTE

The remaining time could suddenly increase or drop several minutes. This means the Smart Sensor has checked the soil level and determined if additional water fills are needed, or water fills can be deleted.

Program	Description of Cycle	Detergent(g)	Water(L) gal(L)	Running time (min)	Running time with Hi temp(min)	Running time with Sanitize (min)
Heavy	Pre Wash	0/9.9	6 gal (22.8L)	140	150	170
	Pre Wash					
	Wash 118°F(48°C)					
	Rinse					
	Rinse					
	Rinse 136°F(58°C)					
Normal	Drying	AHAM/CU Test : 0/19.9 DOE Test : 0/9.9 CU Test : 15/15	2.9-6 gal (10.8~23.0 L)	105~135	130	135~165
	Pre Wash					
	Auto 108-118 °F (42~48°C)					
	Rinse 122-136°F (50~58°C)					
Light	Drying	0/9.9	3-5.1 gal (11.4~19.3 L)	115~120	125~130	145~150
	Pre Wash					
	Auto 108°F(42°C)					
	Rinse 136°F(58°C)					
ECO	Drying	0/9.9	5.1 gal (19.3 L)	105	115	150
	Pre Wash					
	Pre Wash					
	Wash 104°F(40°C)					
	Rinse					
	Rinse 122°F(50°C)					
Glass	Drying	0/9.9	5.1 gal (19.3 L)	120	/	/
	Pre Wash					
	Pre Wash					
	Wash 118°F(48°C)					
	Rinse					
	Rinse 136°F(58°C)					
Rinse	Drying	0	2.1 gal (8.0 L)	20	/	/
NOTE: The NSF certified is Normal/Auto Cycle with the sanitize option selected. The CU test is Normal Cycle with the hi temp option selected.						



PREPARING AND LOADING DISHES

Dish Preparation


Scrape away large pieces of food, bones, pits, toothpicks, etc. The continuous filtered wash system will remove the remaining food particles. Burnt-on foods should be loosened before loading. Empty liquids from glasses and cups.

Food such as mustard, mayonnaise, vinegar, lemon juice and tomato based products may cause discoloration of stainless steel and plastics if allowed to sit for a long period of time. Unless the dishwasher is to be operated immediately, it is best to rinse off this type of food soils.


If the dishwasher drains into a food disposal, be sure the disposal is completely empty before starting the dishwasher.

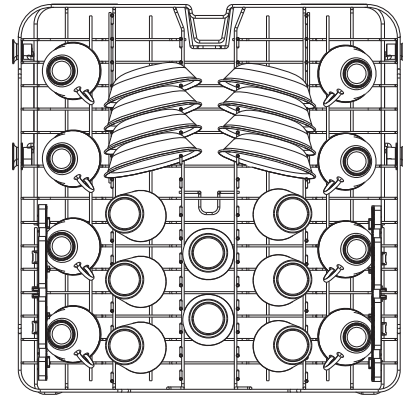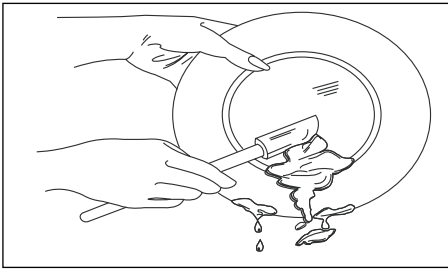

8 place settings standard loading pattern
(For best washing performance, the upper rack should be in the raised position.)

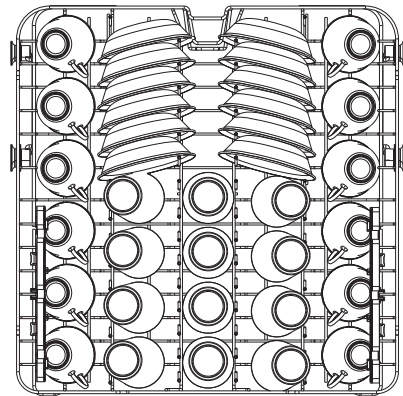

12 place settings standard loading pattern

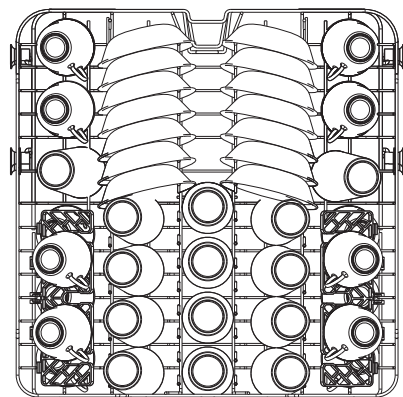

14 place settings standard loading pattern

Loading the Top Rack

The upper rack is designed for cups, glasses, small plates, bowls and plastic items marked "dishwasher safe" etc.

For best results, place the bowls, cups, glasses, sauce pans with soiled surface, facing down or toward the center. Tilt slightly for better drainage.



Make sure the loaded dishes do not interfere with the rotation of the middle spray arm, which is located at the bottom of the upper rack. (Check this by rotating the middle spray arm by hand.)

PREPARING AND LOADING DISHES

Loading the Bottom Rack


The bottom rack is designed to load plates, soup bowls, plates, saucers and cookware. The adjustable rack space will allow you to load at maximum 13 inch items.




Large items should be placed along the edge so they do not interfere with the middle spray arm rotation, and make sure they do not prevent the detergent dispenser from opening.

Large items should be turned so that the inside faces downward, and make sure these items do not interfere with the lower spray arm rotation.


The fold-down tines in the bottom rack make it easy to load those extra large and hard-to-fit items. The tines may be left up for normal use or folded down for more flexible loading. Fold down for more space to load large pots or pans.

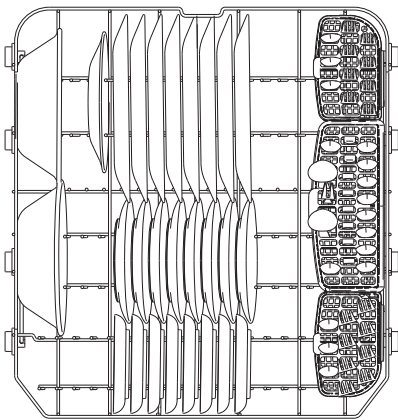

8 place settings standard loading pattern

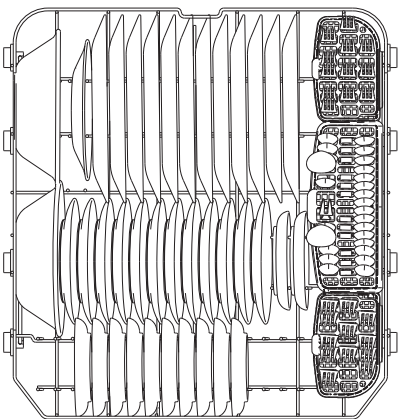

12 place settings standard loading pattern

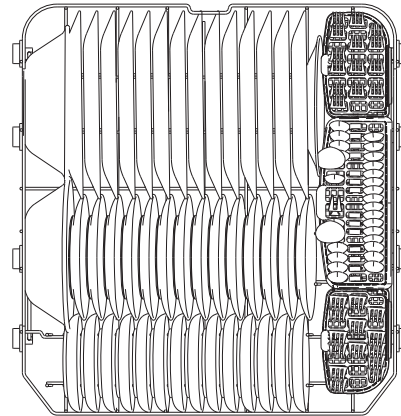


14 place settings standard loading pattern

Loading the Silverware Basket

The silverware basket can be divided into three separate modules that can be used in both upper and lower racks

1. spoons
2. knives
3. salad forks
4. forks
5. large spoons
6. large forks

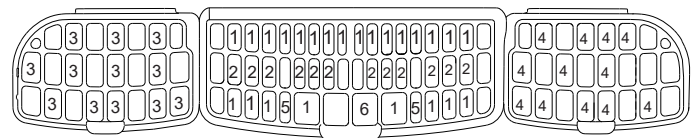

⚠ WARNING!

Do not let any item extend through bottom.



Be sure nothing protrudes through the bottom of the basket or rack to block the lower spray arm.

Adding a Dish

To add or remove items after wash cycle starts:


- 1 Open the door slightly and wait a few seconds until the wash action stops before completely opening.
- 2 Add the item.
- 3 Close the door firmly to latch and the cycle will automatically resume.

PREPARING AND LOADING DISHES

Loading the Top Rack

You can place the items in the top rack randomly or in an orderly fashion.

The image below (just the sketch map for location) shows how to load the top rack for 14 place settings:

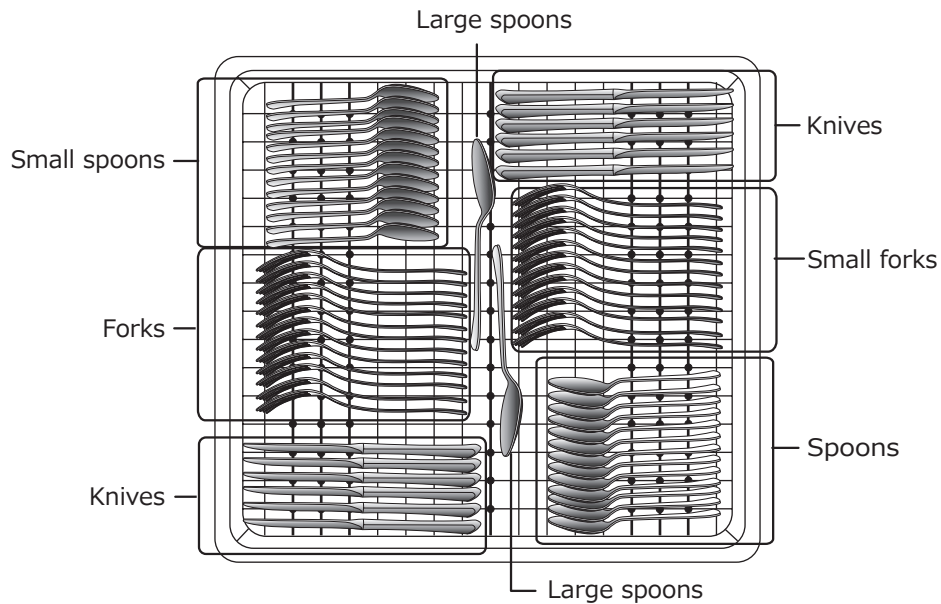


DISHWASHER DISPENSER & DETERGENTS

Filling the Detergent Dispenser

Rinse aid greatly improves drying and reduces water spots and filming. Without rinse aid, the dishes and dishwasher interior will have excessive moisture. The Heated Dry option will not perform as well without rinse aid. The rinse aid dispenser, located next to the detergent cup, automatically releases a measured amount of rinse aid during the last rinse.

If spotting and poor drying is a problem, increase the amount of rinse aid dispensed by rotating the dial to a higher number. The dial is located under the dispenser cap.


If the rinse aid is low, the Rinse Aid light is illuminated at the beginning and end of the cycle indicating that it is time to refill.

 **Your dishwasher is designed to use liquid rinse aid. The use of rinse aid greatly improves drying performance after the final rinse. Do not use a solid or bar-type rinse aid. Under normal conditions, the rinse aid will last approximately one month, try to keep it full, but do not over fill.**

1. Rinse agent removes spots and prevents new film build up on your dishes, glasses, flatware, cookware and plastic.


Filling the Dispenser

- 1 Try to keep it full, but do not over fill.
- 2 Turn the dispenser cap to the left and lift it out.
- 3 Add rinse agent until the indicator window looks full.
- 4 Clean up any spilled rinse agent with a damp cloth.
- 5 Replace the dispenser cap.

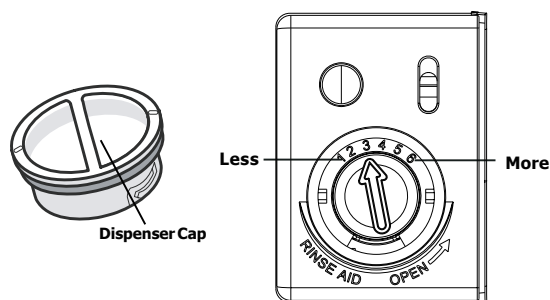


Filling the Detergent Dispenser


1. Push the dispenser cover latch downwards and open it .

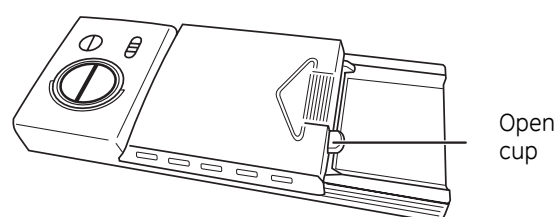

2. Add the detergent to the main wash compartment.

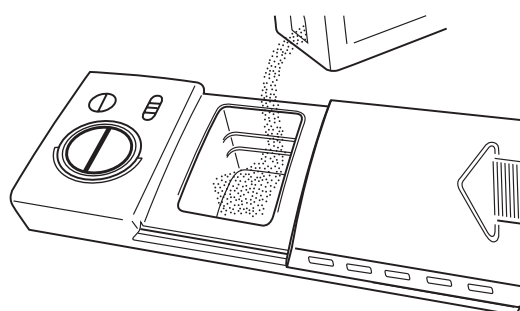

3. After pouring the detergent into the compartment, close the lid, first pushing (1) and then pressing on it (2) until you hear the click.

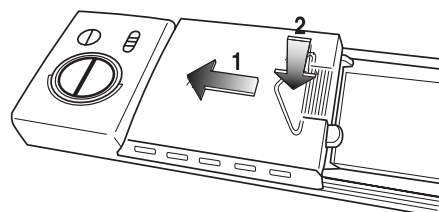

CARE AND CLEANING


Clean the Stainless Steel Inner Door and Tub

The tub is made of stainless steel, it will not rust or corrode if the dishwasher becomes scratched or dented.

Clean the Cylinder Filter

The cylinder filter is designed to collect some big items such as broken glass, bones and pits. The cylinder filter needs to be cleaned to maximize wash performance.


Remove the lower rack, rotate the cylinder filter as shown, lift it out, empty and clean it by rinsing it under running water and replace.

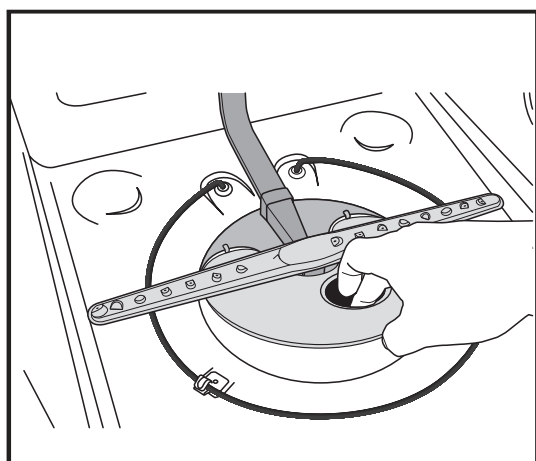

Because hard water chemicals will clog the spray arm jets and bearings, it is necessary to clean the spray arms regularly. Wash the arms in soapy, warm water and use a soft brush to clean the jets. Replace them after rinsing thoroughly.

To remove the **upper or middle spray arm**, unscrew the nut clockwise.

To remove the **lower spray arm**, pull upward.

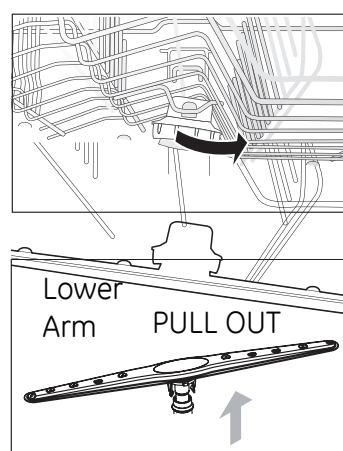

Clean the spots on the steel inner door and tub with a damp, nonabrasive cloth.



WARNING

Burn Hazard





Allow the heating element to cool before cleaning the interior.

Failure to do so can result in burns.

CARE AND CLEANING

Clean the Fine Filter

Take out the cylinder filter and remove the fine filter from the bottom of the dishwasher tub. To remove the fine filter, you must first remove the bottom spray arm as shown below. Flush the fine filter by holding it under running water and replace.

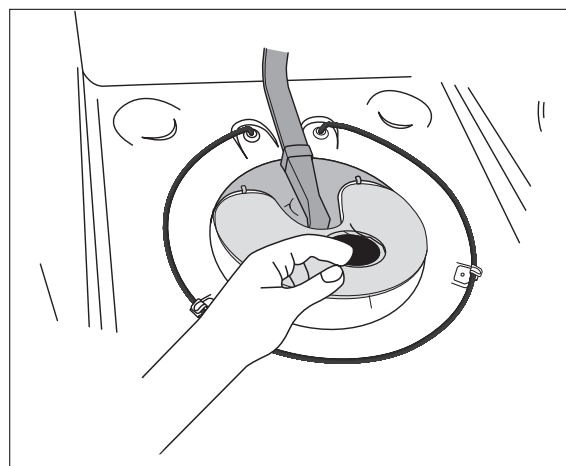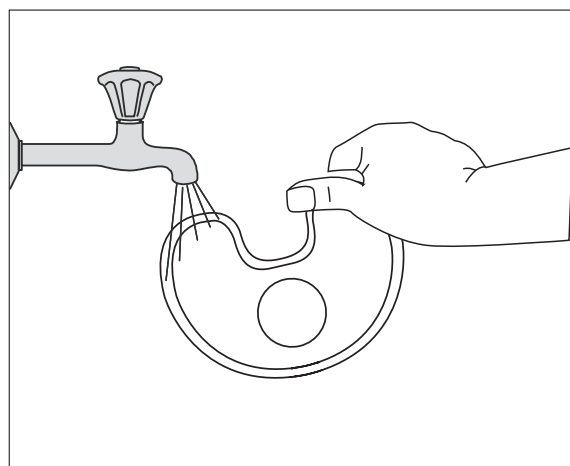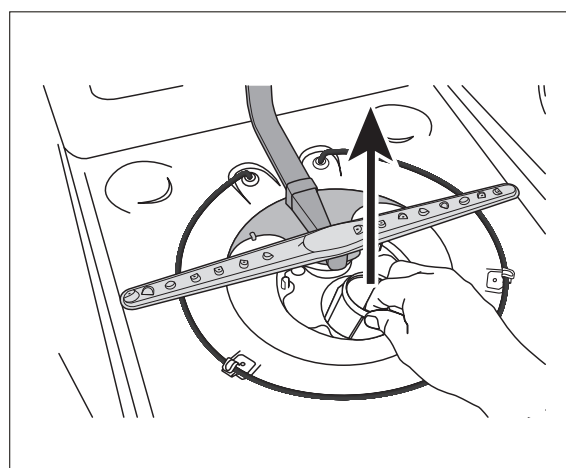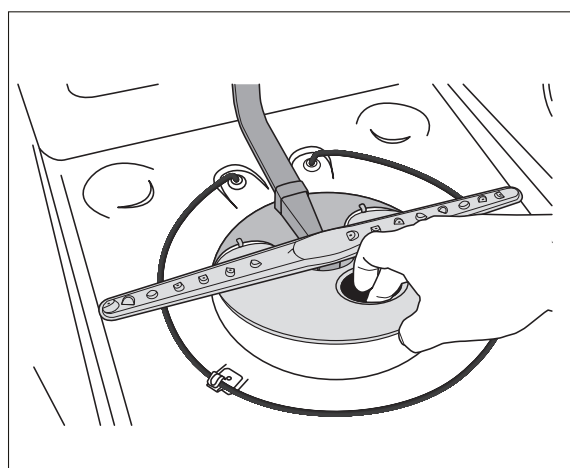

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher won't start	Door may not be closed properly	Shut the door completely and make sure it is latched
	Power supply or power line is not connected	Check and connect the power supply
	Delay Start option has been selected	Refer to Delay Start section in this manual to reset
	Child Lock activated (selected models)	Deactivate the child lock, refer to the child lock section in this manual
Dishwasher beeps at the end of the cycle	It indicates the wash cycle finished, the dishwasher will beep	
Rinse Aid light on	The rinse aid level is low	Add rinse aid
Dishwasher operates too long	The dishwasher is connected to cold water	Check the dishwasher, make sure it is connected to the hot water supply
	The cycle time will vary due to the soil	When heavy soil is detected, the auto, normal cycle will automatically increase the cycle time
	The sanitize option is selected	When the sanitize option is selected, the cycle time will be increased to meet the sanitized temperature request
Dishes are not clean enough	Water pressure is temporarily low	Use your dishwasher when the water pressure is normal
	The inlet water is low	Make sure the dishwasher is connected to the hot water supply Try not to use your dishwasher when hot water is being used elsewhere in the house
	Dishes are loaded too close together Improper use of detergent	Load the dishes again as the manual introduced Add detergent depending on the water hardness and the cycle you chose. Use fresh detergent.
	The selected cycle is not suitable for food soil condition	Choose another cycle for longer washing time
	Spray arms are blocked by some items	Make sure the spray arm is rotated fluently
Dishes are not drying enough	Detergent dispenser is empty	Fill rinse aid dispenser or increase the amount of rinse aid.
	Improper loading of dishes	Load the dishes again as the manual introduced
	The cycle you chose did not include the drying.	Choose the proper cycle with drying
Spots and filming on dishes	Water hardness is too high	For extremely hard water, install a water softener
	Improper loading of dishes	Load the dishes again as the manual indicates
	Old or damp powder rinse aid is used	Use fresh rinse aid
	Rinse dispenser empty	Add rinse aid to the dispenser
Etching	Using too much detergent	Use less detergent if you have soft water
	The inlet water temperature exceeds 150 °F	Lower the inlet water temperature
Detergent left in dispenser cup	Detergent may be too old	Use fresh detergent
	Spray arm is blocked	Load the dishes, making sure the spray arms are not blocked.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Detergent dispenser will not shut	Improper operation of the detergent cover	Add the detergent and rinse aid as indicated by the manual
Water remains in the dishwasher	Previous cycle has not finished or has been interrupted	Select the proper cycle as introduced by the manual
Dishwasher does not drain properly	Drain is clogged	Check the air gap (if so equipped). Make sure that the disposal is empty (if so connected).
	Drain hose is kinked	Make sure the drain hose is properly connected to the sink
Suds in the tub	Improper detergent is used	Make sure to use only the automatic dishwasher detergent
Dishwasher leaks	Excessive suds caused by using the improper detergent	Make sure to use only the automatic dishwasher detergent
	Dishwasher is not level	Leveling the dishwasher (see the installation manual)
Black or gray marks on dishes	Aluminum utensils have rubbed against dishes	Choose a higher cycle Make sure the inlet water is no less than 120°F
Stained tub interior	Coffee and tea soil	Use a spot cleaner to remove the soil
	Reddish stain	Some food with a red hue will cause this, use of the rinse only cycle right after loading will decrease the staining
Noises	Detergent cup opening/drain pump sound	This is normal
	A hard object has entered the wash module. When the object is ground up, the sound should stop.	If the noise persists after a complete cycle, call for service.
Dishwasher won't fill	Water valve is turned off	Check if the water valve is turned on
	Door latch may not be properly sealed	Make sure the door is closed

Error Codes

When some malfunctions come on, the appliance will display error codes to warn you:

Codes	Meanings	Possible Causes
E1	Longer inlet time.	Faucets are not opened, or water intake is restricted, or water pressure is too low.
E4	Overflow.	Some element of dishwasher leaks .

⚠ WARNING!

- If overflow occurs, turn off the main water supply before calling for service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.

WARRANTY

Element Appliance Limited Warranty

(the “Products” or “Product” when referencing a singular product herein)

This Product (including any accessories included in the original packaging) as supplied and distributed in new condition, is warranted by Element Appliance Company, LLC (“Element”) to the original customer who purchases the Product from an authorized Element retailer (the “Original Customer” or “you”) against defects in material and workmanship under proper use, maintenance, and care according to the owner’s manual, warnings, and instructions accompanying the Product (“Warranty”) as follows:

* **PLEASE NOTE** – Proof of purchase evidencing the date of purchase by the Original Purchaser from an authorized Element retailer (“Valid Proof of Purchase”) is **required** for all Warranty service. The express Warranty set forth herein is subject to all terms and conditions set forth below.

1. WARRANTY SERVICE:

A. ONE-YEAR WARRANTY: Except as provided in subpart 1.B below, for a period of **one (1) year** from the date of purchase by the Original Customer (the “Warranty Period”), if the parts or components covered by this Warranty are determined by Element or Element’s authorized service provider to be defective in material or workmanship, Element will, at its sole and absolute discretion and option: (i) repair the defective part or component at no charge to the Original Customer, (ii) replace the defective Product with a new Product of similar or better quality, at no charge to the Original Customer, or (iii) refund the documented purchase price paid by the Original Customer (excluding tax) to the Original Customer upon return of the defective Product as directed by Element. After the Warranty Period expires, the Original Customer must pay for all parts, components, shipping and handling, labor, and replacement costs associated with the Product or any part or component thereof, regardless of any defects in the Product or any part or component thereof.

B. LIMITED EXTENDED WARRANTY THROUGH PRODUCT REGISTRATION: If and only if the Original Customer registers the Product at www.elementelectronics.com within **ninety (90)** days of the date of purchase by the Original Customer, then the Warranty Period discussed in subpart 1.A. above shall be extended an additional one (1) year to a new Warranty Period equaling **two (2) years** from the date of purchase by the Original Customer. If the Product is not registered as provided for in this subpart 1.B, then the standard one-year Warranty Period set forth in subpart 1.A shall apply.

C. TIMING AND PROCEDURE: Before Warranty service can commence, the Original Customer must contact either (i) the retailer from whom the Original Customer purchased the Product, or (ii) Element directly, in either case for problem determination and service procedures. Valid Proof of Purchase evidencing that the Product is within the Warranty Period **MUST** be presented by Original Customer in order to obtain the requested Warranty service. Please have your model and serial number available, along with your date of purchase of the Product. To remain eligible for Warranty service, Original Customer may not return the Product or any part or component thereof to the retailer or Element without Element’s prior written consent.

2. EXCLUSIONS AND LIMITATIONS TO WARRANTY SERVICE

The Warranty covers manufacturing defects in materials and workmanship of the Product encountered in the normal, non-commercial use of the Product, and **does not cover** (a) damages or malfunctions resulting from improper or unreasonable use or maintenance, abuse, negligence, failure to follow instructions contained in any written materials that accompany the Product, deterioration by reason of excess moisture, corrosive atmosphere, lightning, power surges, connections to improper voltage supply, unauthorized alteration, or other external causes such as extremes in temperature or humidity, modifications, scratches or discoloration; (b) improper or incorrectly performed repairs by service providers not authorized by Element; (c) transportation, shipping, delivery, pickup, insurance, installation, or set-up costs; (d) ordinary wear and tear, cosmetic damage, or damage due to acts of nature, including but not limited to, water, floods, wind, storm, tornado, earthquake, or fire, or due to damage caused by extraordinary impact events, such

as dropping, crushing, demolition or other extraordinary damage;

(e) commercial use of the Product, or use of the Product for anything other than single-family household or residential use; or (f) modification of the Product or any part of the Product.

This Warranty is made to the Original Customer only and does not cover Products sold AS IS or WITH ALL FAULTS. The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the United States, and only applies to Product if it was purchased and serviced in the United States. The addition of equipment or features to the Product that are not manufactured or recommended by Element could affect the intended function of the Product, and therefore may void the Warranty. Furthermore, the exposure of the Product to chemicals, heat, cold, humidity, or other elements can affect the Product components, and therefore, the Warranty does not cover discoloration, fading, cosmetic changes, rust, or any damages or failure related to any such items. The Warranty is contingent upon the proper use, maintenance, and care of the Product. The Warranty may be void if the Product has been used in a manner contradictory to, or in violation of, the terms of the user's manual, warnings, or instructions accompanying the Product.

THIS WARRANTY IS MADE IN LIEU OF AND SUPERSEDES ALL OTHER WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR GENERAL USE, WHETHER EXPRESS, IMPLIED, COLLATERAL, STATUTORY, OR PROVIDED BY COMMON LAW, THE UNIFORM COMMERCIAL CODE, OR OTHERWISE. ELEMENT FURTHER DISCLAIMS ALL WARRANTIES AFTER THE END OF THE WARRANTY TERM DEFINED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY OTHER PERSON, FIRM, OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON ELEMENT. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE, AT ELEMENT'S SOLE DISCRETION, ARE THE EXCLUSIVE REMEDIES OF THE CUSTOMER.

ELEMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT. THESE INCLUDE, BUT ARE NOT LIMITED TO, ANY DAMAGES IN THE FORM OF LOST PROFITS, LOSS OF USE, LEGAL FEES, ECONOMIC LOSS, PERSONAL INJURIES, OR ANY OTHER DAMAGES CAUSED BY CIRCUMSTANCES BEYOND THE CONTROL OF ELEMENT. NOTWITHSTANDING THE FOREGOING, ELEMENT'S AGGREGATE LIABILITY TO ANY CUSTOMER SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CUSTOMER WHO PURCHASED THE PRODUCT, AND IS NOT TRANSFERRABLE. NO PERSON IS AUTHORIZED TO ALTER, EXTEND, OR WAIVE THIS WARRANTY OR ANY OF ITS TERMS OR CONDITIONS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on warranties, so the above limitations or exclusions may not apply to you. This Warranty gives you specific rights, and you may have other rights, which vary from state to state. The exclusions and limitations to the Warranty apply to the maximum extent permitted by law and unless restricted or prohibited by law. Where any term of this Warranty is prohibited by applicable law, it shall be null and void, but the remainder of this Warranty shall remain in effect.

PLEASE DIRECT ALL CORRESPONDENCE TO:

Element Appliance Company, LLC
customerservice@elementelectronics.com
888-842-3577
<https://elementelectronics.com/appliances>



CONTACT US:

Element Appliance Company, LLC. Customer Service

Customer Support: 1 888-842-3577

customerservice@elementelectronics.com

© 2022 Element Appliance Company, LLC. All rights reserved.

Element Appliance Company and E Element are trademarks of Element Brand Holding, LLC

392 Hwy 321 Bypass South, Winnsboro, SC 29180