


Ultimate600™ Cordless Cleaner

Instruction book Mode d'emploi Manual de insctrucciones

EHVS65S1AD EHVS65S1AO EHVS65W1AW

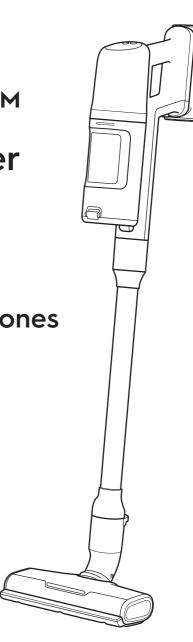

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury

MARNING To reduce the risk of fire, electric shock, or injury:

- · Do not use outdoors or on wet surfaces.
- Do not operate the vacuum cleaner or charger if it has been damaged in any way. If cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- To avoid excessive heat and damage to the unit or batteries, do not operate the vacuum cleaner while charging.
- · Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- · Only use the charging adapter that was provided with the product.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Do not handle the charger or vacuum cleaner with wet hands.
- DO NOT MUTILATE OR INCINERATE BATTERIES AS THEY WILL EXPLODE AT HIGH TEMPERATURES.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. (This advice is considered correct for conventional NiMh, NiCd, lead acid and lithium-ion cell types. If this advice is incorrect for a cell design that differs from these, then the correct advice may be substituted.)
- While there is no shock hazard from electrical terminals located on the vacuum, a burn could result from metal objects being inserted into the terminal areas. Vacuum cleaner terminals should always be kept free of objects.
- This vacuum cleaner creates suction and has a revolving brushroll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit would accidentally be turned on.
- · Use extra care when cleaning on stairs.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use on areas where they may be present.
- Do not expose the appliance to fire or excessive temperature. Exposure to fire or temperature above 265 °F may cause explosion.
- · Locate charger indoors in a cool, dry area, not exposed to weather to avoid electrical shock and/or cleaner damage.
- · Keep your work area well lighted.
- · Unplug electrical appliances before vacuuming them.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained
- Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- · Always turn off this appliance before connecting or disconnecting motorized nozzle.

To protect the motor, battery and electronics the product should not be operated in:

- · An ambient temperature below 41 °F or exceeding 95 °F.
- · A humidity level below 20 % or exceeding 80 % (noncondensing).


If the product is stored for an extended time period (without usage or continuous charging), we recommend to store the product

- · indoors and in temperature between 41 °F to 95 °F, and at a humidity between 20 % to 80 %.
- · with the batteries charged at 50 % capacity or more.
- Do not pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- · Turn off all controls before unplugging.

↑Caution:

Follow Manufacturer's instructions. Risk of Fire and Burns. Do Not Open, Crush, Heat Above 140 °F or Incinerate

SAVE THESE INSTRUCTIONS
Household use only!

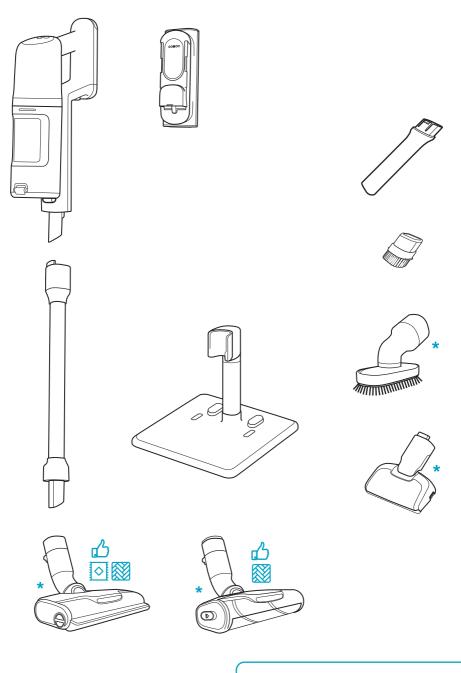











Product Assembly & Charging / Assemblage et chargement du produit / Armado y carga del producto

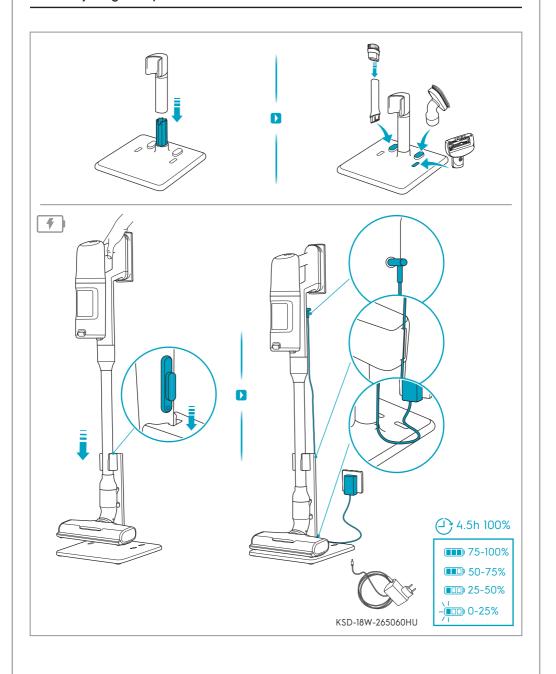


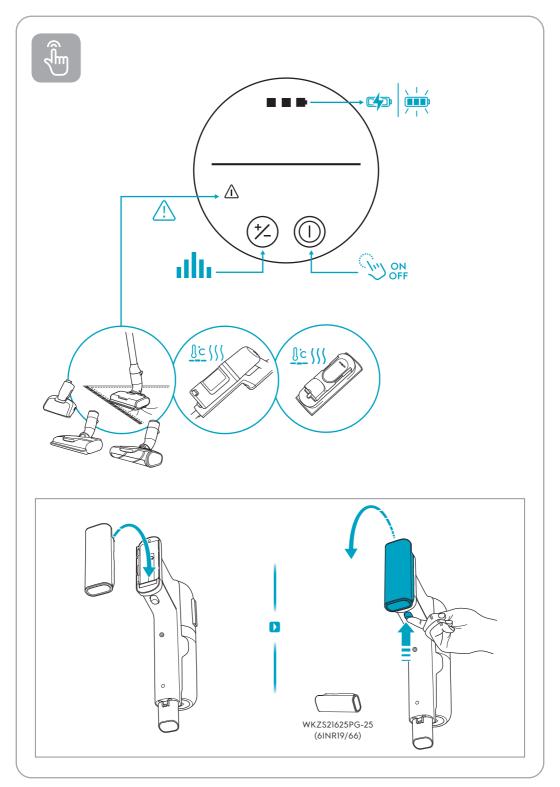


Accessories / Accessoires / Accesorios

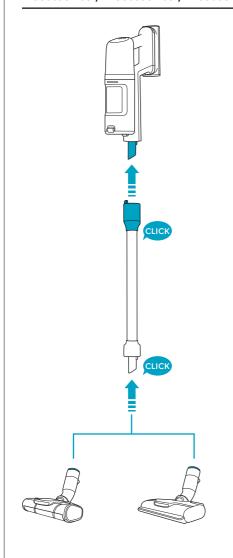


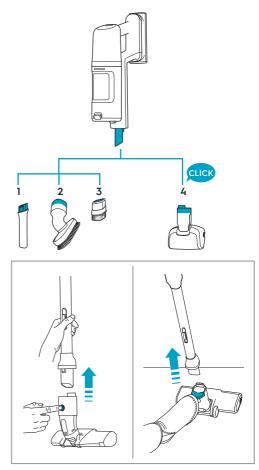

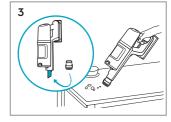

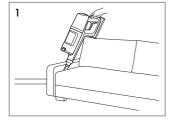

 


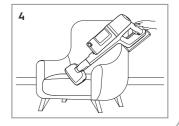










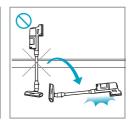

 


 
















Dust Bin & Filter Maintenance Entretien du récipient et du filtre à poussière Mantenimiento del contenedor de basura y filtro

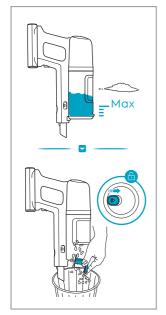

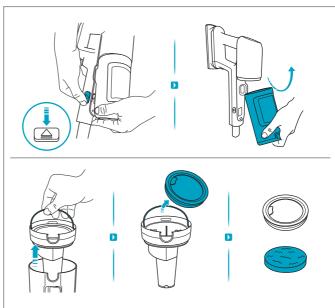


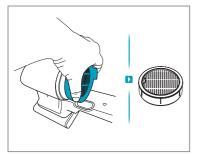




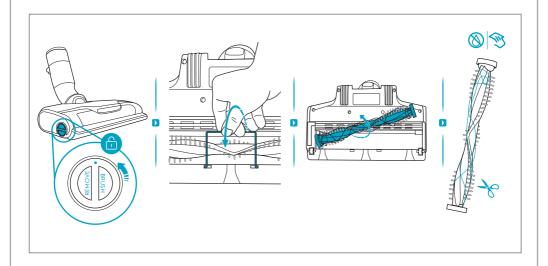

Hard Floor Nozzle Maintenance Entretien de la buse pour plancher de bois Mantenimiento de la boquilla para pisos duros

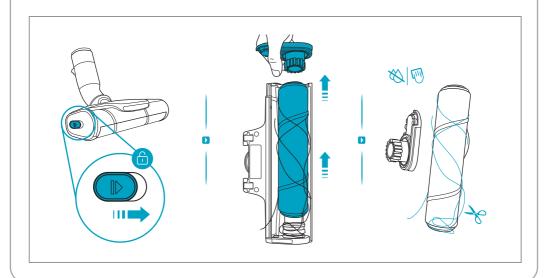

PetPro+ Nozzle Maintenance Entretien de la buse PetPro+ Mantenimiento de la boquilla PetPro+

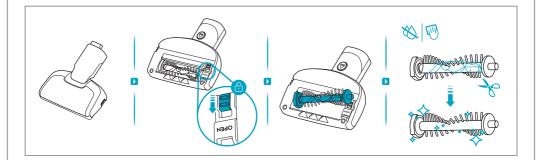

TROUBLESHOOTING

Problem	Cause	Solution		
The product stops or doesn't start	The battery is empty (last LED blinks)	Charge the vacuum cleaner.		
	Water / Liquid has been sucked into the product.	Stop the product and let it dry for 48h. Do not put the product in the charging stand! If the product is still not working anymore contact an authorized Electrolux service center. Note: Damage to the motor caused by water or liquids is not covered by the warranty.		
Loss of performance	Nozzle does not pick up dust or dirt as expected	Make sure to use correct nozzle for each floor type. Hard floor - bristle nozzle, fluffy nozzle Carpet - bristle nozzle		
	Nozzle brush or fluffy roll is blocked with hair and dirt.	Remove floor nozzle and clean brush roll according to instruction manual		
	Tube and/or nozzle neck is blocked	Check if any clogging happened in nozzle/tube		
	Dust bin may be full or filters has been clogged or are dirty	Empty dust bin and wash filters according to instruction manual. If need to replace and buy new filters (www.electrolux.com)		
Brush roll doesn't rotate	Brush roll stops when user detaches the previous nozzle & changes to another nozzle while the vaccum cleaner is still on. This is a protection mode.	Turn off cleaner and re-start "ON" button to activate the brushroll spinning.		
Product is not charging / No charging indication on hand unit display	Product is not placed correctly in the charging stand and tube is not in shortest posistion. Cleaner is falling down from charging stand.	Make sure that the contact plates on the back side of vaccum cleaner are in contact with contact plates on charging stand.		
	Charger plug is not plugged in	Make sure charger plug is connected to charging stand socket and charging adpater is plugged into wall socket.		
	Charging will not occur if room temperature is below 41 °F or over 95 °F to protect battery and electronics	Store/charge the product indoor and in room temperature between 41-95 °F		
	Hand unit display is dark and all LED are off after battery pack is fully charged	Take out cleaner from charging stand, press the on/off button or +/- speed button to view Battery level indication. Put cleaner back in charging stand.		
	Battery Pack temperature is too high (-113°F)/low (-41°F), charging not yet started	Put appliance at ambient temperature condition, wait until temperature cool down/ raised up		
Filter icon appear on hand unit display	Filter indication that filters needs to be cleaned	Clean filters according to instruction manual. After cleaning press ON/OFF button for 3 sec and filter icon will disappear. If need to replace and buy new filters (www.electrolux.com)		
Warning triangle appear on hand unit display	The product may be overheated in motor or battery pack	Let product rest and cool down		
	Nozzle or tube can be clogged	Check if any clogging happened in nozzle/tube		

Problem	Cause	Solution		
No charging indication on charge stand	Hand unit battery pack is not fully charged and will not start charging extra battery pack on charging stand	This can only happen to products with possible to charge in the base plate of charging stand.		
	until hand unit battery pack is fully charged (up to 2.5 hours)	Battery pack on hand unit will always start charging first and then charging will start for the battery pack in charging stand base and the LED indication should start to light up.		
	Battery pack not fully inserted	Take out battery pack and insert again		
	Battery Pack temperature is too high (-113°F)/low (-41°F), charging not yet started	Put appliance at ambient temperature condition, wait until temperature cool down/ raised up		
	Battery pack is broken, need to be replaced.	Contact Electrolux service center. If need to replace and buy new battery pack (www.electrolux.com)		
	Wrong battery pack is being used for this product.	Make sure correct battery pack is being used		
Charging is taking more than longer than 4.5 hours	Room temperture is over 95 °F	Charging time will be longer if temperature is high, which is normal, Store/charge product in a normal room temperature		
Headlights on floor nozzle do not work	Brush roll is jammed	Remove brush roll and clean brush roll from hair and fibers.		

Limited Warranty

Your appliance is covered by a two year limited warranty. For two years from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

Exclusions

This warranty does not cover the following:

- 1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
- 2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
- 3. Rust on the interior or exterior of the unit.
- 4. Products purchased "as-is" are not covered by this warranty.
- 5. Products used in a commercial setting.
- 6. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
- 7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
- 8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
- 9. Service calls to repair or replace appliance light bulbs, air filters, other consumables, or knobs, handles, or other cosmetic parts.
- 10. Pickup and delivery costs; your appliance is designed to be repaired in the home.
- 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
- 12. Damages to the finish of appliance or home incurred during transportation or installation, including but not limited to floors, cabinets, walls, etc.
- 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

Web: electrolux.com (USA); electrolux.ca (Canada) Phone: (800)-896-9756

ORDER GENIUNE ACCESSORIES AND REPLACEMENT PARTS COMMANDE ACCESSOIRES ET PIÈCES DE RECHANGE D'ORIGINE PEDIDO ACCESORIOS Y REPUESTOS LEGÍTIMOS



electrolux.com (USA) electrolux.ca (Canada)



(800)-896-9756



Model index:

EHVS65S1AD EHVS65S1AO EHVS65W1AW

Part No.:

ELPAVAF89A

Description: Electrolux Ultimate600™ and 800™

Vacuum Filter Set





USA (800)-896-9756 Electrolux Appliances North America 10200 David Taylor Drive Charlotte, NC 28262 Canada (800)-896-9756 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4

