



**BOSCH**



Register your  
appliance and join  
the Bosch family of perks:  
**Enregistrez** votre  
appareil et profitez des  
avantages Bosch :  
[registerbosch.com](https://registerbosch.com)

# Dishwasher

**SGV78C53UC**

**[en-us]** Use and Care Manual



**You can find additional information and explanations online.  
Scan the QR code on the title page.**



## Table of contents

|                                                           |           |                                                       |           |
|-----------------------------------------------------------|-----------|-------------------------------------------------------|-----------|
| <b>1 IMPORTANT SAFETY INSTRUCTIONS .....</b>              | <b>4</b>  | 8.1 Initial use .....                                 | 21        |
| 1.1 Safety definitions .....                              | 4         | <b>9 Water softening system .....</b>                 | <b>21</b> |
| 1.2 General information .....                             | 4         | 9.1 Overview of water hardness settings .....         | 21        |
| 1.3 Intended use .....                                    | 4         | 9.2 Setting the water softening system .....          | 22        |
| 1.4 Restrictive use .....                                 | 5         | 9.3 Special Dishwasher Salt .....                     | 22        |
| 1.5 Grounding instructions .....                          | 5         | 9.4 Switching off the water softening system .....    | 23        |
| 1.6 Safe use .....                                        | 5         | <b>10 Rinse aid system .....</b>                      | <b>23</b> |
| 1.7 Risk to children .....                                | 7         | 10.1 Rinse aid .....                                  | 23        |
| 1.8 State of California Proposition 65 Warnings .....     | 7         | 10.2 Setting the amount of rinse aid .....            | 24        |
| <b>2 Preventing material damage .....</b>                 | <b>8</b>  | 10.3 Switching the rinse aid system off .....         | 24        |
| <b>3 Environmental protection and energy-saving .....</b> | <b>8</b>  | <b>11 Detergent .....</b>                             | <b>24</b> |
| 3.1 Saving energy .....                                   | 8         | 11.1 The correct detergents .....                     | 24        |
| 3.2 Zeolite drying ② .....                                | 8         | 11.2 Incompatible detergents .....                    | 25        |
| 3.3 AquaSensor .....                                      | 9         | 11.3 Information on Detergent .....                   | 25        |
| <b>4 Familiarizing yourself with your appliance .....</b> | <b>10</b> | 11.4 Adding Detergent .....                           | 26        |
| 4.1 Appliance .....                                       | 10        | 11.5 Detergent table .....                            | 26        |
| 4.2 Controls .....                                        | 12        | <b>12 Dishware .....</b>                              | <b>26</b> |
| <b>5 Dishwasher Cycles .....</b>                          | <b>13</b> | 12.1 Damage to glass and dishware .....               | 27        |
| 5.1 Energy Guide .....                                    | 15        | 12.2 Loading dishware .....                           | 27        |
| 5.2 Favorite ☆ .....                                      | 16        | 12.3 Removing dishware .....                          | 29        |
| <b>6 Options .....</b>                                    | <b>16</b> | 12.4 Loading patterns .....                           | 29        |
| <b>7 Features .....</b>                                   | <b>17</b> | <b>13 Basic Operation .....</b>                       | <b>30</b> |
| 7.1 Upper rack .....                                      | 17        | 13.1 Protection against unintentional operation ..... | 30        |
| 7.2 Lower rack .....                                      | 18        | 13.2 Switching on the appliance ..                    | 30        |
| 7.3 Silverware Basket .....                               | 18        | 13.3 Setting a cycle .....                            | 30        |
| 7.4 Silverware drawer .....                               | 19        | 13.4 Setting options .....                            | 30        |
| 7.5 Cup shelf .....                                       | 19        | 13.5 Setting the electronic delay time .....          | 31        |
| 7.6 Flip tines .....                                      | 19        | 13.6 Starting the wash cycle .....                    | 31        |
| 7.7 Small items holder .....                              | 20        | 13.7 Interrupting the wash cycle ...                  | 31        |
| 7.8 Bottle holder .....                                   | 20        |                                                       |           |
| 7.9 Rack heights .....                                    | 20        |                                                       |           |
| <b>8 Before using for the first time ..</b>               | <b>21</b> |                                                       |           |

|                                                                                                           |           |                                                                |           |
|-----------------------------------------------------------------------------------------------------------|-----------|----------------------------------------------------------------|-----------|
| 13.8 Terminating the wash cycle ..                                                                        | 31        | 20.1 Information regarding Free<br>and Open Source Software .. | 54        |
| 13.9 Switching off the appliance ...                                                                      | 31        | <b>Recursos y ayuda en línea en es-<br/>pañol ..</b>           | <b>55</b> |
| <b>14 Basic settings .....</b>                                                                            | <b>31</b> |                                                                |           |
| 14.1 Overview of the basic set-<br>tings .....                                                            | 31        |                                                                |           |
| 14.2 Changing the basic set-<br>tings .....                                                               | 33        |                                                                |           |
| <b>15 Home Connect® .....</b>                                                                             | <b>34</b> |                                                                |           |
| 15.1 Setting up Home Connec-<br>t® .....                                                                  | 34        |                                                                |           |
| 15.2 Home Connect® settings .....                                                                         | 34        |                                                                |           |
| 15.3 Remote Start  ..... | 34        |                                                                |           |
| 15.4 Smart Start <sup>1</sup> .....                                                                       | 35        |                                                                |           |
| 15.5 Remote Diagnostics .....                                                                             | 35        |                                                                |           |
| 15.6 Data Protection .....                                                                                | 35        |                                                                |           |
| <b>16 Cleaning and maintenance .....</b>                                                                  | <b>36</b> |                                                                |           |
| 16.1 Cleaning the tub .....                                                                               | 36        |                                                                |           |
| 16.2 Cleaning agent .....                                                                                 | 36        |                                                                |           |
| 16.3 Tips on appliance care .....                                                                         | 36        |                                                                |           |
| 16.4 Machine Care <sup>Machine<br/>Care</sup> .....                                                       | 36        |                                                                |           |
| 16.5 Filter system .....                                                                                  | 37        |                                                                |           |
| 16.6 Cleaning the spray arms .....                                                                        | 38        |                                                                |           |
| <b>17 Troubleshooting .....</b>                                                                           | <b>39</b> |                                                                |           |
| 17.1 Clean drain pump .....                                                                               | 51        |                                                                |           |
| <b>18 Transportation, storage and<br/>disposal .....</b>                                                  | <b>51</b> |                                                                |           |
| 18.1 Removing the appliance .....                                                                         | 51        |                                                                |           |
| 18.2 Vacation and Storage .....                                                                           | 52        |                                                                |           |
| 18.3 Transporting the appliance ...                                                                       | 52        |                                                                |           |
| 18.4 Disposal of your old appli-<br>ance .....                                                            | 52        |                                                                |           |
| <b>19 Customer Service .....</b>                                                                          | <b>52</b> |                                                                |           |
| 19.1 Model number (E-Nr.), pro-<br>duction number (FD) and<br>consecutive numbering (Z-<br>Nr.) .....     | 53        |                                                                |           |
| 19.2 AquaStop® Plus Pledge .....                                                                          | 53        |                                                                |           |
| <b>20 Technical specifications .....</b>                                                                  | <b>53</b> |                                                                |           |

<sup>1</sup> Depending on the appliance specifications



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

Read all of the instructions carefully before using the appliance. In order to reduce the risk of fire, electric shocks and personal injuries when using the appliance, follow the basic safety precautions, including the following safety instructions.

### 1.1 Safety definitions

Here you can find explanations of the safety signal words used in this manual.



#### **WARNING**

This indicates that death or serious injuries may occur as a result of non-observance of this warning.



#### **CAUTION**

This indicates that minor or moderate injuries may occur as a result of non-observance of this warning.

#### **NOTICE**

This indicates that damage to the appliance or property may occur as a result of non-compliance with this advisory.

**Note:** This alerts you to important information.

### 1.2 General information

To reduce the risk of fire, electrical shock, or serious injury, observe the following.

- This appliance is provided with installation instructions and this use and care manual. Read and understand all instructions before using the appliance.
- Keep the manual and the product information in a safe place for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.
- Product damage and/or injury could result from the use of unqualified service technicians or non-original parts. All repairs should be performed by an authorized service provider using only original equipment factory replacement parts.
- NSF/ANSI 184 Certified residential dishwashers are not intended for licensed food establishments.

### 1.3 Intended use

Only use this appliance:

- for cleaning household dishware.
- in closed rooms in the home and with similar applications, e.g.: in canteens in stores, offices and other work environments; in agricultural businesses;



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

use by customers in hotels, motels and other typical home environments; in bed and breakfasts.

- Up to an altitude of 8200 ft (2500 m) above sea level.

### 1.4 Restrictive use

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### 1.5 Grounding instructions

This appliance must be grounded to a metal, permanent wiring system or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the dishwasher. See the Installation Instructions included with this dishwasher for more information on electrical requirements.

#### **WARNING**

Improper connection of the equipment grounding conductor can result in risk of electric shock.

- ▶ This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor. Check with a qualified electrician or authorized service representative if you are in doubt whether the appliance is properly grounded.

### 1.6 Safe use

Follow these safety instructions when using the appliance.

#### **WARNING**

To reduce the risk of serious injury, observe the following.

- ▶ Read all instructions before using this dishwasher.
- ▶ Use this dishwasher only for its intended function, which is the washing of household dishware and kitchenware rated as dishwasher safe.
- ▶ Only use detergents or rinsing agents recommended for use in a dishwasher, and keep them out of the reach of children.
- ▶ Do not abuse, sit or stand on the door or dish racks of the dishwasher.



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

### WARNING

Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. Hydrogen gas is explosive.

- ▶ Before using a dishwasher that is connected to a hot water system that has been unused for two weeks or longer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is explosive, do not smoke or use an open flame during this time.

### WARNING

To avoid risk of electric shock, observe the following.

- ▶ Only use the appliance in enclosed residential space according to the installation manual.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use any steam cleaners or high-pressure cleaners to clean this appliance. If not followed, excess moisture can accumulate.

### WARNING

The outlet opening of the Zeolite container becomes hot and can cause burns.

- ▶ Never touch the outlet opening of the Zeolite container.

### WARNING

To avoid risk of injury, when loading items to be washed, observe the following.

- ▶ Locate sharp items so they are not likely to damage the door seal.
- ▶ Load knives and other sharp utensils with their handles up to reduce the risk of cut-type injuries.
- ▶ Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- ▶ Do not operate your dishwasher unless all enclosure panels are in place.
- ▶ Do not tamper with or override controls and interlocks.

### WARNING

Highly caustic alkaline or highly acidic cleaning agents in conjunction with aluminum parts in the interior of the appliance may cause explosions.

- ▶ Never use highly caustic alkaline or highly acidic cleaning agents, in particular commercial or industrial products, in conjunction with aluminum items (e.g. grease filters of vent hoods or aluminum pans).

### WARNING

For safe care and operation of your appliance, observe the following.

- ▶ Follow the safety instructions and directions for use on the detergent and rinse aid product labels.



# IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

---

- ▶ Do not use harsh chemicals such as bleach-based products to clean your dishwasher. Some bleach-based products can damage your dishwasher and may present health hazards!
- ▶ Always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.
- ▶ To avoid floor damage and possible mold growth, do not allow wet areas to remain around or under the dishwasher.

## **NOTICE**

Water and power shut off

- ▶ It is highly recommended for the end user to become familiar with the procedure to shut off the incoming water supply and the procedure to shut off the incoming power supply. See the installation instructions or contact your installer for more information.

## **1.7 Risk to children**

Follow these safety instructions if there are children in your home.

### **WARNING**

To reduce risk of injury to children, observe the following.

- ▶ Do not allow children to play in or on the dishwasher.
- ▶ When children become old enough to operate the appliance, it is the responsibility of the parents/legal guardians to ensure the children are instructed in safe practices by qualified persons.
- ▶ Remove the dishwasher door to the washing compartment when removing an old dishwasher for service or discarding.

## **1.8 State of California Proposition 65 Warnings**

This product may contain a chemical known to the State of California, which can cause cancer or reproductive harm. Therefore, the packaging of your product may bear the following label as required by California:

### **STATE OF CALIFORNIA PROPOSITION 65 WARNING:**



### **WARNING**

Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

---

## 2 Preventing material damage

### NOTICE

Harsh chemicals such as chlorine or bleach-based cleaning agents can damage your dishwasher.

- ▶ Do not use harsh chemicals such as chlorine or bleach-based cleaning agents to clean your dishwasher.

Certain cleaning products may damage the appliance.

- ▶ Do not use a steam cleaner.
- ▶ So as not to scratch the finish on the appliance, do not use sponges with a rough surface or abrasive cleaning agents.

Avoid stainless steel polish

- ▶ Do not use stainless steel polish on an anti-fingerprint finish or a black stainless finish.

Escaping water vapor can damage cabinetry.

- ▶ When the program ends, let the appliance cool down a bit before opening the door.

Protect your appliance from the elements.

- ▶ Protect against freezing to avoid possible damage to the fill valve. Damage caused by freezing is not covered by the warranty.

Special salt for dishwashers can damage the tub due to corrosion.

- ▶ To make sure that any special salt that escapes is washed out of the tub, add the special salt to the dispenser for special salt immediately before the program starts.

Detergent may damage the water softening system.

- ▶ Only fill the dispenser of the water softening system with special dishwasher salt (i.e. special salt).  
→ *"Special Dishwasher Salt", Page 22*

Avoid dishwasher damage

- ▶ Do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.

---

## 3 Environmental protection and energy-saving

### 3.1 Saving energy

If you follow these instructions, your appliance will use less power and water.

Use the Normal program.

- ✓ The Normal program is energy-efficient and environmentally friendly.  
→ *"Dishwasher Cycles", Page 13*

If you do not have much dishware to wash, use the additional Half Load option.<sup>1</sup>

- ✓ The program will adjust to a lower load and consumption will be reduced.

Zeolith drying automatically helps to save energy.

→ *"Zeolite drying ☺", Page 8*

### 3.2 Zeolite drying ☺

The appliance features a Zeolite container. Zeolite drying lets you save energy.

---

<sup>1</sup> Depending on the appliance specifications

Zeolite is a mineral that can store moisture and energy and then release them again.

During dishwashing energy is used to heat up the washing water and dry the mineral.

During the drying phase, moisture from the interior of the dishwasher is stored in the mineral and heat is released. The heat is blown out into the interior of the dishwasher with dry air. This speeds up and improves drying. Therefore, Zeolite drying is very efficient.

### Notes

- To avoid impairing Zeolite drying performance, do not position dishware parts directly in front of the intake opening or the outlet opening of the Zeolite container.  
Do not position heat-sensitive dishware parts directly in front of the

outlet opening of the Zeolite container.

→ *"Appliance", Page 10*

- To avoid thermal damage to the appliance, remove any parts that are not permanently installed from the interior of the appliance.


## 3.3 AquaSensor

The AquaSensor is an optical measuring device (light barrier) which measures the turbidity of the washing water. You can save water with the AquaSensor.

The operation of the AquaSensor depends on the selected cycle. If the soiling level is high, the washing water is drained off and replaced with fresh water. If the soiling level is lower, the washing water is used in the next rinse, so reducing water consumption by 3-6 liters. In the Auto cycles the temperature and run time are additionally adjusted to the level of soiling.

## 4 Familiarizing yourself with your appliance

### 4.1 Appliance

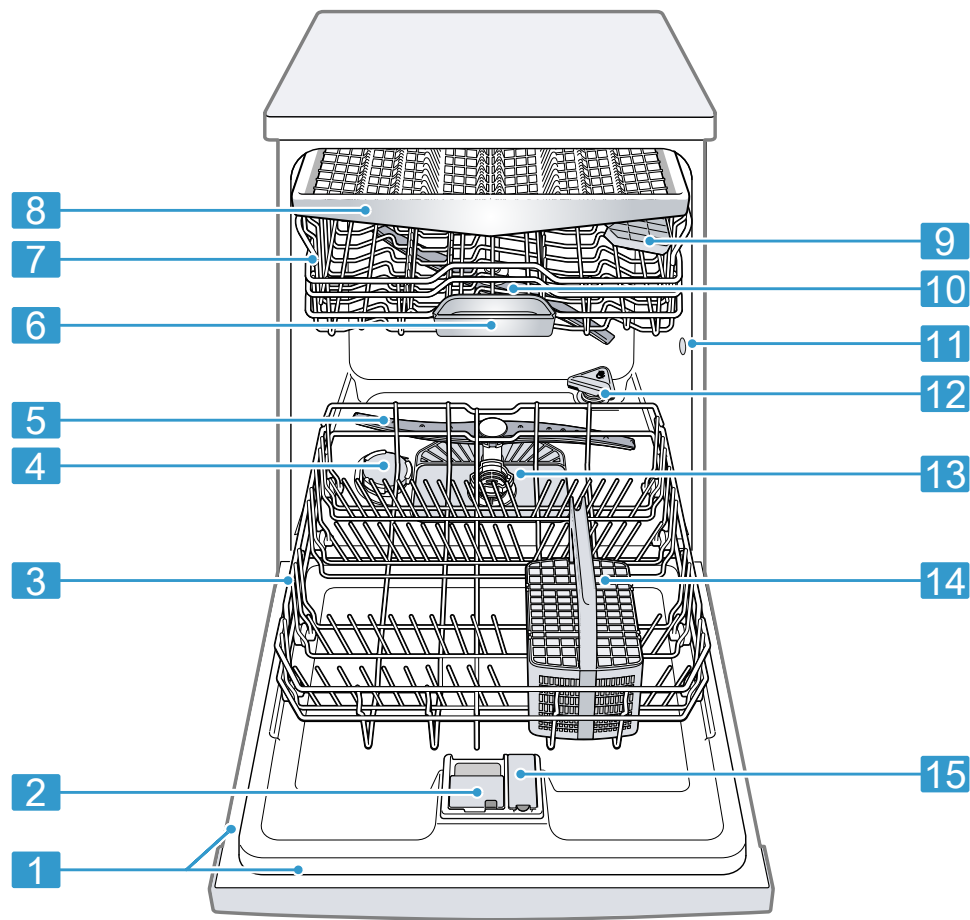


|   |                     |                                                                                                                                          |
|---|---------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Rating plate        | Rating plate with E number and FD number<br>→ <i>Page 53</i> .<br>You will need this data to contact Customer service → <i>Page 52</i> . |
| 2 | Detergent dispenser | Add detergent to the detergent dispenser.                                                                                                |
| 3 | Lower rack          | Lower rack → <i>Page 18</i>                                                                                                              |

|           |                                         |                                                                                                                                                                                  |
|-----------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>4</b>  | Dispenser for special salt              | Add special salt to the special salt dispenser.<br>→ <i>"Water softening system", Page 21</i>                                                                                    |
| <b>5</b>  | Lower spray arm                         | The lower spray arm washes the dishware in the lower rack.<br>If the dishware has not been washed properly, clean the spray arms.<br>→ <i>"Cleaning the spray arms", Page 38</i> |
| <b>6</b>  | Detergent tab collecting tray           | During the wash cycle, detergent tabs automatically drop out of the detergent dispenser into the tab collecting tray, where they can dissolve fully.                             |
| <b>7</b>  | Upper rack                              | Upper rack → <i>Page 17</i>                                                                                                                                                      |
| <b>8</b>  | Silverware drawer                       | Silverware drawer → <i>Page 19</i>                                                                                                                                               |
| <b>9</b>  | Cup shelf <sup>1</sup>                  | Cup shelf → <i>Page 19</i>                                                                                                                                                       |
| <b>10</b> | Upper spray arm                         | The upper spray arm washes the dishware in the upper rack.<br>If the dishware has not been washed properly, clean the spray arms.<br>→ <i>"Cleaning the spray arms", Page 38</i> |
| <b>11</b> | Intake opening of the Zeolite container | The intake opening is required for Zeolite drying.                                                                                                                               |
| <b>12</b> | Outlet opening of the Zeolite container | The outlet opening is required for Zeolite drying.                                                                                                                               |
| <b>13</b> | Filter system                           | Filter system → <i>Page 37</i>                                                                                                                                                   |
| <b>14</b> | Silverware basket                       | Silverware basket<br>→ <i>"Silverware Basket", Page 18</i>                                                                                                                       |
| <b>15</b> | Dispenser for rinse aid                 | Rinse aid is added to the dispenser for rinse aid.<br>→ <i>"Rinse aid system", Page 23</i>                                                                                       |

<sup>1</sup> Depending on the appliance specifications

## 4.2 Controls

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

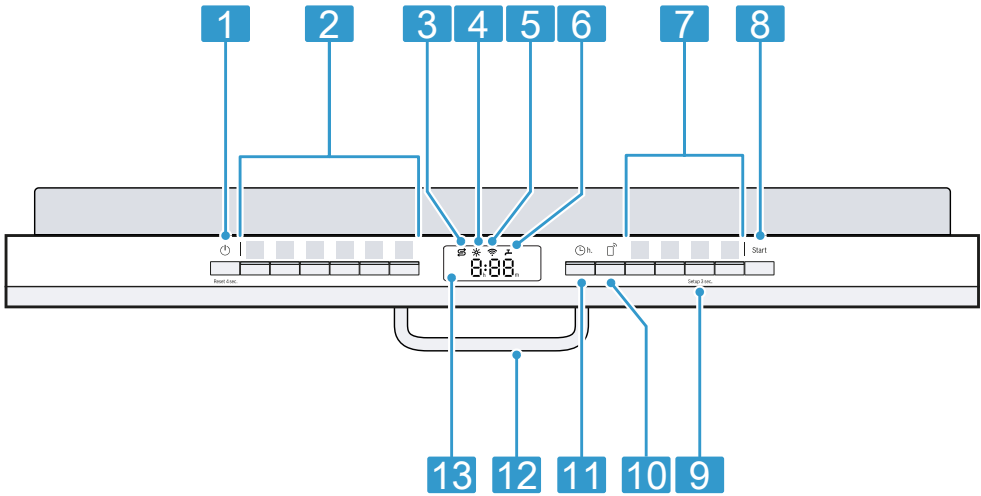

|                                                                                                            |                                                                                                                                                                         |
|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> ON/OFF button and reset button Reset 4 sec.                                                       | Switching on the appliance → <i>Page 30</i><br>Switching off the appliance<br>→ <i>"Switching off the appliance", Page 31</i><br>Terminating the cycle → <i>Page 31</i> |
| <b>2</b> Cycle buttons                                                                                     | Cycles → <i>Page 13</i>                                                                                                                                                 |
| <b>3</b> Special salt refill indicator                                                                     | Water softening system<br>→ <i>"Adding dishwasher salt", Page 22</i>                                                                                                    |
| <b>4</b> Rinse aid refill indicator                                                                        | Rinse aid system<br>→ <i>"Adding rinse aid", Page 23</i>                                                                                                                |
| <b>5</b> WLAN display                                                                                      | Home Connect → <i>Page 34</i>                                                                                                                                           |
| <b>6</b> Water supply display                                                                              | Display for water supply                                                                                                                                                |
| <b>7</b> Cycle buttons and options                                                                         | Cycles → <i>Page 13</i><br>Options → <i>Page 16</i>                                                                                                                     |
| <b>8</b> Start button Start                                                                                | Starting the wash cycle<br>→ <i>"Starting the wash cycle", Page 31</i>                                                                                                  |
| <b>9</b> Button Setup 3 sec.                                                                               | If you press Setup 3 sec. for approx. 3 seconds, you can open the basic settings.<br>→ <i>"Changing the basic settings", Page 33</i>                                    |
| <b>10</b> Remote Start  | → <i>"Remote Start "</i> , Page 34                                                   |

|           |                          |                                                                                                                                                                                                             |
|-----------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>11</b> | Electronic delay time    | Setting the electronic delay time<br>→ <i>Page 31</i>                                                                                                                                                       |
| <b>12</b> | Door handle <sup>1</sup> | Open the appliance door.                                                                                                                                                                                    |
| <b>13</b> | Display                  | The display shows information about the remaining run time or basic settings. You can change the basic settings via the display and the setting buttons.<br>→ <i>"Changing the basic settings", Page 33</i> |

**Symbols on the display <sup>1</sup>**

The display shows the following symbols depending on the appliance specifications. An explanation of the symbols is given below.

| Symbol                                                                             | Description                                                                                                                                                                                                                                        |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | If the  <sup>1</sup> machine care symbol lights up on the display, run the machine care cycle.<br>→ <i>"Machine Care <small>Machine II</small> Care", Page 36</i> |
|    | If the rinse aid refill indicator lights up on the display, top up with rinse aid.<br>→ <i>"Adding rinse aid", Page 23</i>                                                                                                                         |
|  | If the special salt refill indicator lights up on the                                                                                                                                                                                              |

| Symbol                                                                            | Description                                                                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   | display, add special salt to the dispenser for special salt just before the program starts.<br>→ <i>"Adding dishwasher salt", Page 22</i>        |
|  | If the appliance is connected to a wireless home WLAN network, the symbol lights up on the display.<br>→ <i>"Home Connect®", Page 34</i>         |
|  | If there is a fault with the water inlet or water outlet, the symbol lights up or flashes on the display.<br>→ <i>"Troubleshooting", Page 39</i> |

**5 Dishwasher Cycles**

Below is an overview of the different cycles available on your dishwasher. The running time may vary depending on the cycle selected. The running time depends on the water temperature, the quantity of dishware, the level of dirt and the option selected. The running time will change if the rinse aid system is switched off or rinse aid needs to be added. The consumption values relate to normal conditions and a water hardness of 16 - 20 °E. Different influencing factors such as water temperature or pipe pressure may result in deviations.

<sup>1</sup> Depending on the appliance specifications


| Cycle    | Purpose                                                                                                                                                                                                                                                                      | Cycle sequence                                                                                                                                                                                   | Usage<br>1) Hour/min.<br>2) Electrical/kWH<br>3) Water/gal                                                                                                                                  |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Heavy    | Dishware: <ul style="list-style-type: none"><li>■ Washing pots and pans, non-fragile dishware and silverware</li></ul> Level of soiling: <ul style="list-style-type: none"><li>■ Removing stubborn burned or dried on food remnants containing starch and protein.</li></ul> | Intensive <ul style="list-style-type: none"><li>■ Pre-Rinse</li><li>■ Cleaning 151 °F – 160 °F</li><li>■ Intermediate rinse</li><li>■ Final rinse 151 °F</li><li>■ Drying</li></ul>              | <ul style="list-style-type: none"><li>■ 1) 2:00 - 2:15</li><li>■ 2) 1.100 - 1.200</li><li>■ 3) 4.9 - 6.4</li></ul>                                                                          |
| Auto     | Dishware: <ul style="list-style-type: none"><li>■ Cleaning mixed dishware and silverware.</li></ul> Level of soiling: <ul style="list-style-type: none"><li>■ Removing common household food remnants lightly dried-on.</li></ul>                                            | Sensor controlled: <ul style="list-style-type: none"><li>■ Optimized by sensors depending on the soiling of the rinse water.</li></ul>                                                           | <ul style="list-style-type: none"><li>■ 1) 1:45 - 2:15</li><li>■ 2) 0.720 - 0.800</li><li>■ 3) 3.4 - 5.4</li></ul> <p><b>Note:</b> The displayed cycle time indicates an average value.</p> |
| Normal   | Dishware: <ul style="list-style-type: none"><li>■ Cleaning mixed dishware and silverware.</li></ul> Level of soiling: <ul style="list-style-type: none"><li>■ Removing common household food remnants lightly dried-on.</li></ul>                                            | Most economical cycle: <ul style="list-style-type: none"><li>■ Pre-Rinse</li><li>■ Cleaning 127 °F – 136 °F</li><li>■ Intermediate rinse</li><li>■ Final rinse 136 °F</li><li>■ Drying</li></ul> | <ul style="list-style-type: none"><li>■ 1) 2:10 - 2:20</li><li>■ 2) 0.600 - 0.780</li><li>■ 3) 2.6 - 5.6</li></ul>                                                                          |
| Delicate | Dishware: <ul style="list-style-type: none"><li>■ Cleaning delicate dishware, silverware, temperature-sensitive plastics, glasses and stemware in the stemware holder.</li></ul>                                                                                             | Particularly gentle: <ul style="list-style-type: none"><li>■ Pre-Rinse</li><li>■ Cleaning 113 °F - 122 °F</li><li>■ Intermediate rinse</li><li>■ Final rinse 122 °F</li><li>■ Drying</li></ul>   | <ul style="list-style-type: none"><li>■ 1) 1:25 - 1:35</li><li>■ 2) 0.570 - 0.580</li><li>■ 3) 2.5 - 3.9</li></ul>                                                                          |

| Cycle        | Purpose                                                                                                                                                                                                                                                            | Cycle sequence                                                                                                                              | Usage<br>1) Hour/min.<br>2) Electrical/kWH<br>3) Water/gal                                                         |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
|              | Level of soiling: <ul style="list-style-type: none"><li>■ Removing common household food remnants lightly dried-on.</li></ul>                                                                                                                                      |                                                                                                                                             |                                                                                                                    |
| Express      | Dishware: <ul style="list-style-type: none"><li>■ Cleaning delicate dishware, silverware, temperature-sensitive plastics and glasses.</li></ul> Level of soiling: <ul style="list-style-type: none"><li>■ Removing lightly adhering fresh food remnants.</li></ul> | Time-optimized: <ul style="list-style-type: none"><li>■ Cleaning 113 °F</li><li>■ Intermediate rinse</li><li>■ Final rinse 124 °F</li></ul> | <ul style="list-style-type: none"><li>■ 1) 0:30</li><li>■ 2) 0.400</li><li>■ 3) 2.7</li></ul>                      |
| Machine Care | Only when using unloaded appliance.                                                                                                                                                                                                                                | Machine Care 162 °F                                                                                                                         | <ul style="list-style-type: none"><li>■ 1) 2:00</li><li>■ 2) 1.100</li><li>■ 3) 2.5</li></ul>                      |
| Favorite     | -                                                                                                                                                                                                                                                                  | -                                                                                                                                           | <ul style="list-style-type: none"><li>■ 1) 0:09 - 0:09</li><li>■ 2) 0.050 - 0.050</li><li>■ 3) 1.2 - 1.2</li></ul> |


**5.1 Energy Guide**

The Energy Guide label was based on the Normal soil sensing cycle. The unit was tested without any rinse aid (liquid) in the rinse aid dispenser. A single dose of detergent was inserted into the detergent dispenser, with no detergent being used in the prewash. The unit was not subjected to truncated testing per the definitions in the test procedure. We recommend that dish loads such as the one in the energy certification test have the rack position set in the highest position. Recommended for daily, regular or typical use to completely


wash a full load of normally soiled dishes.  
Lower rack

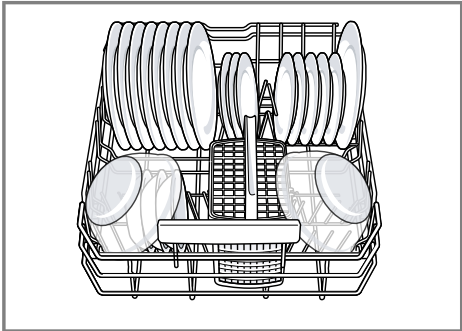

Upper rack

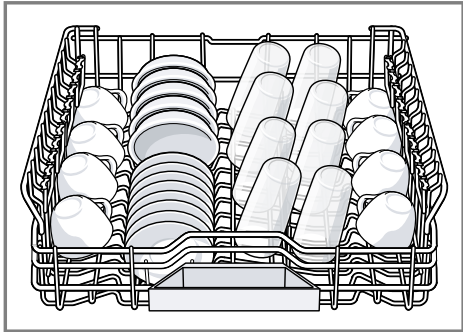

Third rack

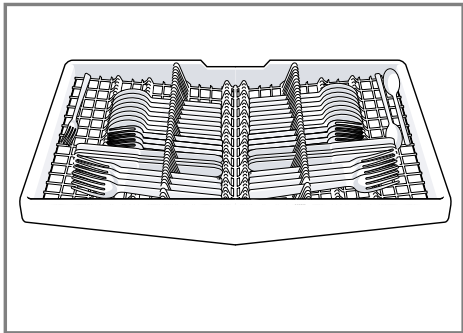

5.2 Favorite ☆

With this function, you can save a combination of a Cycle and an Option.

You can save the selected Cycle and Option combination via the Home Connect app or on the appliance. The pre-rinse cycle is pre-programmed to this button and is fine for all types of dishware. The dishware is rinsed with cold water.

**Tip:** You can use the Home Connect app to access additional Cycles and Options and save them. <sup>1</sup>

Save Favorite ☆ on the appliance

- 1. Open the appliance door.
- 2. Press ON/OFF.

- 3. Press a suitable cycle button.
- 4. Press the button for the relevant options.
- 5. Press Favorite button for 3 seconds.
- ✓ The selected cycle and option will flash.
- ✓ The Favorite button flashes.
- ✓ The program combination is saved.

**Tip:** To reset the cycle, either use the Home Connect app or reset your appliance back to the factory settings.

6 Options

Here is an overview of the different options available on your dishwasher.

| Option                                 | Use                                                                                                                                                                                                                                                                               |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>crystal<br/>dry</div> Crystal Dry | Patented Zeolite technology thoroughly dries dishes and dishwasher safe plastics. Natural minerals transform moisture into heat up to 176F/80C to get dishes, even plastics, 60% drier. Extends drying time.                                                                      |
| <div>half<br/>load</div> Half Load     | <ul style="list-style-type: none"><li>▪ Switch on with small loads.</li><li>▪ It is recommended adding less detergent to the detergent dispenser than for a full machine load.</li><li>▪ The run time is shortened.</li><li>▪ Energy and water consumption are reduced.</li></ul> |

<sup>1</sup> Depending on the appliance specifications

| Option                      | Use                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>sanitize</b><br>Sanitize | <ul style="list-style-type: none"> <li>Increases the temperature and cycle length to achieve sanitation.</li> <li>This option is ideal for cleaning items such as chopping boards and baby bottles.</li> <li>Using this option may also improve drying. There is a slight increase in energy consumption.</li> <li>When the cycle has ended, the display shows "SAn".</li> </ul> |

### **WARNING**

Concerning dishware sanitation, be aware of the following.


- Only sanitizing cycles have been designed to meet the requirements for soil removal and sanitation efficacy. There is no intention, either directly or indirectly, to imply that all cycles on a certified machine have passed the sanitization performance test.

## 7 Features

You can find an overview of the possible features of your appliance and how to use them here. These features depend on your appliance model.

### 7.1 Upper rack

Arrange cups, glasses, and small tableware items in the top rack.

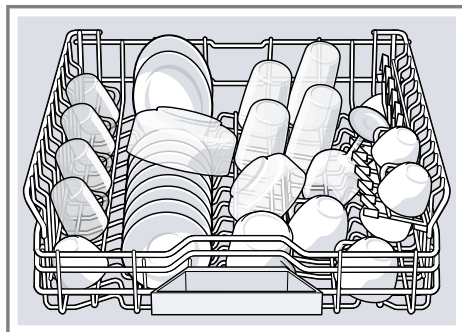


You can adjust the height of the upper rack to make room for larger items.


#### **Adjusting upper rack with Rack-Matic®**

To wash large items in the racks, adjust the shelf height of the upper rack.

1. Pull out the upper rack.
2. To prevent the rack from suddenly dropping down, hold the side of the rack by the top edge.
3. Press in the right and left hand levers on the outside of the rack.

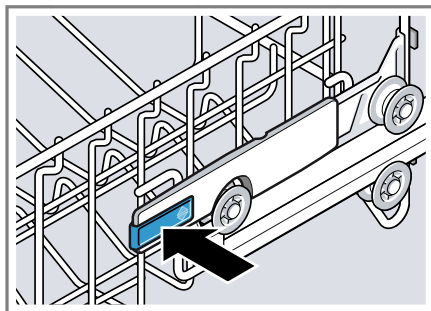

4. Raise or lower the rack evenly to the right level.

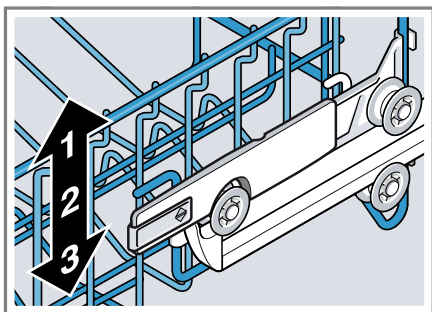


Check that the rack is level on both sides.


5. Release the levers.
- ✓ The rack clicks into position.
6. Slide the rack in.

## 7.2 Lower rack


Arrange pans and plates in the lower rack.

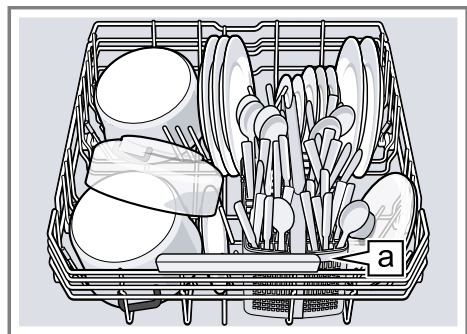

Silverware basket <sup>1</sup>

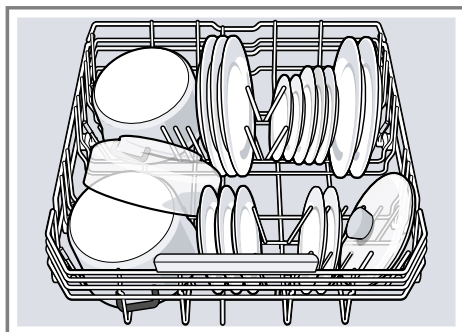

Large plates up to a diameter of 12 inches can be arranged in the lower rack as shown.

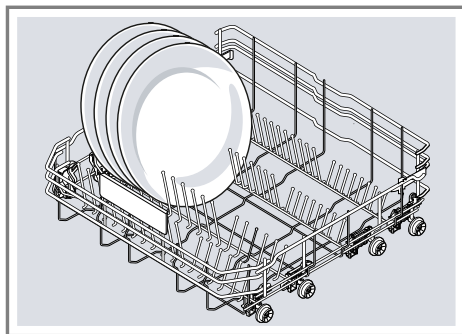

## 7.3 Silverware Basket

Arrange the silverware in the silverware basket, ensuring that the items are not nestled together and with the sharp points down.




### WARNING

The sharp points and edges of knives and other sharp utensils can cause serious injury.

- Load knives and other sharp utensils with edges down. Do not allow


<sup>1</sup> Depending on the appliance specifications

children to handle or play near knives and sharp utensils

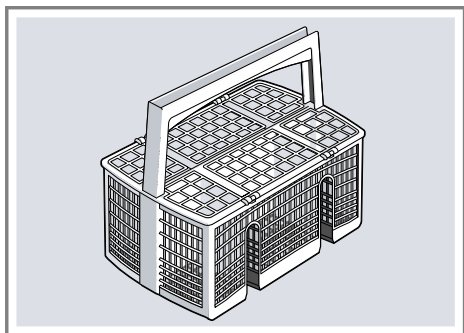

## 7.4 Silverware drawer

Arrange silverware in the silverware drawer.

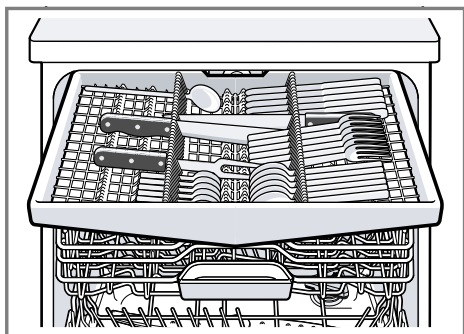


Arrange silverware with the points and sharp edges down.

## 7.5 Cup shelf

Use the cup shelf and the space underneath for small cups and glasses


or for large items of silverware, e.g. cooking spoons or serving cutlery.

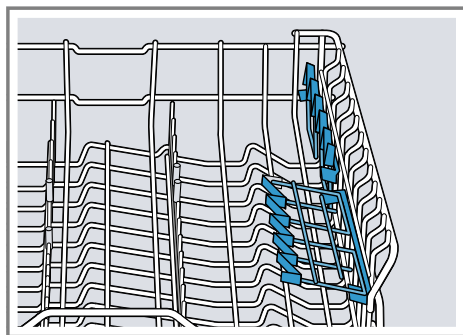

If you do not need the cup shelf, you can fold it up.

## 7.6 Flip tines

Use the flip tines to position dishware securely, e.g. plates.

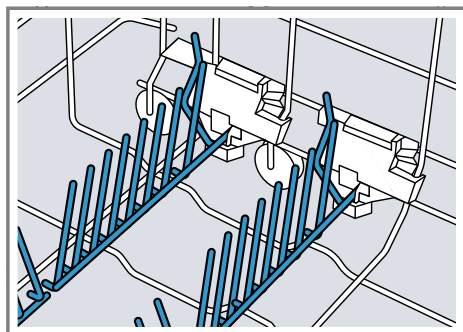


You can fold the tines down to arrange pans, bowls and glasses better.<sup>1</sup>

## Folding down the tines<sup>1</sup>

If you do not need the tines, fold them down.

<sup>1</sup> Depending on the appliance specifications


1. Push the lever forward ① and fold down the tines ②.

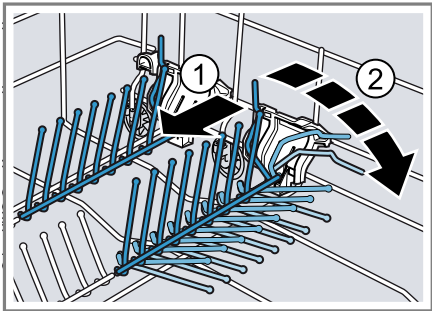

2. To use the tines again, fold them back up.  
✓ The tines click into position.


### 7.7 Small items holder

Use the small items holder to arrange small items of dishware, e.g. light plastic parts.

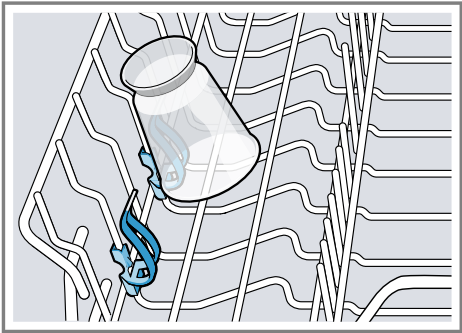

### 7.8 Bottle holder

Use the bottle holder to position tall narrow items securely, e.g. bottles or vases.

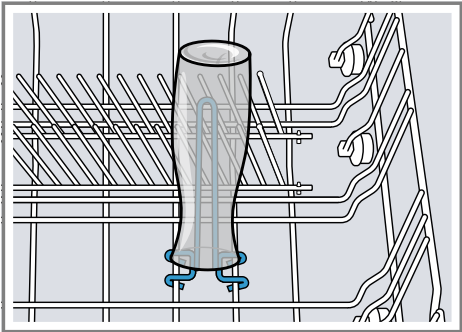

### 7.9 Rack heights

Set the racks at the right height.

#### Appliance height 32 inches with silverware basket

| Level    | Upper rack | Lower rack           |
|----------|------------|----------------------|
| 1 max. ø | 8.5"       | 12" → <i>Page 18</i> |
| 2 max. ø | 9.5"       | 11"                  |
| 3 max. ø | 10.5"      | 10"                  |

Appliance height 32 inches with silverware drawer

| Level    | Upper rack | Lower rack           |
|----------|------------|----------------------|
| 1 max. ø | 6"         | 12" → <i>Page 18</i> |
| 2 max. ø | 7"         | 11"                  |
| 3 max. ø | 8"         | 10"                  |

8 Before using for the first time

8.1 Initial use

Before the first use, or after a factory reset, you will need to configure the settings.

**Tip:** Connect your appliance to a mobile device. You can conveniently change all settings using the Home Connect® app.  
→ "*Home Connect®* ", *Page 34*

**Requirement:** The appliance has been installed and connected.

- 1. Add special salt.
- 2. Add rinse aid. → *Page 23*
- 3. Switch on the appliance.  
→ *Page 30*
- 4. Set the water softening system.
- 5. Set the amount of rinse aid.

- 6. Add detergent.
- 7. Start the Program with the highest cleaning temperature without dishware. → *Page 31*  
To remove any marks from water or other residues, we recommend you operate the appliance without dishware before using it for the first time.

**Tip:** You can change these settings and other Basic settings at any time.

9 Water softening system

Hard water leaves limescale on dishware as well as the washing tank, and parts of the appliance may become blocked.  
To ensure good dishwashing results, you can treat the water with special salt and the water softening system. To avoid damage to the appliance, water with a hardness above 9 °E must be softened.

9.1 Overview of water hardness settings

You can find an overview of the water hardness values that can be selected here.  
You can find out how hard your water is from your local water company or by using a water hardness tester.

| Water hardness °E | Hardness range | mmol/l    | Setting value |
|-------------------|----------------|-----------|---------------|
| 0 - 8             | soft           | 0 - 1.1   | H00           |
| 9 - 10            | soft           | 1.2 - 1.4 | H01           |

| Water hardness<br>°E | Hardness range | mmol/l    | Setting value |
|----------------------|----------------|-----------|---------------|
| 11 - 12              | medium         | 1.5 - 1.8 | H02           |
| 13 - 15              | medium         | 1.9 - 2.1 | H03           |
| 16 - 20              | medium         | 2.2 - 2.9 | H04           |
| 21 - 26              | hard           | 3.0 - 3.7 | H05           |
| 27 - 38              | hard           | 3.8 - 5.4 | H06           |
| 39 - 62              | hard           | 5.5 - 8.9 | H07           |

**Note:** Set the water hardness determined on your appliance.

→ *"Setting the water softening system", Page 22*

With a water hardness of 0 - 8 °E you do not need special salt for dishwashers and can switch off the water softening system.

→ *"Switching off the water softening system", Page 23*

## 9.2 Setting the water softening system

Set the water hardness on your appliance.

1. Determine the water hardness and the appropriate setting value.  
→ *"Overview of water hardness settings", Page 21*
2. Press ON/OFF.
3. To open the basic settings, press Setup 3 sec. for 3 seconds.
  - ✓ The display shows Hxx.
  - ✓ The display shows **set**.
4. Press Start repeatedly until the right water hardness has been set.  
The value H00 is set at the factory.
5. To save the settings, press Setup 3 sec. for 3 seconds.

## 9.3 Special Dishwasher Salt

You can use special dishwasher salt to soften the water.

### Adding dishwasher salt

If the salt refill indicator lights up, add special dishwasher salt to the dispenser for salt just before the cycle starts. The amount of special dishwasher salt required depends on the water hardness. The higher the water hardness, the greater the amount of salt required.

### NOTICE

Detergent may damage the water softening system.


- Only fill the dispenser of the water softening system with special dishwasher salt.

Special salt for dishwashers can damage the tub due to corrosion.

- To make sure that any special salt that escapes is washed out of the tub, add the special salt to the dispenser for special salt immediately before the program starts.

1. Unscrew the lid of the salt dispenser and remove.
2. Before the first use: Fill the dispenser full with water.
3. **Note:** Only use special salt specified for dishwashers.  
Do not use salt tablets.  
Do not use table salt.

Add the special dishwasher salt to the dispenser.

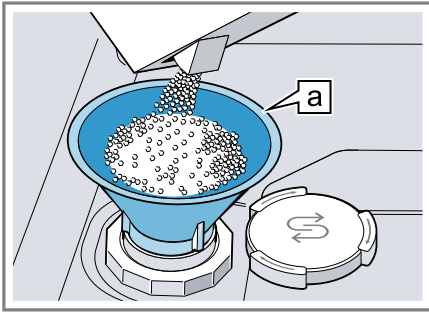

Funnel <sup>a</sup>

Fill the dispenser completely with the salt. The water in the dispenser is displaced and forced out.

4. Place the lid back on the dispenser and turn to close.

## 9.4 Switching off the water softening system

If you do not need to use the water softening system, e.g. you already have a whole house water softening system, you can turn the system off.

### Note

To avoid damage to the appliance, only switch off the water softening system in the following cases:

- The water hardness is max. 26 °E and you are using combined detergents with salt replacement substances. According to manufacturers, combined detergents with salt replacement substances can generally only be used up to a water hardness of 26 °E without adding special salt.
- The water hardness is 0 - 8 °E. You can omit special salt.

1. Press ON/OFF.

2. To open the basic settings, press Setup 3 sec. for 3 seconds.
  - ✓ The display shows Hxx.
  - ✓ The display shows **set**.
3. Press Start repeatedly until the display shows H00.
4. To save the settings, press Setup 3 sec. for 3 seconds.
  - ✓ The water softening system is switched off and the salt refill indicator is deactivated.

## 10 Rinse aid system

### 10.1 Rinse aid


For optimum drying results, use rinse aid.

Only use rinse aid intended for household dishwashers.

### Adding rinse aid


If the rinse aid refill indicator lights up, fill the dispenser with rinse aid. Only use rinse aid intended for household dishwashers.

1. Press the catch on the lid of the dispenser for rinse aid ① and lift ②.

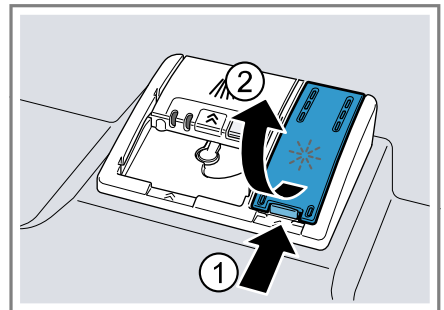

<sup>1</sup> Depending on the appliance specifications

2. Add rinse aid up to the max mark.

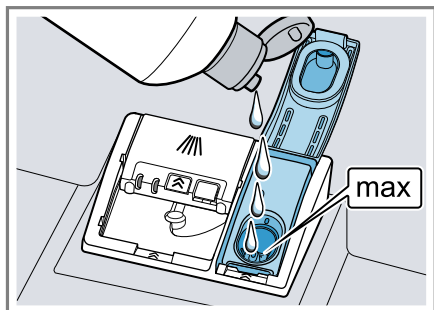

3. If rinse aid spills out, remove it from the tub.  
Spilled rinse aid can cause excessive frothing during the wash cycle.
4. Close the lid of the dispenser for rinse aid.  
✓ The lid clicks into position.

## 10.2 Setting the amount of rinse aid

If there are streaks or water spots on dishware, change the amount of rinse aid.

1. Press ON/OFF.
2. To open the basic settings, press Setup 3 sec. for 3 seconds.  
✓ The display shows Hxx.  
✓ The display shows **set**.
3. Press Setup 3 sec. repeatedly until the display shows the value set at the factory r05.
4. Press Start repeatedly until the right amount of rinse aid has been set.
  - A low setting adds less rinse aid during the wash cycle and reduces streaking on dishware.
  - A higher setting adds more rinse aid during the wash cycle, reduces water spots and improves the drying result.
5. To save the settings, press Setup 3 sec. for 3 seconds.

## 10.3 Switching the rinse aid system off

If you choose not to use rinse aid, you can turn the rinse aid system off.

**Tip:** Rinse aid within a combination detergent has limited effectiveness. You will generally get better results using a separate rinse aid.

1. Press ON/OFF.
2. To open the basic settings, press Setup 3 sec. for 3 seconds.  
✓ The display shows Hxx.  
✓ The display shows **set**.
3. Press Setup 3 sec. repeatedly until the display shows the value set at the factory r05.
4. Press Start repeatedly until the display shows r00.
5. To save the settings, press Setup 3 sec. for 3 seconds.  
✓ The rinse aid system is switched off and the rinse aid refill indicator is deactivated.

---

## 11 Detergent

Find out which detergents are suitable for your appliance.

### 11.1 The correct detergents

Only use detergents that are made for dishwashers, either basic or combination detergents.

For the best washing and drying results, use a separate detergent, then add Special salt and Rinse aid → *Page 23* separately.

Modern, powerful detergents mainly use a low-alkaline formulation with enzymes. Enzymes break down starch and remove protein. Oxygen-based bleaching agents are generally used to remove colored stains, e.g. tea or ketchup.

**Note:** Follow the manufacturer's instructions for each detergent.

| Detergent        | Description                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tabs             | Tabs are perfect for all cleaning functions and do not need to be measured out.<br>However, with shorter Cycles → <i>Page 13</i> sometimes tabs do not dissolve entirely and leave residues of detergent. This may reduce its effectiveness.                                                                                                                                                                                   |
| Powder detergent | Powder detergent is recommended for shorter cycles. The dosage can be adjusted to the level of soiling.                                                                                                                                                                                                                                                                                                                        |
| Liquid detergent | Liquid detergent works faster and is recommended for shorter cycles without a pre-rinse. Sometimes liquid detergent may leak out despite the detergent dispenser being closed. This is not a problem, just remember the following: <ul style="list-style-type: none"> <li>▪ Only choose a cycle without PreRinse.</li> <li>▪ Do not use the Delay Start option.</li> </ul> The dosage can be adjusted to the level of soiling. |

## 11.2 Incompatible detergents

Do not use a detergent which is not designated for dishwasher use or contains chlorine.

| Detergent                     | Description                                                             |
|-------------------------------|-------------------------------------------------------------------------|
| Liquid hand soap              | Liquid hand soap can cause increased frothing and damage the appliance. |
| Detergent containing chlorine | This may leave chlorine residue on dishware.                            |

## 11.3 Information on Detergent

Follow the instructions on detergents in everyday use.


- Detergents marked as "ecological" (environmentally friendly) generally contain lower levels of active agents or none at all. The cleaning effect may be reduced.
- Adjust the rinse aid and the water softening system settings in accordance with the detergent or combination detergent in use.
- According to manufacturers, combination detergents with salt replacement substances can only be used up to a certain water hardness, usually 26 °E, without adding special salt. For the best washing and drying results we recommend using special salt from a water hardness of 17 °E.
- Any rinse aid component of a combination detergent has limited effectiveness. You will have better results using a separate rinse aid.
- To prevent sticking, only touch detergents in a water-soluble pouch with dry hands and only ever place them in a dry detergent dispenser.
- Even if the rinse aid and special salt refill indicators light up, the wash cycles will run properly with combination detergents.

**en-us** Dishware

- Use tablets with enhanced drying results.

**11.4 Adding Detergent**

1. To open the detergent dispenser, press the locking latch.
2. Add the detergent to the dry detergent dispenser.

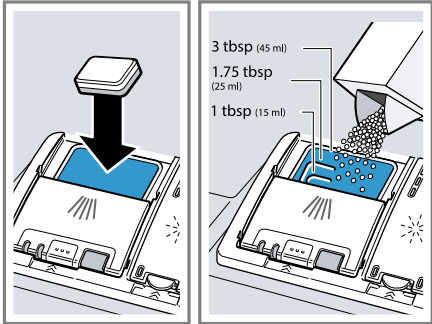


If you are using tablets, one is enough. Insert the tablets in a horizontal position.

If you are using powder or liquid detergent, follow the manufacturer's instructions and quantities for dosage in the detergent dispenser.

1.5 to 1.75 Tbsp (20 ml – 25 ml) detergent is sufficient for normal soiling. If dishware is only lightly soiled, slightly less than the amount of detergent specified is usually sufficient.

3. Close the lid of the detergent dispenser.

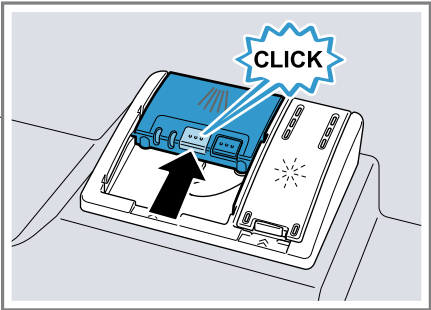

- ✓ The lid clicks into position.
- ✓ The detergent dispenser will open automatically at the optimum time during the cycle. Powder or liquid detergent will spread around the washing tank and dissolve there. Tablets will fall into the tablet collecting tray and dissolve in the right dosage. In order to ensure that tablets can dissolve evenly, do not place any other objects in the tablet collecting tray.

**11.5 Detergent table**

Detergent amount guidelines

|          |                               |
|----------|-------------------------------|
| Auto     | 1.75 Tbsp (25 ml)<br>or 1 tab |
| Delicate | 1 Tbsp (15 ml)                |
| Normal   | 1.75 Tbsp (25 ml)<br>or 1 tab |
| Heavy    | 3 Tbsp (45 ml) or<br>1 tab    |
| Express  | 1 Tbsp (15 ml)                |

**12 Dishware**

Only wash dishware that is suitable for dishwashers.

**Note:** Decorated glassware and parts made of aluminum or silver may fade or discolor with dishwashing. Delicate

types of glass may turn cloudy after a few wash cycles.

12.1 Damage to glass and dishware

Only put glasses and china in the dishwasher if they are labeled dishwasher-safe. Avoid damage to glass and dishware.

| Cause                                                                                                                                                                                                                                                                                                                                                                                                        | Recommendation                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The following types of dishes are not dishwasher-safe: <ul style="list-style-type: none"><li>■ Wooden utensils and dishes</li><li>■ Decorative glassware, antique dishes and artistic hand-made pottery</li><li>■ Plastic parts that are not heat-resistant</li><li>■ Dishes made from copper or tin</li><li>■ Dishes soiled with ash, wax, grease or paint</li><li>■ Very small items of dishware</li></ul> | Only put dishes in the dishwasher if they are labeled dishwasher-safe.                                                                                                                |
| The chemical composition of the detergent causes damage.                                                                                                                                                                                                                                                                                                                                                     | Use a detergent labeled as gentle to dishes.                                                                                                                                          |
| Highly caustic alkaline or highly acidic cleaning solutions, in particular commercial or industrial cleaners, are not safe to use in the dishwasher with aluminum.                                                                                                                                                                                                                                           | If you use highly caustic alkaline or highly acidic cleaning solutions, in particular commercial or industrial cleaners, do not put anything aluminum in the dishwasher.              |
| The water temperature of the cycle is too high.                                                                                                                                                                                                                                                                                                                                                              | Select a cycle with lower temperatures. After the cycle has ended, take glassware and silverware out of the appliance without delay.                                                  |
| The water temperature of the cycle is too high and the water is too soft.                                                                                                                                                                                                                                                                                                                                    | Select a cycle with lower temperatures. Use detergent with glass protection. Adjust the water hardness setting on your dishwasher.<br>→ "Setting the water softening system", Page 22 |

12.2 Loading dishware

Arrange dishware correctly to optimize the dishwashing result and prevent damage to both dishware and the appliance. The noise level may also vary depending on the items placed in your dishwasher.

 **WARNING**

The sharp points and edges of knives and other sharp utensils can cause serious injury.

- Load knives and other sharp utensils with edges down. Do not allow


children to handle or play near knives and sharp utensils

### NOTICE

Avoid dishwasher damage

- ▶ Do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.


**Note:** Load the racks so that no projecting items of dishware interfere with closing of the door. Projecting items of dishware may push the appliance door open during the program, so allowing steam to escape and water to leak out around the door. This could damage your kitchen cabinets.

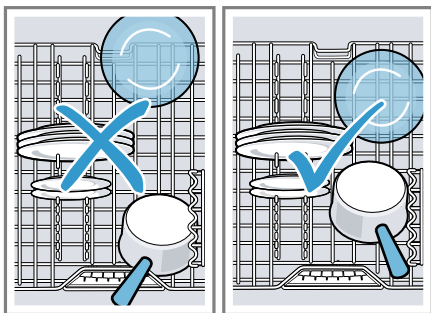

### Tips


- Using the appliance allows you to save energy and water compared to doing dishes by hand.
- See our website for examples of how to load your appliance efficiently.
- To save energy and water, load the machine with the number of place settings specified (standard load with dishes and silverware).
- For better washing and drying results, position items with curves or

recesses at an angle so water can run off.

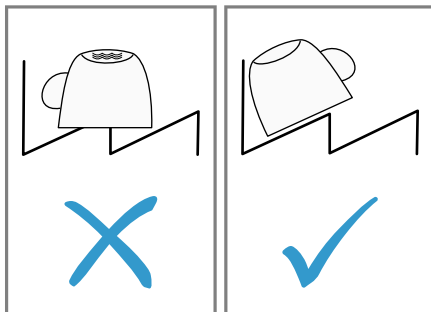

1. Remove large remnants of food from dishware.  
To save resources, do not pre-rinse dishware under running water.
2. Observe the following when arranging dishware:
  - Put heavily soiled dishware in the lower rack, e.g. pans. The more powerful spray jet ensures that the dishwashing result will be better.
  - To avoid damage to dishware, arrange it so it is stable and cannot tip over.
  - To avoid injury, arrange silverware with the points and sharp edges facing down.
  - Position containers with the openings facing down so no water can collect in them.
  - Do not block the spray arms - make sure that they can turn freely.
  - Do not place small parts in the collecting tray and do not block it with dishware so as not to ob-

struct the lid of the detergent dispenser.

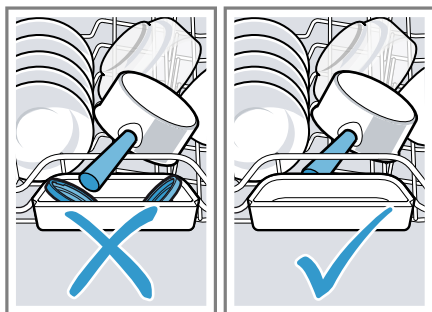

## 12.3 Removing dishware

### ⚠ CAUTION

Dishes can be very hot immediately after the cycle ends.


- ▶ Open the door slightly and allow dishes to cool for a few minutes before unloading.
1. To prevent water dripping onto dishware, unload it starting at the bottom and working up.
  2. Check the washing tank and accessories for soiling and clean if necessary.  
→ "Cleaning and maintenance", Page 36

## 12.4 Loading patterns


Recommended loading patterns.

### 12 place settings:


Lower rack

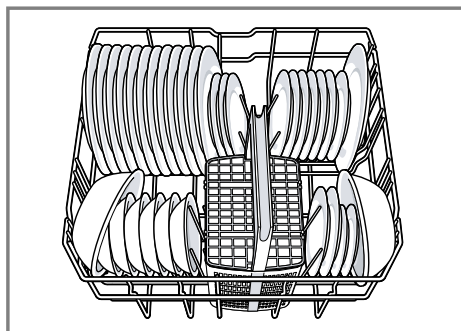

Upper rack

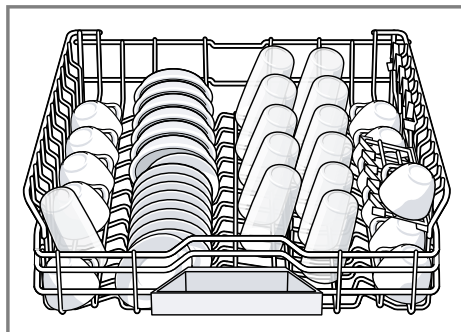


Third rack

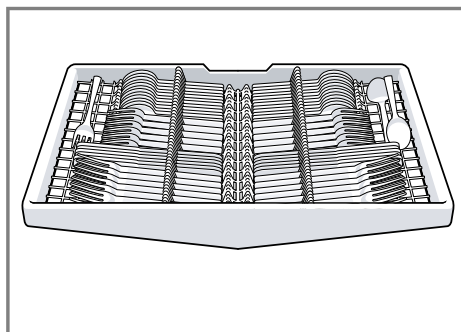


### Additional loading patterns for 10 place settings:


Lower rack

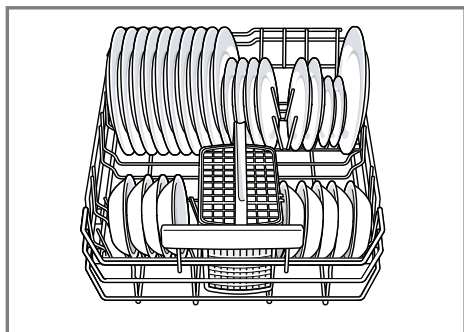

Upper rack

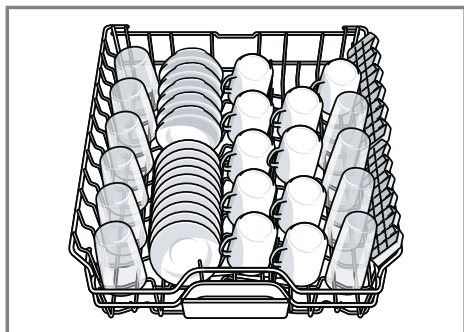

Third rack

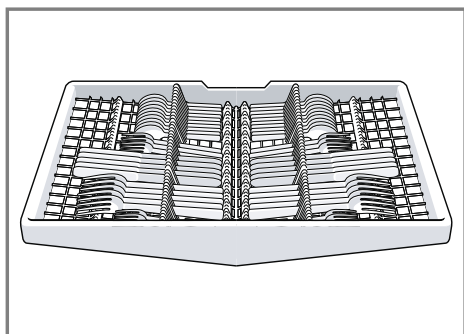

## 13 Basic Operation

### 13.1 Protection against unintentional operation

Your dishwasher has a built in feature to help prevent unintentional operation, e.g. by children. After starting

the appliance, the door has to be closed within 4 seconds, otherwise the operation will be paused. If this occurs, follow the steps below to restart your dishwasher.

- ▶ Press Start and close the door.
- ✓ The wash cycle will resume.

#### Note

Unintentional operation is activated when:

- Pressing Start to begin a wash cycle
- Setting Delay time and pressing Start
- Opening the door while Delay time is active
- Opening the door during a wash cycle.
- This feature cannot be deactivated.

### 13.2 Switching on the appliance

- ▶ Press ON/OFF.

The program last selected and the additional function last selected will be set by default.

If you do not perform any actions on the appliance for 10 minutes, it will automatically switch off.

### 13.3 Setting a cycle

To adjust the wash cycle to the soiling level of the dishware, select a suitable program.

- ▶ Press a suitable cycle button.
- ✓ The cycle is set and the cycle button flashes.
- ✓ The remaining run time of the cycle appears on the display.

### 13.4 Setting options

You can set options to complete the chosen wash program.

**Note:** The available options depend on which program is selected.

- ▶ Press the button for the relevant option.
- ✓ The option is set and the option button flashes.

### 13.5 Setting the electronic delay time

You can delay the start of the wash cycle by up to 24 hours.

1. Press **Delay**.
- ✓ "h:01" appears on the display.
2. Use **Delay** to set the required start time for the wash cycle.
3. Press **Start**.
- ✓ This activates the electronic delay time.

**Tip:** To deactivate the electronic delay time, press **Delay** repeatedly until "h:00" appears on the display.

### 13.6 Starting the wash cycle

- ▶ Press **Start**.
- ✓ The wash cycle has ended when the display shows "0h:00m".

#### Notes

- If you want to add more dishware while the appliance is running, do not use the collecting tray as a handle for the upper rack. You might touch the partially dissolved tablet.
- You can only change a cycle in progress if you can cancel it first.  
→ *"Terminating the wash cycle", Page 31*
- To save energy, the appliance switches off automatically 10 minutes after the end of the wash cycle. If you open the appliance door immediately after the wash cycle has ended, the appliance will switch off after 4 seconds.

### 13.7 Interrupting the wash cycle

1. Press **On/Off**.  
The program is saved and the appliance switches off.
2. Press **On/Off**.
3. Press **Start** to resume the wash cycle.

### 13.8 Terminating the wash cycle

To end a cycle early or to switch from one that has already started, you will need to cancel it first.

1. Open the appliance door.
2. Press **Reset** 4 sec. for approx. 4 seconds.
3. Close the appliance door.
- ✓ The cycle is cancelled and ends after approx. 1 minute.

### 13.9 Switching off the appliance

#### CAUTION

To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape.

- ▶ Do not fully open the door until water noises have stopped and steam has subsided.
1. Please note the information on Preventing Material Damage  
→ *Page 8*.
  2. Press **On/Off**.

---

## 14 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 14.1 Overview of the basic settings

The basic settings depend on the features of your appliance.

| Basic setting    | Display text     | Selection | Description                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------|------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| W. hardness      | H00 <sup>1</sup> | H00 - H07 | Set the water softening system to your water hardness.<br>→ <i>"Setting the water softening system", Page 22</i><br>Level H00 switches the water softening system off.                                                                                                                                                                                                                                                                              |
| Rinse aid disp.  | r05 <sup>1</sup> | r00 - r06 | Set the amount of rinse aid.<br>→ <i>"Setting the amount of rinse aid", Page 24</i><br>Switch the rinse aid system off with level r00.                                                                                                                                                                                                                                                                                                              |
| Intensive drying | d00 <sup>1</sup> | d00 - d01 | The temperature is increased during the final rinse, which improves the drying result. This may increase the run time slightly.<br><b>Note:</b> Not suitable for delicate items of dishware.<br>Switch Intensive drying on "d01" or off "d00".                                                                                                                                                                                                      |
| infoLight®       | I01 <sup>1</sup> | I00 - I01 | Switch InfoLight on or off. While the program is running, a spot of light is projected onto the floor below the appliance door. This light will not be visible if the appliance is installed at eye level with the cabinet front fitted flush. If the appliance door is not completely closed, the spot of light will flash. The program has ended when the spot of light is no longer visible on the floor.<br>Level "I00" switches InfoLight off. |
| Signal volume    | b02 <sup>1</sup> | b00 - b03 | Adjusting the signal volume. Level "b00" switches the signal tone off.                                                                                                                                                                                                                                                                                                                                                                              |

<sup>1</sup> Factory setting (may vary according to model)

| Basic setting   | Display text | Selection                                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------|--------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wi-Fi           | Cn0          | Cn0 - Cn1                                           | Switch the wireless network connection on or off.<br>Level "Cn0" switches the wireless network connection off.<br>The basic setting is not available until you have connected the appliance with the Home Connect® app.<br>→ <i>"Home Connect® "</i> , <i>Page 34</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Remote Start    | rc1          | rc0 - rc2                                           | Activate or deactivate remote start.<br>→ <i>"Remote Start ", Page 34</i><br>The following settings are possible: <ul style="list-style-type: none"> <li>■ With the setting "rc0", the option is permanently deactivated.</li> <li>■ With the setting "rc1", the option can be selected via the <small>remote start</small>  button.<br/>→ <i>"Activating Remote Start ", Page 34</i></li> <li>■ With the setting "rc2", the option is permanently activated.</li> </ul> The basic setting is not available until you have connected the appliance with the Home Connect® app.<br>→ <i>"Home Connect® "</i> , <i>Page 34</i> |
| Factory setting | rE           | Starting with Start<br>YES<br>Confirming with Start | Restore changed settings to the factory settings.<br>The settings for initial use must be configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

### 14.2 Changing the basic settings

1. Open the appliance door.  
2. Press ON/OFF.

3. To open the basic settings, press Setup 3 sec. for 3 seconds.  
✓ The display shows Hxx.  
✓ The display shows **set**.  
4. Press Setup 3 sec. repeatedly until the display shows the required setting.

5. Press Start repeatedly until the display shows the right value.  
You can change one or more settings.
6. To save the settings, press  
Setup 3 sec. for 3 seconds.
7. Close the appliance door.

---

## 15 Home Connect®

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect® app. The Home Connect® services are not available in every country. The availability of the Home Connect® function depends on the availability of the Home Connect® services in your country. You can find information on this at: [www.home-connect.com](http://www.home-connect.com).

To be able to use Home Connect®, you must first set up the connection to the WLAN home network (Wi-Fi <sup>1</sup>) and to the Home Connect® app. The Home Connect® app guides you through the entire registration process. Follow the instructions, noting the information in the Home Connect® app.

**Note:** Note the safety information in this instruction manual and ensure that it is also observed when operating the appliance using the Home Connect® app.

### 15.1 Setting up Home Connect®

**Requirement:** The appliance receives signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.



You can install the Home Connect® app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect® app.

### 15.2 Home Connect® settings

Adapt Home Connect® to your needs.

You can find the Home Connect® settings in the basic settings for your appliance. Which settings the display shows will depend on whether Home Connect® has been set up and whether the appliance is connected to your home network.

### 15.3 Remote Start

You can use the Home Connect® app to start the appliance with your mobile device.

**Tip:** If you select "rc2" in the Basic settings → *Page 33* of this function, the function is permanently activated, and you can start your appliance with a mobile device at any time.

### Activating Remote Start

When you have selected "rc1" in the basic settings of this function, activate the function on your appliance.

#### Requirements

- The appliance is connected to your WLAN home network.
- The appliance is connected to the Home Connect® app.
- "rc1" is selected in the Basic settings → *Page 33* of this function.

---

<sup>1</sup> Wi-Fi is a registered trade mark of the Wi-Fi Alliance.

- A program is selected.
- ▶ Press .
 

If you open the appliance door, the function is automatically deactivated.
- ✓  button lights up.

**Tip:** To deactivate the function, press

.

## 15.4 Smart Start<sup>1</sup>

Smart Start automatically determines the best time for the program to start. You can use the Home Connect® app to activate or deactivate the function.

### Activating Smart Start

#### Requirements

- Smart Start is activated via the Home Connect® app.
  - Preferences for time and energy are set in the Home Connect® app.
1. Press ON/OFF.
    - ✓ "EnG" lights up on the display.
    - ✓ The display shows the optimal start time and the duration of the selected program.
  2. Press Start.
    - ✓ Smart Start is active.
    - ✓ The program starts as soon as the optimal time is reached.

**Tip:** Deactivate the function a single time by pressing .

## 15.5 Remote Diagnostics

Customer Service can access your appliance via Remote Diagnostics if you ask them to do so, provided your appliance is connected to the Home Connect® server and Remote Diagnostics is available for your appliance and country. For more infor-

mation on Remote Diagnostics' availability in your country, visit the Service/Support section of your local website: [www.home-connect.com](http://www.home-connect.com). Please be aware that while Remote Diagnostics can assist in troubleshooting select issues, there may be instances where an on-site service visit is required if the problem cannot be resolved remotely.

## 15.6 Data Protection

See the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance transmits the following types of data to the Home Connect® server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your home appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect® functions for use and is only required when you want to use the Home Connect® functions for the first time.

**Note:** Please note that the Home Connect® functions can only be used in conjunction with the Home Connect® app. Information on data protection can be retrieved in the Home Connect® app.

<sup>1</sup> Depending on the appliance specifications

# 16 Cleaning and maintenance

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

**Note:** The Statement of Limited Product Warranty covers defects in materials and workmanship. Cleaning and maintenance is not covered by the warranty and a charge will apply. See the Statement of Limited Product Warranty for more details.

## 16.1 Cleaning the tub

- 1. Add detergent for dishwashers to the detergent dispenser.
- 2. Select the program with the highest temperature.
- 3. Start the program without dishware. → *Page 31*

## 16.4 Machine Care

Machine  
Care

Deposits, e.g. from food remnants and limescale, can cause your appliance to malfunction. To avoid these problems and reduce odors, we recommend cleaning your appliance at regular intervals. Machine Care combined with machine cleaning products will provide the right care for your appliance.

**Tip:** You can buy our tested and approved Dishwasher Care and Machine Cleaner for Dishwashers online or from customer service.

USA:

[www.bosch-home.com/us/shop-productlist/dishwashing/cleaning-and-care](http://www.bosch-home.com/us/shop-productlist/dishwashing/cleaning-and-care)

CA:

[www.bosch-home.ca/en/service/cleaners-and-accessories](http://www.bosch-home.ca/en/service/cleaners-and-accessories)

Machine Care is a program which removes various deposits in one wash cycle. Cleaning takes place in two phases:

| Phase | Removal of           | Cleaner                                | Placement                                        |
|-------|----------------------|----------------------------------------|--------------------------------------------------|
| 1     | Grease and limescale | Liquid machine care product or machine | Appliance interior, e.g. bottle hung in the sil- |

## 16.2 Cleaning agent

Only use suitable cleaning agents to clean your appliance.

→ *"Preventing material damage", Page 8*

## 16.3 Tips on appliance care

Follow the tips on appliance care to make sure your appliance functions properly at all times.

| Action                                                                                                                      | Benefit                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|
| Regularly wipe the door seals, the front of the dishwasher and the control panel using a damp cloth and dishwashing liquid. | This ensures the parts of the appliance will remain clean and hygienic. |
| If the appliance is not going to be used for a while, leave the door slightly ajar.                                         | This will prevent unpleasant odors.                                     |

| Phase | Removal of                 | Cleaner                  | Placement                                 |
|-------|----------------------------|--------------------------|-------------------------------------------|
|       |                            | descaler in powder form. | verware basket or powder in the interior. |
| 2     | Food remnants and deposits | Machine cleaner          | Detergent dispenser                       |

To ensure optimal cleaning performance, the program doses the cleaners independently of each another during the relevant cleaning phase. Therefore, it's important to place the cleaners correctly.

Run Machine Care without dishware if the indicator for Machine Care lights up on the control panel or if advised to do so by the display. The indicator will go out after you have run Machine Care. If your appliance does not have a reminder function, we recommend performing Machine Care every 2 months.

## Run Machine Care


### Notes

- Run the Machine Care program without any dishes in the dishwasher.
- Only use machine care products and machine cleaners specially designed for dishwashers.
- Make sure that there are no aluminum items, e.g. vent hood grease filters or aluminum pans, in the interior of the appliance.
- If you have not run Machine Care after 3 wash cycles, the indicator for Machine Care will go out automatically.
- For optimal cleaning performance, ensure the correct placement of cleaners.
- Follow the safety instructions given on the packagings of the machine care products and machine cleaners.

1. Remove any heavy soiling in the interior with a damp cloth.
  2. Clean the filters.
  3. Place the machine care product in the appliance interior.  
Only use machine care products specially designed for dishwashers.
  4. Pour the machine cleaner into the detergent dispenser until it is filled completely.  
Do not place any additional machine cleaner in the appliance interior.
  5. Press Machine Care.
  6. Press Start.
- ✓ Machine Care is run.
- ✓ Once the wash cycle has ended, the indicator for Machine Care goes out.

## 16.5 Filter system

The filter system removes coarse soiling from the dishwashing cycle.

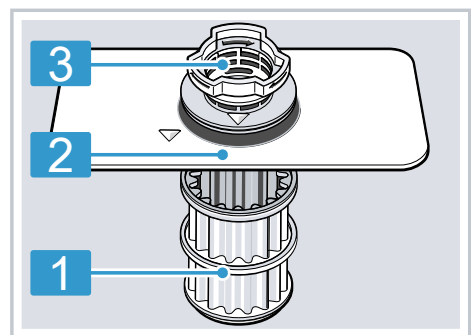

**1** Micro filter


2 Fine filter

3 Coarse filter


## Cleaning filters

Debris in the rinsing water can block the filters.


1. Check the filters for residue after each wash.
2. Turn the coarse filter counterclockwise ① and remove the filter system ②.
  - Ensure that foreign objects do not fall into the sump.

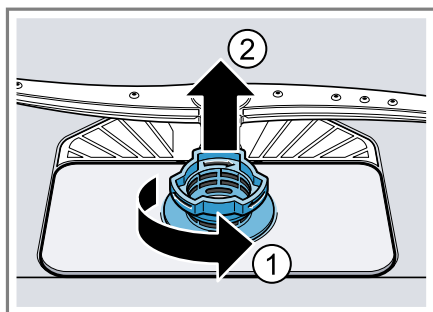


3. Pull down the micro filter to remove.

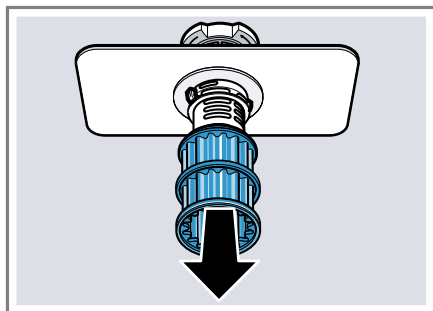

4. Press the locking catches together ① and lift the coarse filter out ②.

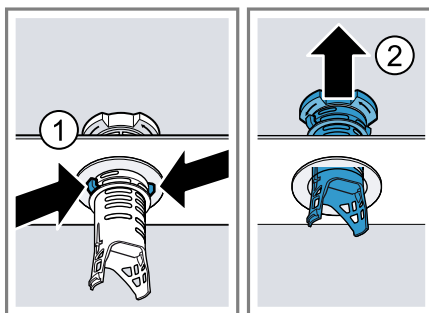

5. Clean the filter elements under running water. Carefully remove the rim of debris between the coarse filter and the fine filter.
6. Put the filter system back together. Ensure that the locking catches on the coarse filter click into position.
7. Insert the filter system into the appliance and turn the coarse filter clockwise.
  - Ensure that the arrow markings match up.

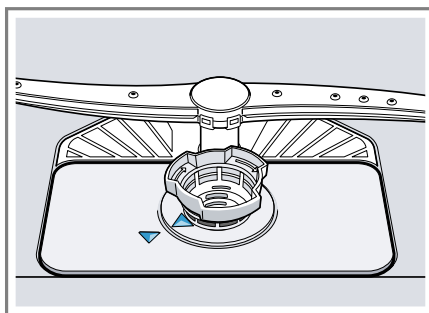

**Tip:** Connect your appliance to a mobile device. The Home Connect® app will tell you as soon as you need to clean the filters.


→ "Home Connect® ", Page 34

## 16.6 Cleaning the spray arms


Limescale and soiling in the dish-washing water may block the nozzles

and bearings on the spray arms. Clean the spray arms regularly.

1. Unscrew the upper spray arm ① and pull down to remove ②.

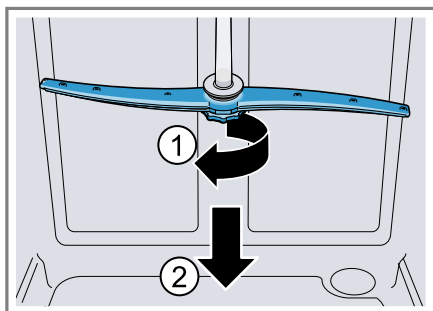

2. Pull up the lower spray arm to remove.

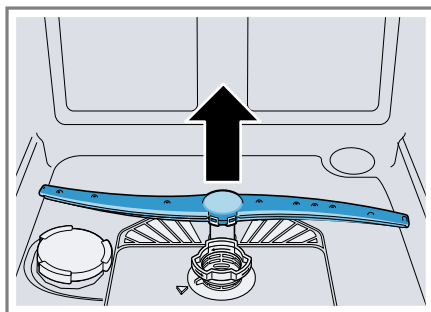

3. Check the outlet nozzles on the spray arms for blockages under running water and remove any foreign objects.
4. Insert the lower spray arm.
- ✓ The spray arm clicks into position.
5. Insert the upper spray arm and screw firmly in place.

## 17 Troubleshooting


You can eliminate minor issues on your appliance yourself. Please read the information on eliminating issues before contacting Customer Service. This may avoid unnecessary repair costs.

| Fault                          | Cause and troubleshooting                                                                                                                                                                                                                                        |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:20-60 lights up alternately. | <p>Appliance has detected that the heating element is calcified.</p> <ol style="list-style-type: none"> <li>1. Descale the appliance.</li> <li>2. Operate the appliance with the Water softening system.<sup>1</sup></li> </ol>                                  |
| E:21-30 lights up alternately. | <p>Intake opening of Zeolite container is covered by items of dishware.</p> <ul style="list-style-type: none"> <li>► Rearrange the dishware in the appliance so the Intake opening of the Zeolite container → <i>Page 10</i> is no longer obstructed.</li> </ul> |
| E:30-00 lights up alternately. | <p>Water protection system is activated.</p> <ol style="list-style-type: none"> <li>1. Close the water supply valve.</li> <li>2. Contact customer service → <i>Page 52</i>.</li> </ol>                                                                           |

<sup>1</sup> Depending on the appliance specifications

| Fault                                                                  | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:31-00 lights up alternately.                                         | Water protection system is activated.<br><ol style="list-style-type: none"><li>1. Close the water supply valve.</li><li>2. Contact customer service → <i>Page 52</i>.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| E:32-00 lights up alternately or indicator for water supply lights up. | Water supply valve is closed.<br><ol style="list-style-type: none"><li>1. Open the water supply valve.</li><li>2. Terminate the wash cycle.<br/>→ <i>"Terminating the wash cycle", Page 31</i></li><li>3. Start a wash cycle.</li><li>4. If the problem occurs again:<br/>▶ Contact the customer service.<br/>→ <i>"Customer Service", Page 52</i></li></ol><br>Inlet hose is kinked or blocked.<br>▶ Contact customer service.<br>→ <i>"Customer Service", Page 52</i><br><br>Water supply valve is jammed or clogged up.<br><ol style="list-style-type: none"><li>1. Open the water supply valve.<br/>The flow rate must be at least 10 l/min when the water supply is open.</li><li>2. If the problem occurs again:<br/>▶ Contact customer service.<br/>→ <i>"Customer Service", Page 52</i></li></ol> |
| E:34-00 lights up alternately.                                         | Water is continuously running into the appliance.<br><ol style="list-style-type: none"><li>1. Close the water supply valve.</li><li>2. Contact customer service → <i>Page 52</i>.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| E:61-02 lights up alternately.                                         | Not an appliance error. The drain pump cover is loose or a foreign object is blocking the pump.<br>▶ Secure the cover of the drain pump so it clicks into place or clean the drain pump.<br>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| E:61-03 lights up alternately. Water is not draining.                  | Not an appliance error. Garbage disposal is still plugged or the drain hose is kinked.<br>▶ Check that the garbage disposal plug is removed and that the drain hose is not kinked.<br>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| Fault                                                                                  | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:61-03 lights up alternately. Water is not draining.                                  | <p>Not an appliance error. The drain pump cover is loose or a foreign object is blocking the pump.</p> <ul style="list-style-type: none"> <li>► Secure the cover of the drain pump so it clicks into place or clean the drain pump.</li> </ul>  <p>Not an appliance error. High loop is missing and/or debris flushed back into drain hose and blocked it.</p> <ul style="list-style-type: none"> <li>► Be sure there is a high loop in the drain hose and that no debris has flushed back into the hose.</li> </ul>                                             |
| E:90-01 lights up alternately.                                                         | <p>Power voltage is too low.<br/>There is no problem with the appliance.</p> <ol style="list-style-type: none"> <li>1. Call an electrician.</li> <li>2. Have the power voltage and electrical installation checked by an electrician.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                  |
| E:92-40 lights up alternately.                                                         | <p>Filters are soiled or blocked.</p> <ul style="list-style-type: none"> <li>► Clean the filters.</li> </ul> <p>→ <i>"Cleaning filters", Page 38</i></p>                                                                                                                                                                                                                                                                                                                                                                                                         |
| <p>A different error code appears in the display window.</p> <p>E:01-00 to E:90-10</p> | <p>There is a technical issue.</p> <ol style="list-style-type: none"> <li>1. Press ON/OFF.</li> <li>2. Pull out the power cord plug of the appliance or switch off the breaker.</li> <li>3. Wait at least 2 minutes.</li> <li>4. Insert the power cord plug of the appliance in a power outlet or switch on the breaker.</li> <li>5. Switch the appliance on.</li> <li>6. If the problem occurs again: <ul style="list-style-type: none"> <li>► Press ON/OFF.</li> <li>► Turn off the water faucet.</li> <li>► Pull out the power cord plug.</li> <li>► Contact customer service → <i>Page 52</i> and give the error code.</li> </ul> </li> </ol> |
| Dishware is not dry.                                                                   | <p>No rinse aid used or dosage set too low.</p> <ol style="list-style-type: none"> <li>1. Add Rinse aid → <i>Page 23</i>.</li> <li>2. Set the amount of rinse aid to be dispensed.<br/>→ <i>"Setting the amount of rinse aid", Page 24</i></li> </ol>                                                                                                                                                                                                                                                                                                                                                                                             |
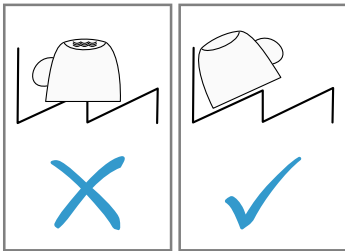
| Fault                                          | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dishware is not dry.                           | <p data-bbox="370 134 1049 193">Cycle or cycle option has no drying phase, or drying phase is too short.</p> <ul data-bbox="370 193 1049 252" style="list-style-type: none"> <li data-bbox="370 193 1049 252">▶ Select a wash cycle with drying. → <i>Page 13</i></li> </ul> <p data-bbox="370 252 1049 280">Some option buttons decrease the drying result.</p> <hr/> <p data-bbox="370 280 1049 309">Water collects in recesses of dishware or silverware.</p> <ul data-bbox="370 309 1049 338" style="list-style-type: none"> <li data-bbox="370 309 1049 338">▶ Position dishware at an angle where possible.</li> </ul> <div data-bbox="370 328 714 579">  </div> <hr/> <p data-bbox="370 592 1049 651">The combined detergent used has a poor drying performance.</p> <ol data-bbox="370 651 1049 740" style="list-style-type: none"> <li data-bbox="370 651 1049 679">1. Use rinse aid to improve drying performance.</li> <li data-bbox="370 679 1049 740">2. Use a different combined detergent with a better drying performance.</li> </ol> <hr/> <p data-bbox="370 753 1049 812">Extra Dry/intensive drying not activated to improve drying performance.</p> <ul data-bbox="370 812 1049 841" style="list-style-type: none"> <li data-bbox="370 812 1049 841">▶ Activate Extra Dry/intensive drying.</li> </ul> <hr/> <p data-bbox="370 853 1049 912">Dishware removed too early or drying process not yet ended.</p> <ol data-bbox="370 912 1049 1002" style="list-style-type: none"> <li data-bbox="370 912 1049 941">1. Wait until the program ends.</li> <li data-bbox="370 941 1049 1002">2. Only remove dishware 30 minutes after the program has ended.</li> </ol> <hr/> <p data-bbox="370 1015 1049 1043">Rinse aid used has a limited drying performance.</p> <ul data-bbox="370 1043 1049 1072" style="list-style-type: none"> <li data-bbox="370 1043 1049 1072">▶ Use a name-brand rinse aid.</li> </ul> <p data-bbox="370 1072 1049 1102">Eco products may have limited effectiveness.</p> |
| Silverware is not dry.                         | <p data-bbox="370 1115 1049 1174">Silverware not arranged properly in the silverware basket or silverware drawer.</p> <p data-bbox="370 1174 1049 1203">Droplets can form on the contact points of silverware.</p> <ol data-bbox="370 1203 1049 1294" style="list-style-type: none"> <li data-bbox="370 1203 1049 1262">1. Arrange silverware individually where possible.<br/>→ <i>Page 27</i></li> <li data-bbox="370 1262 1049 1294">2. Avoid points of contact.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Appliance interior still wet after wash cycle. | <p data-bbox="370 1307 1049 1426">Not an error. Condensation drying creates water droplets in the tub. This is normal. Moisture in the air condenses on the inside walls of the appliance, runs off, and is pumped out.</p> <p data-bbox="370 1426 1049 1458">No action required.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

| Fault                      | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Food remnants on dishware. | <p data-bbox="359 129 1048 193">Dishware was placed too close together or rack is overfilled.</p> <ol data-bbox="359 197 1048 288" style="list-style-type: none"> <li data-bbox="359 197 1048 229">1. Arrange dishware with sufficient space in between. The spray jets must reach the surfaces of the dishware.</li> <li data-bbox="359 234 1048 288">2. Avoid points of contact.</li> </ol> <hr/> <p data-bbox="359 293 1048 325">Spray arm rotation is blocked.</p> <ul data-bbox="359 330 1048 384" style="list-style-type: none"> <li data-bbox="359 330 1048 384">▶ Arrange dishware so it does not obstruct spray arm rotation.</li> </ul> <hr/> <p data-bbox="359 389 1048 421">Spray arm nozzles are blocked.</p> <ul data-bbox="359 426 1048 458" style="list-style-type: none"> <li data-bbox="359 426 1048 458">▶ Clean the spray arms.</li> </ul> <p data-bbox="359 462 1048 486">→ <i>"Cleaning the spray arms", Page 38</i></p>  <hr/> <p data-bbox="359 608 1048 639">Filters are dirty.</p> <ul data-bbox="359 644 1048 676" style="list-style-type: none"> <li data-bbox="359 644 1048 676">▶ Clean the filters.</li> </ul> <p data-bbox="359 681 1048 705">→ <i>"Cleaning filters", Page 38</i></p>  <hr/> <p data-bbox="359 826 1048 858">Filters are inserted incorrectly and/or not engaged.</p> <ol data-bbox="359 863 1048 959" style="list-style-type: none"> <li data-bbox="359 863 1048 927">1. Insert the filters properly.<br/>→ <i>"Filter system", Page 37</i></li> <li data-bbox="359 932 1048 959">2. Twist filters into place.</li> </ol> <hr/> <p data-bbox="359 963 1048 995">Selected wash cycle is too light.</p> <ul data-bbox="359 1000 1048 1032" style="list-style-type: none"> <li data-bbox="359 1000 1048 1032">▶ Select a more intensive wash program.</li> </ul> <hr/> <p data-bbox="359 1037 1048 1128">Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul data-bbox="359 1133 1048 1187" style="list-style-type: none"> <li data-bbox="359 1133 1048 1187">▶ Only remove large remnants of food and do not pre-rinse dishware.</li> </ul> <hr/> <p data-bbox="359 1192 1048 1256">Tall narrow containers in corner areas are not rinsed out adequately.</p> <ul data-bbox="359 1260 1048 1315" style="list-style-type: none"> <li data-bbox="359 1260 1048 1315">▶ Do not position tall narrow containers at too great an angle or in corner areas.</li> </ul> <hr/> <p data-bbox="359 1319 1048 1351">Upper rack on right and left not set to same height.</p> <ul data-bbox="359 1356 1048 1410" style="list-style-type: none"> <li data-bbox="359 1356 1048 1410">▶ Set the upper rack on the left and right to the same height.</li> </ul> <p data-bbox="359 1415 1048 1447">→ <i>"Upper rack", Page 17</i></p> |

| Fault                                                                   | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detergent residue in the appliance                                      | Lid of the detergent dispenser is blocked by items of dishware and will not open.<br><b>1.</b> Arrange dishware in the upper rack so the tab collecting tray is not obstructed by dishware.<br>→ <i>"Loading dishware", Page 27</i><br>Items of dishware are blocking the dispenser lid.<br><b>2.</b> Do not place dishware or fragrance dispensers in the tab collecting tray. |
|                                                                         | The lid of the detergent dispenser is blocked by the tab and will not open.<br>▶ Position the tab in the detergent dispenser cross-wise, not vertically.                                                                                                                                                                                                                        |
|                                                                         | Tabs are used in the quick or short cycle. There is not enough time for the tab to dissolve.<br>▶ Select a more intensive Wash cycle or use Powder detergent.                                                                                                                                                                                                                   |
|                                                                         | Detergent may lose its cleaning or dissolving ability after being stored a long time, or the detergent is clumped together.<br>▶ Change your Detergent.                                                                                                                                                                                                                         |
|                                                                         | Water spots on plastic parts.                                                                                                                                                                                                                                                                                                                                                   |
| Wipeable or water-soluble coatings inside the appliance or on the door. | There is detergent residue. These coatings cannot generally be removed with chemicals.<br>▶ Change your Detergent.<br>▶ Scrub the appliance by hand.                                                                                                                                                                                                                            |
|                                                                         | White coating is deposited inside the appliance.<br><b>1.</b> Adjust the water softening system correctly.<br>→ <i>"Setting the water softening system", Page 22</i><br>In most cases you will need to increase the setting.<br><b>2.</b> If necessary, change your detergent.                                                                                                  |
|                                                                         | Special salt dispenser is not screwed tight.<br>▶ Screw the special salt dispenser tight.                                                                                                                                                                                                                                                                                       |

| <b>Fault</b>                                                                                                                                     | <b>Cause and troubleshooting</b>                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There are stubborn white coatings on the dishware, inside the appliance or on the door.                                                          | <p>There is detergent residue. These coatings cannot generally be removed with chemicals.</p> <ul style="list-style-type: none"> <li>► Change your Detergent.</li> <li>► Scrub the appliance by hand.</li> </ul>                                                                                                                                                                                             |
|                                                                                                                                                  | <p>Hardness range is set incorrectly or the water hardness is too high.</p> <ul style="list-style-type: none"> <li>► Set the Water softening system to the water hardness or add special salt.</li> </ul>                                                                                                                                                                                                    |
|                                                                                                                                                  | <p>3in1/organic/eco detergent is not effective enough.</p> <ul style="list-style-type: none"> <li>► Set the Water softening system to the water hardness and use separate detergents (name brand, special salt, rinse aid).</li> </ul>                                                                                                                                                                       |
|                                                                                                                                                  | <p>Too little detergent is being used.</p> <ul style="list-style-type: none"> <li>► Increase the amount of detergent used or change Detergent .</li> </ul>                                                                                                                                                                                                                                                   |
|                                                                                                                                                  | <p>Selected wash cycle is too light.</p> <ul style="list-style-type: none"> <li>► Select a more intensive wash program.</li> </ul>                                                                                                                                                                                                                                                                           |
| Tea residue or lipstick marks on dishware.                                                                                                       | <p>Dishwashing temperature is too low.</p> <ul style="list-style-type: none"> <li>► Select a program with a higher dishwashing temperature.</li> </ul>                                                                                                                                                                                                                                                       |
|                                                                                                                                                  | <p>Too little detergent is being used or is unsuitable.</p> <ul style="list-style-type: none"> <li>► Use a suitable Detergent and follow the manufacturer's instructions for the amount to be used.</li> </ul>                                                                                                                                                                                               |
|                                                                                                                                                  | <p>Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul style="list-style-type: none"> <li>► Only remove large remnants of food and do not pre-rinse dishware.</li> </ul>                                                                                                                                            |
| There are colored coatings (blue, yellow, brown) inside the appliance or on stainless steel dishware that are difficult or impossible to remove. | <p>The formation of films is due to substances contained in vegetables (cabbage, celery, potatoes, noodles, etc.) or tap water (manganese).</p> <ul style="list-style-type: none"> <li>► Clean the appliance.</li> </ul> <p>You can remove coatings with Mechanical cleaning or a machine cleaning product. It may not always be possible to completely remove coatings but they are harmless to health.</p> |
|                                                                                                                                                  | <p>The formation of films is due to metal components on silver or aluminum dishware.</p> <ul style="list-style-type: none"> <li>► Clean the appliance.</li> </ul> <p>You can remove coatings with Mechanical cleaning or a machine cleaning product. It may not always be possible to completely remove coatings but they are harmless to health.</p>                                                        |

| Fault                                                                                                                                            | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There are colored coatings (blue, yellow, brown) inside the appliance or on stainless steel dishware that are difficult or impossible to remove. | sible to completely remove coatings but they are harmless to health.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| There are colored deposits (yellow, orange, brown) that are easy to remove inside the appliance (mainly at the bottom).                          | <p>The formation of films is due to ingredients of food remnants and tap water (limescale), "soaplike".</p> <ol style="list-style-type: none"> <li>1. Check the setting of the water softening system.<br/>→ <i>"Setting the water softening system", Page 22</i></li> <li>2. Add special salt.</li> <li>3. If you are using combined detergents (tabs), activate the water softening system.</li> </ol> <p>Follow the information on detergents.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Plastic parts inside the appliance are discolored.                                                                                               | <p>Plastic parts inside the appliance may become discolored over the life of the dishwasher.</p> <ul style="list-style-type: none"> <li>► Discoloration may come about and will not impair functioning of the appliance.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Plastic parts are discolored.                                                                                                                    | <p>Dishwashing temperature is too low.</p> <ul style="list-style-type: none"> <li>► Select a program with a higher dishwashing temperature.</li> </ul> <p>Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul style="list-style-type: none"> <li>► Only remove large remnants of food and do not pre-rinse dishware.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| There are removable streaks on glasses, glassware with a metallic appearance and silverware.                                                     | <p>Amount of rinse aid to be dispensed is set too high.</p> <ul style="list-style-type: none"> <li>► Set the rinse aid system to a lower setting.<br/>→ <i>"Setting the amount of rinse aid", Page 24</i></li> </ul> <p>No rinse aid has been added.</p> <ul style="list-style-type: none"> <li>► Add rinse aid.<br/>→ <i>"Adding rinse aid", Page 23</i></li> </ul> <p>There is detergent residue in the final rinse. Lid of detergent dispenser is blocked by dishware and will not open fully.</p> <ol style="list-style-type: none"> <li>1. Arrange dishware in the upper rack so the tab collecting tray is not obstructed by dishware.<br/>→ <i>"Loading dishware", Page 27</i></li> </ol> <p>Items of dishware are blocking the dispenser lid.</p> <ol style="list-style-type: none"> <li>2. Do not place dishware or fragrance dispensers in the tab collecting tray.</li> </ol> |

| <b>Fault</b>                                                                                 | <b>Cause and troubleshooting</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There are removable streaks on glasses, glassware with a metallic appearance and silverware. | <p>Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul style="list-style-type: none"> <li>▶ Only remove large remnants of food and do not pre-rinse dishware.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Irreversible clouding of glassware.                                                          | <p>Glasses are not dishwasher-proof, only suitable for dishwashers.</p> <ul style="list-style-type: none"> <li>▶ Use dishwasher-proof glasses.</li> </ul> <p>Glasses are usually only suitable for cleaning in a dishwasher, i.e. long-term wear or long-term changes must be expected.</p> <ul style="list-style-type: none"> <li>▶ Avoid a lengthy steam phase (standing time after wash cycle ends).</li> <li>▶ Use a program with a lower temperature.</li> <li>▶ Set the softening system to the water hardness.</li> </ul> <p>→ <i>"Setting the water softening system", Page 22</i></p> <ul style="list-style-type: none"> <li>▶ Use detergent with a glass protection component.</li> </ul> |
| Detergent residue is present in the detergent dispenser or the tab collecting tray.          | <p>Spray arms were blocked by dishware so detergent was not rinsed out.</p> <ul style="list-style-type: none"> <li>▶ Check that the spray arms are not blocked and can rotate freely.</li> </ul> <p>Detergent dispenser was damp when detergent was added.</p> <ul style="list-style-type: none"> <li>▶ Only add detergent to the detergent dispenser when dry.</li> </ul>                                                                                                                                                                                                                                                                                                                          |
| Excessive formation of foam occurs.                                                          | <p>Hand soap got in the rinse aid dispenser.</p> <ul style="list-style-type: none"> <li>▶ Immediately add rinse aid to the dispenser.</li> </ul> <p>→ <i>"Adding rinse aid", Page 23</i></p> <p>Rinse aid has been spilled.</p> <ul style="list-style-type: none"> <li>▶ Remove the rinse aid with a cloth.</li> </ul> <p>Detergent or machine care product used causes excessive foaming.</p> <ul style="list-style-type: none"> <li>▶ Change the brand of detergent.</li> </ul>                                                                                                                                                                                                                   |
| Connection to home network is not established.                                               | <p>WLAN on router is not active.</p> <ul style="list-style-type: none"> <li>▶ Check the wireless network connection of your router.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| WLAN display is flashing.                                                                    | <p>Connection to home network is not available.</p> <ul style="list-style-type: none"> <li>▶ Activate the wireless network connection on your router.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Home Connect cannot be implemented correctly.                                                | <p>Home Connect set incorrectly.</p> <ul style="list-style-type: none"> <li>▶ Please consult the documents supplied for Home Connect®.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

| Fault                                                | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Home Connect cannot be implemented correctly.        | <p>There is a technical error.</p> <ul style="list-style-type: none"> <li>▶ Please consult the information on support in the documents supplied for Home Connect®.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Special salt refill indicator lights up.             | <p>Insufficient special salt.</p> <ul style="list-style-type: none"> <li>▶ Add Special salt.</li> </ul> <hr/> <p>Sensor does not detect special salt tablets.</p> <ul style="list-style-type: none"> <li>▶ Do not use special salt tablets.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Refill indicator for special salt does not light up. | <p>Water softening system is switched off.</p> <ul style="list-style-type: none"> <li>▶ Set the water softening system.</li> </ul> <p>→ <i>"Setting the water softening system", Page 22</i></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Refill indicator for rinse aid lights up.            | <p>No rinse aid.</p> <ol style="list-style-type: none"> <li>1. Add Rinse aid → <i>Page 23</i>.</li> <li>2. Set the amount of rinse aid to be dispensed.</li> </ol> <p>→ <i>"Setting the amount of rinse aid", Page 24</i></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Refill indicator for rinse aid does not light up.    | <p>Rinse aid system is switched off.</p> <ul style="list-style-type: none"> <li>▶ Set the amount of rinse aid.</li> </ul> <p>→ <i>"Setting the amount of rinse aid", Page 24</i></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Display flashes.                                     | <p>Appliance door is not closed properly.</p> <ul style="list-style-type: none"> <li>▶ Close the appliance door.</li> <li>▶ Arrange the dishware so that no parts project beyond the rack and prevent the appliance door from closing properly.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| All LEDs light up or flash.                          | <p>A software update is possibly installing.</p> <ol style="list-style-type: none"> <li>1. Wait until the software update has been installed. This process can take approx. 30 minutes.</li> <li>2. If the appliance is not ready to use after 30 minutes, perform a reset.</li> </ol> <ul style="list-style-type: none"> <li>▶ Press the main switch button for approx. 4 seconds.</li> <li>✓ Your appliance is resetting.</li> </ul> <hr/> <p>Electronics have detected a fault.</p> <ol style="list-style-type: none"> <li>1. Press the main switch button for approx. 4 seconds.</li> </ol> <p>→ <i>"Controls", Page 12</i></p> <p>The appliance is reset and restarted.</p> <ol style="list-style-type: none"> <li>2. If the problem occurs again:</li> </ol> <ul style="list-style-type: none"> <li>▶ Switch off the appliance.</li> <li>▶ Unplug the power plug or switch off the circuit breaker in the fuse box.</li> <li>▶ Wait at least 2 minutes.</li> <li>▶ Switch on the circuit breaker in the fuse box or plug in the power plug.</li> <li>▶ Switch on the appliance.</li> </ul> |

| Fault                                                     | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All LEDs light up or flash.                               | <p><b>3.</b> If the problem occurs again:</p> <ul style="list-style-type: none"> <li>▶ Contact customer service.</li> <li>→ <i>"Customer Service", Page 52</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                         |
| UP appears on the display.                                | <p>A software update is available.</p> <ul style="list-style-type: none"> <li>▶ Press the remote start button to install the software update.</li> <li>✓ After a successful software update, "Suc" appears on the display for a few seconds.</li> </ul>                                                                                                                                                                                                                                                                           |
| Water is left in the appliance at the end of the program. | <p>Filter system or area under the filters is blocked.</p> <ol style="list-style-type: none"> <li><b>1.</b> Clean the Filters → <i>Page 38.</i></li> <li><b>2.</b> Clean the Drain pump → <i>Page 51.</i></li> </ol> <hr/> <p>Program has not yet ended.</p> <ul style="list-style-type: none"> <li>▶ Wait until the program ends or terminate the program with <b>Reset</b>.</li> <li>▶ → <i>"Terminating the wash cycle", Page 31</i></li> </ul>                                                                                |
| Appliance cannot be switched on or operated.              | <p>Software update is taking place.</p> <ul style="list-style-type: none"> <li>▶ Wait until the software update has finished.</li> </ul> <hr/> <p>Appliance functions have failed.</p> <ol style="list-style-type: none"> <li><b>1.</b> Pull out the power cord plug or switch off the breaker.</li> <li><b>2.</b> Wait at least 2 minutes.</li> <li><b>3.</b> Connect the appliance to the power supply.</li> <li><b>4.</b> Switch the appliance on.</li> </ol>                                                                  |
| Appliance does not start.                                 | <p>The breaker has tripped.</p> <ul style="list-style-type: none"> <li>▶ Check the relevant breaker.</li> </ul> <hr/> <p>Power cord is not inserted.</p> <ol style="list-style-type: none"> <li><b>1.</b> Check whether the power outlet is working.</li> <li><b>2.</b> Check whether the power cord plug is properly inserted in the power outlet and on the rear of the appliance.</li> </ol> <hr/> <p>Appliance door is not closed properly.</p> <ul style="list-style-type: none"> <li>▶ Close the appliance door.</li> </ul> |
| Wash cycle starts up automatically.                       | <p>You did not wait until the cycle ended.</p> <ul style="list-style-type: none"> <li>▶ → <i>"Terminating the wash cycle", Page 31</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                 |
| Appliance stops during the cycle or cuts out.             | <p>Appliance door is not closed properly.</p> <ul style="list-style-type: none"> <li>▶ Close the appliance door.</li> </ul> <hr/> <p>Power and/or water supply has been interrupted.</p> <ol style="list-style-type: none"> <li><b>1.</b> Check the power supply.</li> <li><b>2.</b> Check the water supply.</li> </ol>                                                                                                                                                                                                           |

| Fault                                            | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance stops during the cycle or cuts out.    | <p>Upper rack is pressing against inner door and preventing appliance door from being closed securely.</p> <ul style="list-style-type: none"><li>▶ Check whether the rear panel of the appliance is being pressed in by a power outlet or a hose holder that has not been removed.</li><li>▶ Arrange the dishware so that no parts project beyond the rack and prevent the appliance door from closing properly.</li></ul>                                         |
| Appliance door cannot be closed.                 | <p>Door lock has been activated.</p> <ol style="list-style-type: none"><li>1. Close the appliance door with greater force.</li><li>2. If the installation conditions prevent quick realignment of the closing system, you can move the door lock back to the home position using a spoon.</li></ol> <p>See the animation for how to move the door lock to the home position.</p>  |
|                                                  | <p>Door cannot be closed due to installation method.</p> <ul style="list-style-type: none"><li>▶ Check whether the appliance has been installed properly.</li></ul> <p>When closed, the appliance door, its decor or attached parts should not knock against adjacent cabinets or the worktop.</p>                                                                                                                                                                 |
| Lid on the detergent dispenser cannot be closed. | <p>Detergent dispenser or lid are blocked by sticky detergent residue.</p> <ul style="list-style-type: none"><li>▶ Remove detergent residue.</li></ul>                                                                                                                                                                                                                                                                                                             |
| Filling valves making knocking noises.           | <p>Caused by the domestic installation. No fault present in the appliance. Does not affect functioning of the appliance.</p> <ul style="list-style-type: none"><li>▶ Can only be remedied in the home installation.</li></ul>                                                                                                                                                                                                                                      |
| Noise level varies                               | <p>The noise level can vary, depending on what kind of dishes are loaded and where they are placed.</p> <ul style="list-style-type: none"><li>▶ Make sure the dishware is loaded in the most secure way, resting on the tines and not hitting each other.</li></ul> <p>→ <i>"Loading dishware", Page 27</i></p> <p>Spray arm is striking dishes.</p> <ul style="list-style-type: none"><li>▶ Arrange dishware so the spray arms do not strike dishware.</li></ul>  |

| Fault              | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Noise level varies | <p>With a small load the water jets directly strike against the tub.</p> <ul style="list-style-type: none"> <li>▶ Distribute the dishware evenly.</li> <li>▶ Load the appliance with more dishware.</li> </ul> <hr/> <p>Light items of dishware move about during the wash cycle.</p> <ul style="list-style-type: none"> <li>▶ Position light items of dishware securely.</li> </ul> |

## 17.1 Clean drain pump


Large food remnants or foreign objects can block the drain pump. As soon as the dishwashing water no longer drains properly, the drain pump must be cleaned.

### CAUTION


There may be some sharp debris, such as glass fragments, blocking the drain pump.

- ▶ Use caution when removing parts for cleaning.

1. Disconnect the appliance from the power supply.
2. Remove the upper and lower rack.
3. Remove the filter system.
4. Scoop out any water. Use a sponge if necessary.
5. Pry the pump cover off using a spoon and grip it by the cross-piece.

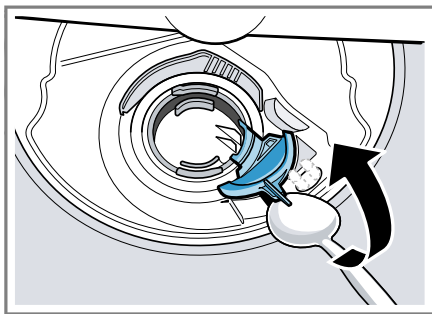

6. Lift the pump cover diagonally inward and take it out.
- ✓ Now you can reach the impeller with your hand.
7. Remove any food remnants or foreign objects in the area of the impeller.
8. Insert the pump cover ① and press down ②.

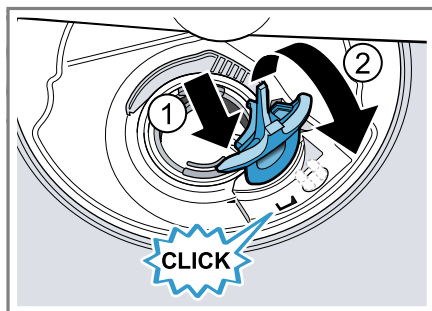

- ✓ The pump cover clicks into position.
9. Install the filter system.
  10. Insert the upper and lower rack.
  11. Connect the appliance to the power supply.

## 18 Transportation, storage and disposal

### 18.1 Removing the appliance

1. Disconnect the appliance from the power supply.
2. Close the water supply valve.
3. Detach the drain connection.

4. Detach the water connection.
5. Loosen any screws fastening the appliance to cabinet parts.
6. Remove the base panel if fitted.
7. Pull the appliance out carefully, along with the hose behind it.

## 18.2 Vacation and Storage

### NOTICE

Preparing your appliance for vacation

- ▶ Before leaving for vacation during warmer weather, besides turning off the main valve, also turn off water supply at the nearest point to the dishwasher. During colder weather, please follow the instructions for winterizing your appliance below.

Winterizing your appliance

- ▶ If your dishwasher will be unused for an extended period of time in a location that experiences freezing temperatures (vacation home or through a vacation period), have your dishwasher winterized by a professional service.

## 18.3 Transporting the appliance

To avoid damage to the appliance, empty it before transporting.

**Note:** Always transport the appliance upright to prevent residual water getting into the machine's controls and damaging the appliance.

1. Remove dishware from the appliance.
2. Secure loose parts.
3. Switch on the appliance.  
→ *Page 30*
4. Select the cycle with the highest temperature.
5. Start the cycle. → *Page 31*

6. To drain the appliance, terminate the cycle after approx. 4 minutes.  
→ *"Terminating the wash cycle", Page 31*
7. Switch off the appliance.
8. Close the water supply valve.
9. To empty the residual water out of the appliance, detach the supply hose and let the water drain out.

## 18.4 Disposal of your old appliance

Environmentally sound disposal allows valuable raw materials to be recycled.

### WARNING

Avoid a risk of entrapment upon disposal.

- ▶ Unplug the appliance from the power outlet.
- ▶ Cut the power cord and remove the door upon discarding the appliance.
- ▶ Check your local area for large appliance recycling programs.

---

## 19 Customer Service

With any warranty repair, we will make sure your appliance is repaired by an authorized service provider using genuine replacement parts. We use only genuine replacement parts for all repairs.

You can obtain function-relevant and storable genuine spare parts from our Customer Service for up to 15 years from the date on which your appliance was placed on the market. For more information, please contact our Customer Service team.

Detailed information on the warranty period and terms of warranty can be found in the Statement of Limited

Product Warranty, from your retailer, or on our website.

USA:

1-800-944-2904

[www.bosch-home.com/us/owner-support/get-support](http://www.bosch-home.com/us/owner-support/get-support)

[www.bosch-home.com/us/shop](http://www.bosch-home.com/us/shop)

CA:

1-800-944-2904

[www.bosch-home.ca/en/service/get-support](http://www.bosch-home.ca/en/service/get-support)

[www.bosch-home.ca/en/service/cleaners-and-accessories](http://www.bosch-home.ca/en/service/cleaners-and-accessories)

For assistance with connecting to Home Connect®, you can also view instructions here:

[www.home-connect.com/us/en/help-support/set-up](http://www.home-connect.com/us/en/help-support/set-up)

### 19.1 Model number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

If you contact Customer Service, you will need the product number (E-Nr.), production number (FD), and consecutive numbering (Z-Nr.), which you can find on the appliance's rating label.

The rating plate is located inside the appliance door.

→ *"Familiarizing yourself with your appliance", Page 10*

Making a note of your appliance's details and the Customer Service telephone number will enable you to find them again quickly.

## 19.2 AquaStop® Plus Pledge

In addition to the standard warranty provided by BSH, BSH will also compensate customers for damage caused by a specific fault in the AquaStop system giving rise to a valid warranty claim. Compensation will be provided under the following conditions:

- If water damage is caused by a defect in materials or workmanship in the AquaStop system, BSH will compensate customers reasonable and verifiable damages.
- A condition of all warranty claims is the appliance with AquaStop must have been installed and connected correctly in accordance with all instructions; this also includes a properly installed AquaStop extension (genuine accessories). The warranty does not cover defective feed lines or fittings leading to the AquaStop connection at the tap.

## 20 Technical specifications

|                |                                                                                                               |
|----------------|---------------------------------------------------------------------------------------------------------------|
| Weight         | Max.: 60 kg/132 lbs                                                                                           |
| Voltage        | 120 V, 60 Hz                                                                                                  |
| Power rating   | 1440 W                                                                                                        |
| Fuse           | 12 A                                                                                                          |
| Water pressure | <ul style="list-style-type: none"> <li>■ Min. 7.25 psi (50 kPa)</li> <li>■ Max. 145 psi (1000 kPa)</li> </ul> |
| Inlet rate     | Min. 2.6 gal/min                                                                                              |

|                   |                                                |
|-------------------|------------------------------------------------|
| Water temperature | Cold water.<br>Hot water max.: 140 °F/ (60 °C) |
| Load capacity     | 15 place settings                              |

**20.1 Information regarding  
Free and Open Source  
Software**

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable license information is stored on your home appliance. You can also access the applicable license information via your Home Connect® app: "Profile -> Legal information -> License Information".<sup>1</sup> You can also download the license information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The relevant source code will be made available to you on request. Please send your request to [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

<sup>1</sup> Depending on the appliance specifications

---

## Recursos y ayuda en línea en español

Muchos manuales están disponibles en línea en inglés, francés y español. Para acceder a manuales de modelos específicos y otros documentos en español:

- Visite [www.bosch-home.com/us/owner-support/owner-manuals](http://www.bosch-home.com/us/owner-support/owner-manuals) o escanee el código QR.




- Introduzca el número de producto (E-Nr.) que encontrará en la placa de características del aparato.
- Seleccione o descargue el manual o documento que desee.



# Bosch Home Connect App

Connect your home appliance today and enjoy the following benefits:

- **Targeted appliance care:** Use tips for care, updates and status checks via the app to ensure a long service life for your appliance.
- **Optimal appliance performance:** Maximize washing and drying results with settings tips and extra programs in the app.
- **Smart operation:** Start and control your appliance from anywhere. Automatic Smart Start options, perfectly tailored to your needs.

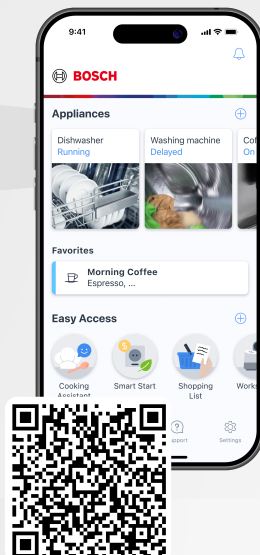

**BOSCH**  
HOME APPLIANCES  
SERVICE

## Looking for help? You'll find it here.

No matter what, no matter when: Bosch is here to support you. We're here to assist with usage instructions, cleaning tips, accessories & parts, troubleshooting, and repairs. Find online resources such as FAQs, how-to-videos, manuals, warranties and authorized Bosch servicers at:

**[www.bosch-home.com/us/owner-support/get-support](http://www.bosch-home.com/us/owner-support/get-support)**

Contact us:

**Please have your model Number (E-Nr) ready when contacting us.**

1-800-944-2904

**[www.bosch-home.com/us/owner-support/contact-us](http://www.bosch-home.com/us/owner-support/contact-us)**

### **BSH Home Appliances Corporation**

1901 Main Street, Suite 600

Irvine, CA 92614

USA

[www.bosch-home.com](http://www.bosch-home.com)

1-800-944-2904

© 2026 BSH Home Appliances Corporation



**9002072787** (060518) 650 V5

en-us