



QUICK START GUIDE

CONGRATULATIONS AND WELCOME TO WHIRLPOOL

Freestanding Range

Scan QR code for
OWNER'S MANUAL
+ **USER GUIDE**



FIND YOUR MODEL SERIES. The model number plate is located behind the oven door on the top right side of the oven frame. Locate your model number and see below:
Gas: WFGS3030 | WFGS3130 | WFGS3330 | WFGS2030

GETTING STARTED

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS located in your appliance's Owner's Manual, before operating this appliance.

USING YOUR OVEN

- 1 Set mode and temperature to desired selection
- 2 Press **START** to begin preheating
- 3 Place food inside oven once preheated
- 4 Enter cook time (optional). Refer to the User Guide for details.
- 5 Press **CANCEL** during or after cooking to turn off oven

USING YOUR COOKTOP

- 1 Place cookware on the element (electric) or burner (gas)
- 2 Push in and turn the **CONTROL** knob
- 3 Position knob anywhere between High and Med or Low (Melt)
- 4 Post cooking turn the knob to **OFF** position

NOTES: For more detailed instructions on specific functions, see the online User Guide.
IMPORTANT: Retain this guide for future use.

TIPS & TRICKS

POSITIONING RACKS AND BAKEWARE

RACKS

- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Make sure racks are level.

IMPORTANT

To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.

ALUMINUM FOIL

To avoid permanent damage to the oven finish, do not line the oven with any type of foil or liner.

- For best cooking results, do not cover the entire rack with foil because air must be able to move freely.
- To catch spills, place foil on the rack below the dish. Ensure foil is at least 1/2" (1.3 cm) larger than the dish and turned up at the edges.
- Do not allow aluminum foil and meat probes to contact heating elements.

PREPARE YOUR OVEN FOR USE

Before using your oven for the first time, run a baking cycle to burn off any chemicals from the oven cavity finish.

- Select **BAKE** mode
- Heat to 350°F
- Run cycle for 60 minutes

KEY FEATURES



AIR COOKING TECHNOLOGY

Using a convection fan, experience the difference of dynamic air flow and intense heat.
**on certain models*



WIPECLEAN™ COATING

Spray the cooktop with water, let it soak for at least 5 minutes. For heavy stains, soak for 20-25 minutes. Use a non-abrasive soft sponge to wipe.
**on certain electric models*



EZ-2-LIFT™ HINGED CAST-IRON GRATES

Get quick access to spills on the cooktop. The hinged grate design lets you wipe up underneath without the hassle of removing heavy grates.
**on certain gas models*

CONVECTION AIR COOKING MODES

MODE	MODEL/SERIES	RACK POSITION	INSTRUCTIONS
AIR FRY (No Preheat) Get crispy results	4, 5 Series 7 Series	4	Add food to air fry basket Place food in oven Air Fry > Temperature > START
AIR BAKING Even results on multiple racks	4, 5 Series 7 Series	2 and/or 4	Air Baking > Temperature > START Preheat Place food in oven
AIR ROAST Seal in flavors and juices	7 Series	2	Air Roast > Temperature > START Preheat Place food in oven
AIR REHEAT Add crispiness to leftovers	7 Series	4	Air Reheat > Temperature > START Preheat Place food in oven
AIR BROIL Make toasty treats quickly	7 Series	4	Other Modes > Air Broil > Temperature > START Preheat Place food in oven

SPECIALTY NON-CONVECTION MODES

MODE	MODEL/SERIES	RACK POSITION	INSTRUCTIONS
SLOW COOK Heat up all day dishes	7 Series	2	Other Modes > Slow Cook > Temperature > START Preheat Place food in oven
PIZZA (No Preheat - Frozen) Skip the wait	3, 4, 5 Series 7 Series	3 3	Pizza > Temperature > START Place frozen pizza in oven No Preheat > Frozen Pizza > Temperature > START Place frozen pizza in oven
LASAGNA (No Preheat - Frozen) Skip the wait	3, 4, 5 Series 7 Series	3 3	Lasagna > Temperature > START Place frozen lasagna in oven No Preheat > Frozen Lasagna > Temperature > START Place frozen lasagna in oven
CRISPY MODE Add an easy crispy finish	3 Series	4	Crispy Mode > Temperature > START Preheat Place food in oven

DISCOVER EVEN MORE COOKING MODES available in the Whirlpool® app

APP & SMART FEATURES



Scan the QR code to download the app and connect your appliance.

You may also visit www.whirlpool.com/home-innovations/connected-appliances/connect

MAINTENANCE, SUPPORT, & ONLINE ORDERING

For maintenance information, product support, and online ordering of parts and accessories, visit our website:

United States
www.whirlpool.com/owners

Canada
www.whirlpool.ca/owners



05/26 | W11817946A



CUSTOMER
EXPERIENCE
CENTER

©/™ ©2026 Whirlpool. All rights reserved. Used under license in Canada.

United States:
1-866-698-2538
Whirlpool Customer Service
PO Box #8
St. Joseph, MI 49085

Canada:
1-800-807-6777
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7