

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

SERVING CART

REVISION 0 : 02/05/2018 REVISION 1 : 07/18/2019 REVISION 2 : 07/25/2022 PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A	TOP & BOTTOM PANEL		2PCS
В	BRACES		4PCS
С	FRONT CROSSBAND		2PCS
D	SHELF PANEL		1PC
E	LONG POST	TOWN TOWN	2PCS
F	SHORT POST		2PCS
G	HANDLE		1PC
н	LEG		4PCS
ı	POST		2PCS
J	LEFT & RIGHT		2PCS
K	PLASTIC DECORATION	9	18PCS
L	CROWN MOULDING		2PCS



(60mm)




HARDWARE IDENTIFICATION


1	WASHER (Ø 19mm RBW)	<i>(</i>)	2PCS
2	BOLT (3/16" x 54mm RBW)		18PCS
3	CASTER (Ø 40mm BLK)		4PCS
4	BOX WRENCH		1PC



ASSEMBLY INSTRUCTIONS STEP 1

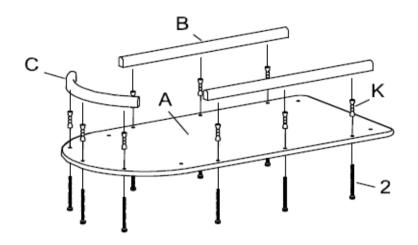


STEP 2

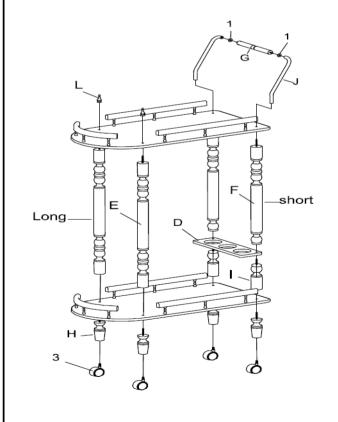

STEP 3


COMPLETE

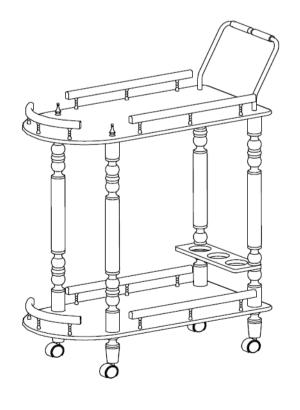

PAGE 4 OF 5

COASTERFURNITURE.COM



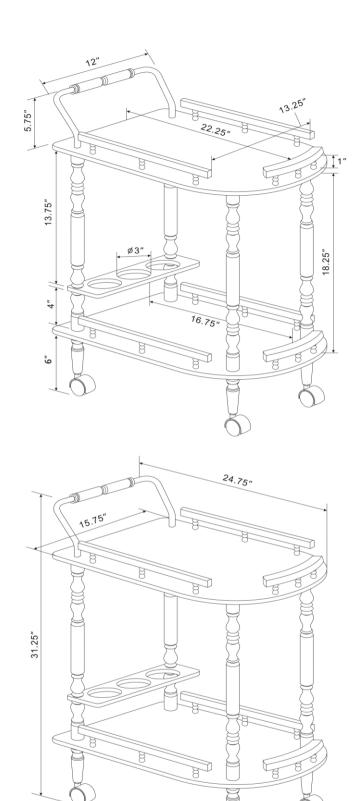

Note: Dimension tolerance ±5%

PAGE 5 OF 5

COASTERFURNITURE.COM