

4.5 cu. ft. Front Load Washer

- 4.5 cu.ft. Capacity
- 6Motion™ Technology
- ColdWash™ Technology
- Direct Drive Motor 10-Year Limited Warranty
- ENERGY STAR® Certified
- LG SideKick™ Compatible
- Closet Depth
- NeverRust™ Stainless Steel Tub




AVAILABLE COLORS

GRAPHITE STEEL



SUMMARY		CONVENIENCE FEATURES		ENERGY	
Type	Front Load Washer	Vibration sensing (Cabinet Vibration sensor)	No	ENERGY STAR® Most Efficient	No
Capacity	4.5 cu.ft	TrueBalance® Anti-Vibration System	Yes	ENERGY STAR® Certified	Yes
Matching Electric Dryer	DLE3400V	4 Tray Dispenser	Prewash, Main Wash (with liquid detergent cup), Bleach, Fabric Softener	CEE Tier	2
Matching Gas Dryer	DLG3401V	End of Cycle Signal	Yes	IMEF	2.92
Color	Graphite Steel (V)	LoadSense	Yes	IWF	2.9
WASH PROGRAMS		Control Lock	Yes	POWER SOURCE	
No. of Programs	8	Auto Suds Removal	Yes	Ratings	UL Listed
Wash Programs	Normal, Perm. Press, Heavy Duty, Delicates, Towels, Speed Wash, Bedding, Tub Clean	Leveling Legs	4 Adjustable Legs	Electrical Requirements	120 V, 60 Hz, 6 A
No. of Options	8	Drumlight	No	Type	Electric
Options	Pre-wash, Delay Wash, Cold Wash, Extra Rinse, Rinse+Spin, Control Lock, Spin Only, Signal	SMART FEATURES (ThinQ® TECHNOLOGY)		Plug	Included
WASH DETAILS		Proactive Customer Care	No	Plug Type	3 Prong
No. of Wash/Rinse Temps	5	Smart Diagnosis (v3.0)	Yes	OPTIONS/ ACCESSORIES	
Wash/ Rinse Temps	Extra Hot, Hot, Warm, Cold, Tap Cold	Wi-Fi	No	Pedestal	WDP6V
No. of Spin Speed	3	NFC Tag On Technology	No	Pedestal (WxHxD)	27" x 13 5/8" x 28" (43 7/8" D with door open)
Spin Speeds	High, Medium, Low	Energy Monitoring	No	LG Sidekick® Pedestal Washer	WD300CV
Water Levels	Load Sensing	Tube Clean Coach	No	LG Sidekick® Pedestal Washer (WxHxD)	27" x 14 1/8" x 30 3/4" (50 1/2 D with door open)
No. of Soil Levels	3	MOTOR		Stacking Kit	KSTK4
APPERANCE		Motor Type	Inverter Direct Drive Motor	Water Supply Hoses (Hot & Cold) Included	No
Control & Display	Electronic Control Panel with LED Display	Max RPM	1300	LIMITED WARRANTY	
Hard Buttons	Yes	Axis	Horizontal	Parts and Labor	1 Year
Touch Buttons	Yes	MATERIALS AND FINISHES		Direct Drive Motor	10 Years
Dial-A-Cycle®	Yes	NeverRust® Stainless Steel Drum	Yes	Drum	3 Years
FABRIC CARE FEATURES		Cabinet	Painted Steel	UPC CODES	
AI DD®	No	Control Panel	Plastic	WM3400CV	195174089545
TurboWash® 360 Technology	No	Top Plate	Painted Steel		
TurboWash® 2.0 Technology	No	Door / Rim	Glass/Silver Rim		
Steam Technology	No	Door Cover	Clear Round Cover		
Allergiene® Cycle	No	All Available Colors	Graphite Steel (V), White (W)		
Sanitary Cycle	No				
Cold Wash Option	Yes				
Soil Level Sensor	No				

DIMENSION / CLEARANCES

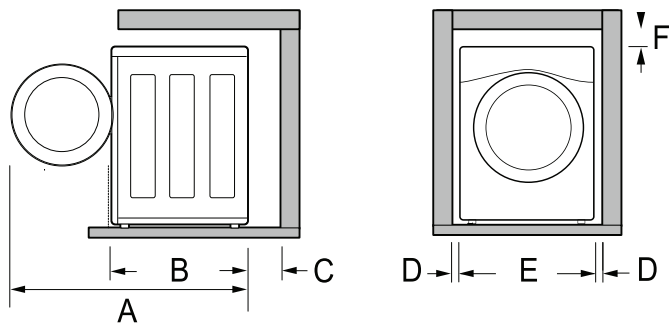


DIMENSIONS

Product (WxHxD)	27" x 39" x 30 1/4"
Depth with Door Open	55"
Carton Dimensions (WxHxD)	29 3/4" x 41 7/8" x 31 1/2"
Approx. Weight (Product / Carton)	191.8 / 213.9 lbs.
A	43 7/8" (111.44 cm)
B	30 1/4" (77cm)
C	4" (10cm)
D	1" (2.5cm)
E	27" (70cm)
F	1/4" (0.5cm)

DIMENSION / CLEARANCES

To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances of at least 1" (2.5 cm) at the sides and 4" (10 cm) behind the appliance. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

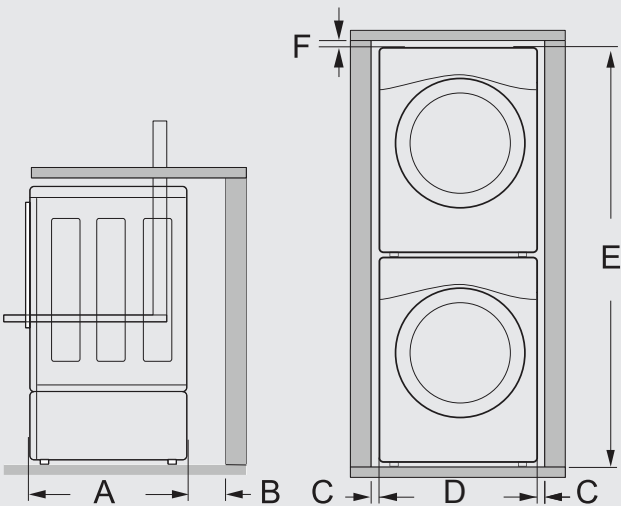

Stacking or Pedestal Installation

The washer can be stacked under a dryer or on top of a pedestal or pedestal washer.


- Refer to the instructions packaged with the optional pedestal kit before stacking appliance on pedestal.
- Do not use a drain pan with a pedestal or pedestal washer installation as it can block the drawer. Using a drain pan may result in increased vibration and noise during operation.

DIMENSIONS

A	30 1/4" (77cm)
B	4" (10cm)
C	1" (2.5cm)
D	27" (70cm)
E	77 1/2" (196.8cm)
F	1/4" (0.5cm)

CONNECTING THE WATER INLET HOSE

- Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal ❶ in place in both ends of each hose to prevent leaking.
- Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
- Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

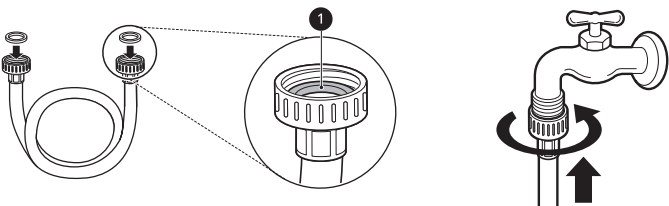

Flush out the inlet hoses.

- After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.
- Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.

Attach the inlet hoses to the back of the washer.

- Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.
- Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses.

