

# MONOGRAM 24" FULLY INTEGRATED DISHWASHER

ZDT800SSYSS



## HANDLES SOLD SEPARATELY



Statement Handle ZXADHISTYSS (*shown*)



Minimalist Handle ZXADH1MNYSS



### 42 DBA QUIET OPERATION

Harmonizing power and serenity, engineered to deliver flawless cleaning at a quiet 42 dBA in Normal Cycle

### FLUSH INSTALLATION CAPABILITY

Dishwashers designed to fully integrate and be installed flush, even with inset cabinetry

### THIRD RACK

The expansive third rack provides the perfect space to clean utensils and serve ware

### ADVANCED WASH SYSTEM

Achieve the ultimate clean, using over 70 powerful water jets to deliver a 360 clean, reaching all corners of the dishwasher

### MAX DRY SYSTEM

This precise and efficient drying system delivers beautifully dry dishes every time and is perfect for hard-to-dry items like your favorite champagne flutes

### LED ILLUMINATED INTERIOR

LED lighting illuminates the entire interior to load and unload dishes with ease

### STEAM & SANITIZATION

Eliminate the need to pre-wash dishes at the end of every meal, thanks to a Steam + Sani feature that easily loosens lingering traces of food with an added bonus of complete sanitization

### BOTTLE & SILVERWARE JETS

Powerful jets designed and specifically located to clean hard to reach taller items, like bottles, and deep clean silverware

### INTUITIVE LCD TOUCH CONTROLS

Easily select your cycle and customize wash and dry selections with the glass touch controls and brilliant LCD screen

### HARD FOOD DISPOSER

Designed to maintain a kitchen's cleanliness and efficiency, the hard food disposer with stainless steel blades grinds food into tiny particles that wash away with ease

### WIFI CONNECTED WITH SMARTHQ

 
Built-in WiFi and the SmartHQ app make it easy to control and monitor your dishwasher, wherever you are

### HANDLES SOLD SEPARATELY

Elevate your dishwasher's look by selecting a Statement or Minimalist collection handle

### DELAYED WASH

Wash when you want. Use the PrepRinse™ Cycle to prevent dried on messes with a water only rinse. For added convenience, schedule your dishwasher to begin washing at a later time

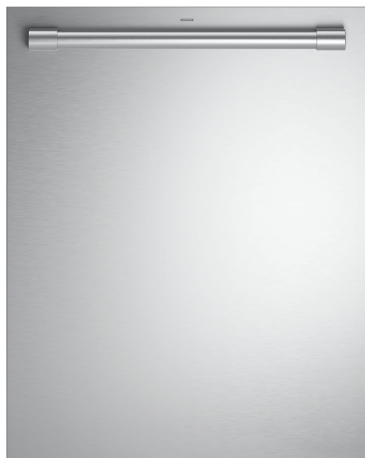

### SPECIFICATIONS

 
Overall Width	23 3/4"
Overall Height	33 3/4" - 34 5/8"
Overall Depth	24"
Cutout Height	34 1/2" (87.6 cm) Min 35" (88.9 cm) Max
Minimum Cabinet Width	24" (61.0 cm)
Minimum Cabinet Depth	24" (61.0 cm)
Door Clearance	25 1/2"
Electrical Requirements	1.2 A
Voltz/Hertz/Amps	120 V, 60 Hz, 15 or 20 amp circuit
Capacity	16 Place Settings

### ATTENTION ELECTRICIAN:


A 115 volt 60Hz, 15 or 20 amp power supply is required. An individual properly grounded branch circuit or circuit breaker is recommended. Install a properly grounded 3-prong electrical receptacle recessed into the back wall.

NOTE: Always refer to installation guide for complete installation instructions

### INSTALLATION CUTOUT FRONT VIEW

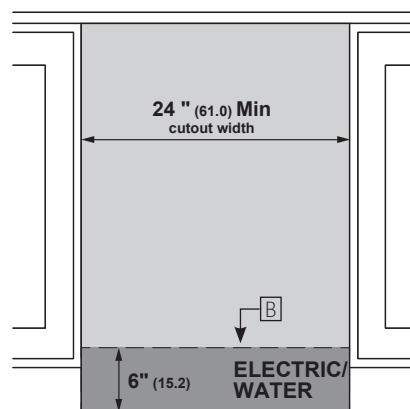

### FLUSH INSTALLATION CUTOUT FRONT VIEW

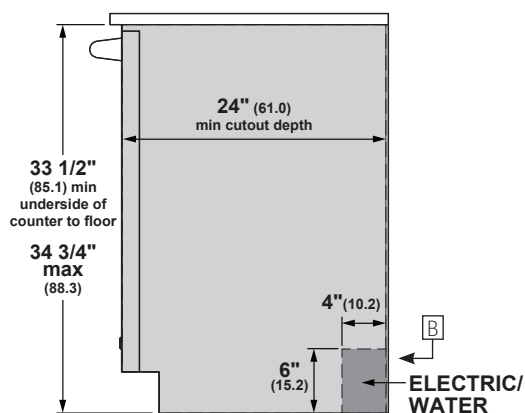 

### SPECIAL NOTES

- [A] The dishwasher drain hose must be no more than 12 feet in length for proper drainage.
- [B] Electrical connections are at the right front of the dishwasher and water connections are on the left. The hot water line should extend forward 30" to 40" from the rear wall. The electrical must extend forward at least 24" to reach the junction box.
- [C] To prevent siphoning, an air gap or high drain loop must be used.

For more details, refer to the installation instructions for this product on [Monogram.com](http://Monogram.com). Dimensions in parentheses are in centimeters unless otherwise noted.