



Vacuum Cleaner Maintenance Guide

⚠ To minimize decline in suction performance and to prevent strange odor, wash filters & dust bin regularly as shown below.

1 Remove the filters and dust bin from the vacuum body as shown below. Washable components are colored in gray below.

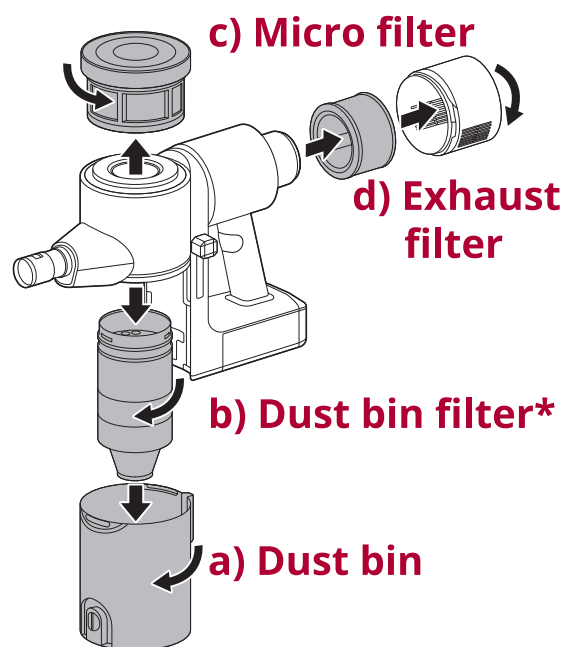


2 Turn the vacuum body over and lift the Kompressor lever up to clean the dust between the Kompressor system using the cleaning brush (not provided), etc.

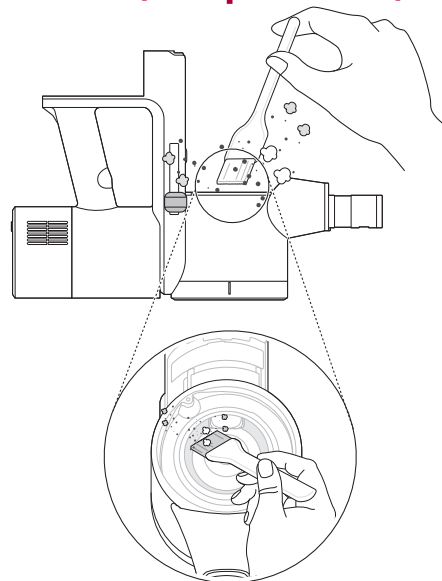

3 **Dust off the filters and dust bin and wash them under running water. Dry for at least 24 hours in well-ventilated area.




⚠ Do not wash LCD/LED Screen component.

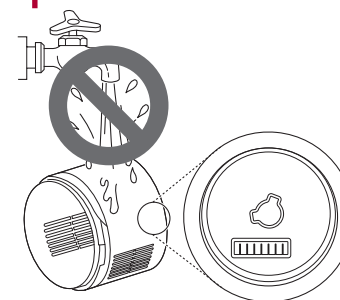

* The Dust bin Filter refers to a combination of a Metal Mesh Filter and 2nd Turbo Cyclone.

** Clean filters by regularly brushing off the dust and washing them in running water at least once per month. To avoid odor and malfunction of the motor, filters should be dried completely in a well ventilated area out of direct sunlight before reassembling.

*Quick DustFilter Cleaning System

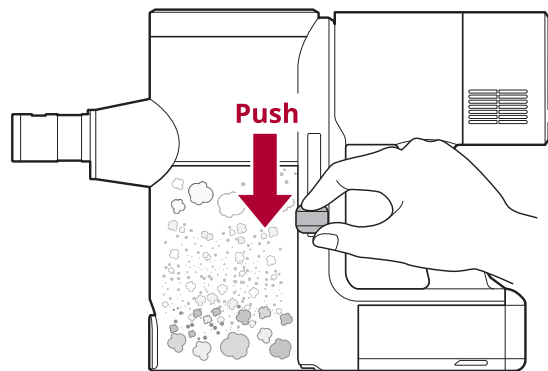


After using the vacuum, press down the Kompressor™ lever several times to compress the collected debris and clean the filter.

* The Quick DustFilter Cleaning System is a cleaning system that cleans the dust bin filter, which specifically refers to the metal mesh filter, as well as the micro filter.

How to remove battery

1 Push the top button on the battery while gripping the sides firmly.

2 Pull the battery out.

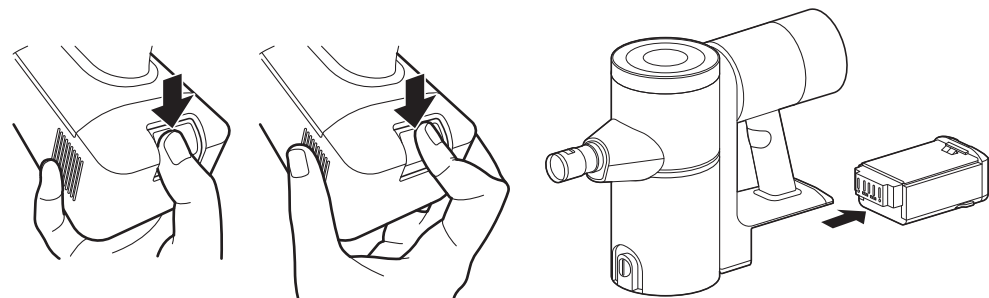

⚠ When inserting the battery, make sure it is fully inserted into the vacuum body until it clicks. If the battery is not properly inserted, it may cause malfunction or fall out, leading to personal injury.

⚠ Use only the battery provided by LG Electronics. The vacuum will not operate with non-genuine batteries due to safety and functional issues.

For detailed usage instructions and precautions, please refer to the user manual included with the product or visit the LG Electronics website.

www.lg.com