

5.0 cu. ft. Top Load Washer

- 5.0 cu.ft. Capacity
6Motion™ Technology
ColdWash™ Technology
Direct Drive Motor 10-Year Limited Warranty
ENERGY STAR® Certified
Closet Depth
NeverRust™ Stainless Steel Tub


AVAILABLE COLORS



SUMMARY		CONVENIENCE FEATURES		IMPELLER / AGITATOR	
Type	Top Load Washer	SlamProof™ Lid	Yes	Impeller	Yes
Capacity	5.0 cu.ft	True Balance® Anti-Vibration System	Yes	Agitator	No
Matching Electric Dryer	DLE7150X	Smart Diagnosis	Yes	ENERGY	
Matching Gas Dryer	DLG7151X	3-Tray Dispenser	Yes	ENERGY STAR® Certified	Yes
Color	Onyx Black (X)	LoadSense	Yes	CEE Tier	-
WASH PROGRAMS		Status Indicator(s)	Yes	IMEF	2.06
No. of Programs	8	End of Cycle Signal	Yes	IWF	4.3
Wash Programs	Normal, Heavy Duty, Deep Wash, Waterproof, Bedding, Delicates, Speed Wash, Tub Clean	Control Lock	Yes	POWER SOURCE	
No. of Options	9	Auto Suds Removal	Yes	Ratings	CSA Listed
Options	Soak, Extra Rinse, Signal, Delay Wash, Control Lock, Water Plus, Cold Wash, Rinse+Spin, Spin Only	Forced Drain System	Yes	Electrical Requirements	120 V, 60 Hz, 5 A
WASH DETAILS		Add Garment Indicator	Yes	Type	Electric
No. of Wash/Rinse Temps	3	Internal Water Heater	No	Plug	Included
Wash/ Rinse Temps	Hot, Warm, Cold	Leveling Legs	Yes	Plug Type	3 Prong
No. of Spin Speed	3	SMART FEATURES (ThinQ® TECHNOLOGY)		LIMITED WARRANTY	
Spin Speeds	High, Medium, Low	Smart Diagnosis (v3.0)	Yes	Parts and Labor	1 Year
Water Levels	Load Sensing	Wi-Fi	No	Direct Drive Motor	10 Years
No. of Soil Levels	3	NFC Tag On Technology	No	Drum	3 Years
APPERANCE		Energy Monitoring	No	UPC CODES	
Control & Display	Electronic Control Panel with LED Display	ThinQ Care (Remote Start/ Cycle Monitoring)	No	WT7150CX	195174144695
Touch Buttons	Yes	MOTOR			
Dial-A-Cycle®	Yes	Motor Type	Inverter Direct Drive Motor		
FABRIC CARE FEATURES		Max RPM	800		
TurboWash3D® Technology	No	Axis	Vertical		
TurboWash®	No	MATERIALS AND FINISHES			
Steam Technology	No	NeverRust® Stainless Steel Drum	Yes		
Allergiene® Cycle	No	NeverRust® Stainless Steel Washplate	No (PP: Tub base+STS:Pulsator)		
Smart Rinse Jet Spray System	Yes	Cabinet	Painted Steel		
Cold Wash Option	Yes	All Available Colors	Onyx Black (X), Middle Black (M), White (W)		
		Lid	Black-Transparent Glass		
		Door Cover	Clear Round Cover		
		All Available Colors	Graphite Steel (V), White (W)		

WT7010CW

DIMENSION / CLEARANCES

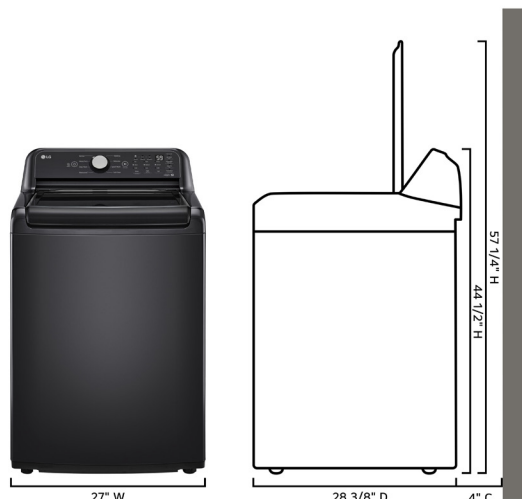


DIMENSIONS

Product (WxHxD)	27" x 44 1/2" x 28 3/8" (57 1/4" H with Lid Open)
Carton (WxHxD)	27" (68.6cm)
Weight (Product)	44 1/2" (113cm)
Weight (Carton)	57 1/4" (145.3cm)

Floor Installation

To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances of at least 1 inch (2.5 cm) at the sides and 4 inches (10 cm) behind the washer. Be sure to allow for wall, door, or floor moldings that may increase the required clearances. Minimum vertical space from floor to overhead shelves, cabinets, ceilings, etc., is 58 inches (147cm).

INSTALLATION OVERVIEW

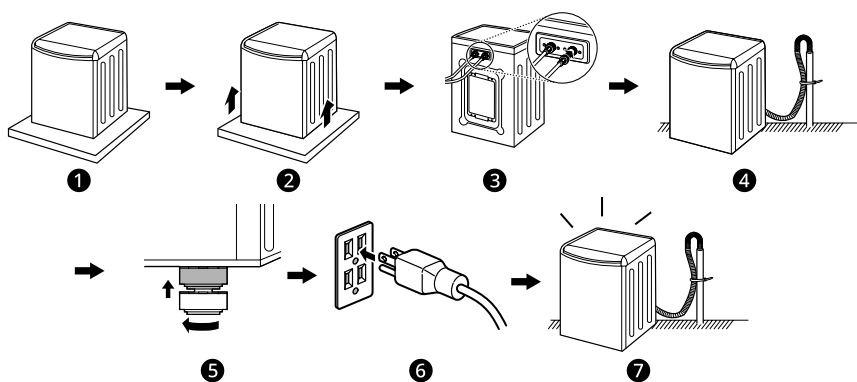

- 1 Choosing the Proper Location
- 2 Unpacking and Removing Shipping Material
- 3 Connecting the Water Inlet Hoses
- 4 Connecting the Drain Hose
- 5 Leveling the Washer
- 6 Connecting to the Power Supply
- 7 Final Installation Check

CONNECTING THE WATER INLET HOSE

- Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal ❶ in place in both ends of each hose to prevent leaking.
- Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
- Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

• After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.

• Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.

• Attach the inlet hoses to the back of the washer. Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.

• Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses. • Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

