Profile

TOUCH SCREEN GUIDE

4-door fridge with Kitchen Assistant™

CONNECT

AMBIENT

SCAN-TO-LIST

LIST

RECIPES

CONTROLS

HOME

PRECISE FILL

AUTOFILL

WATER

Table of Contents

Content	Page(s)
Getting Started (Commissioning the unit, connecting to Wi-Fi, and connecting your fridge to SmartHQ)	3-20
Access Your Settings Shade	21-23
Personalizing Your Touch Screen	24-31
Exploring Your Home Screen Apps	32-34
Shopping List App with Scan-to-List	35-41
Recipe Content	42-47
Fridge and Freezer Controls	48-56
Ice and Water Dispensing	57-59
Precise Fill	60-62
Water Center	63-67
Kitchen Timers	68-69
Bluetooth® Media Player	70-71
Change Your Wi-Fi	72-75

Getting Started & Connecting to SmartHQ ™

Profile™

4-door fridge with Kitchen Assistant™

Getting Started

Click "GET STARTED"

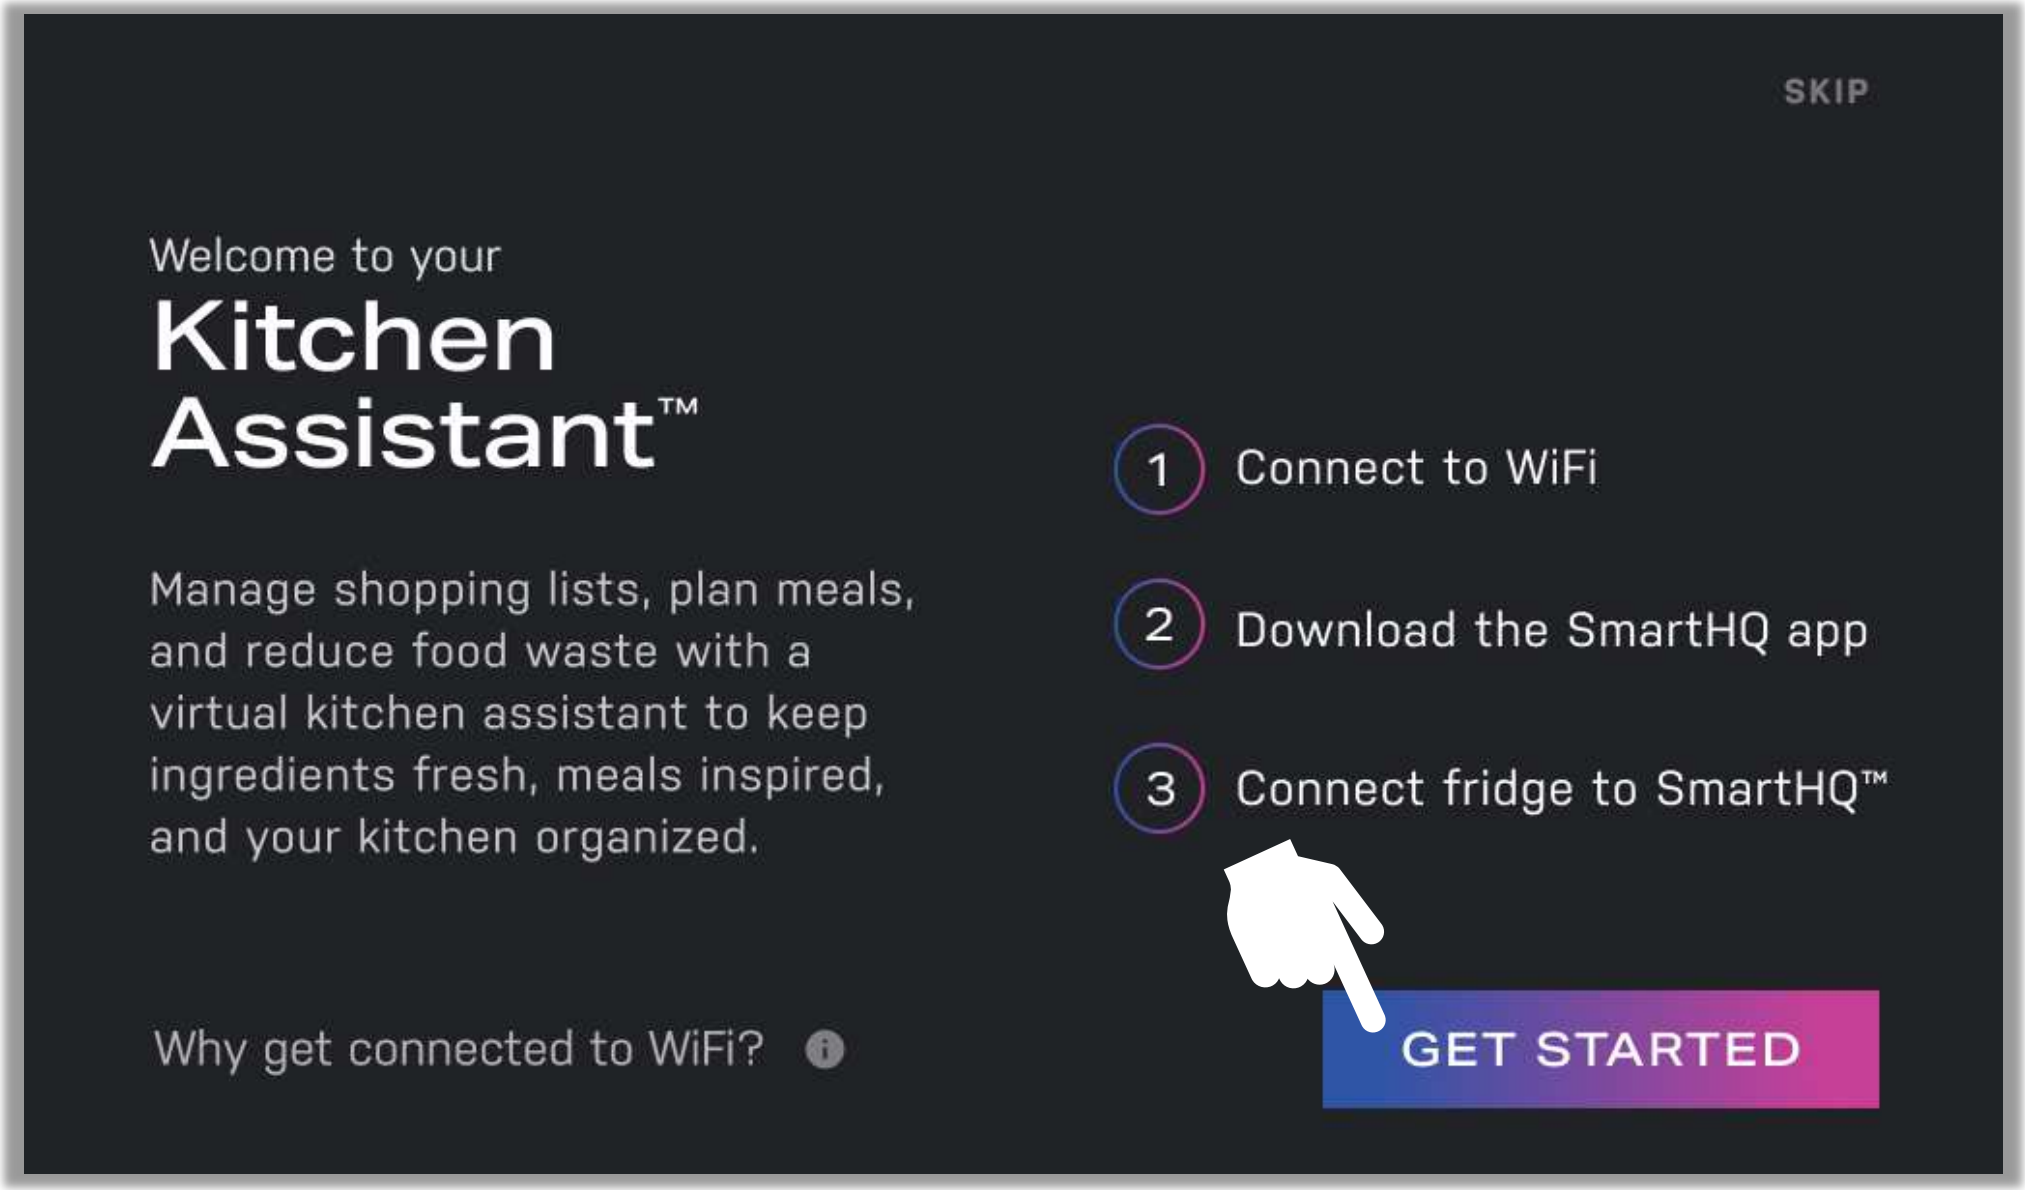

Getting Started

Click "CONTINUE"

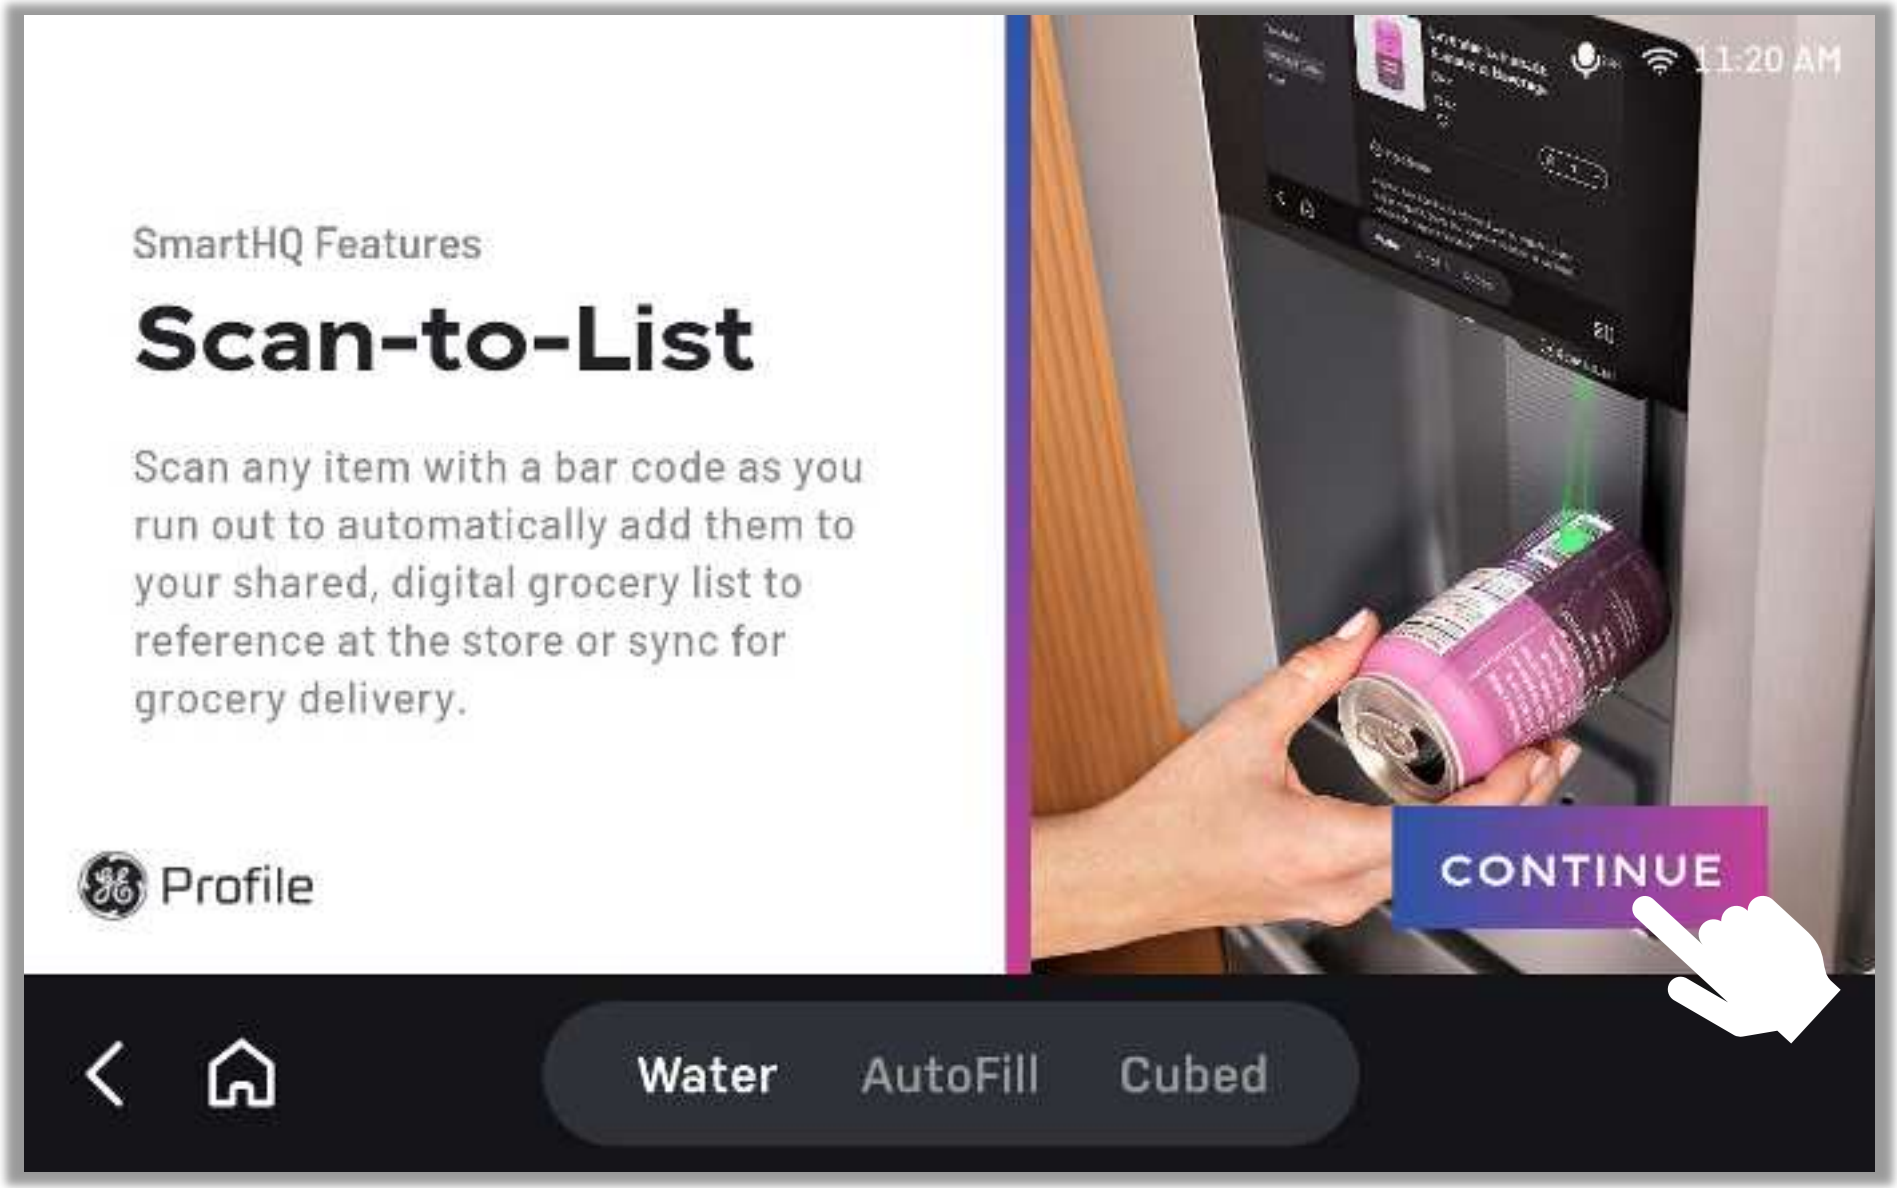

Getting Started

Click "CONTINUE"

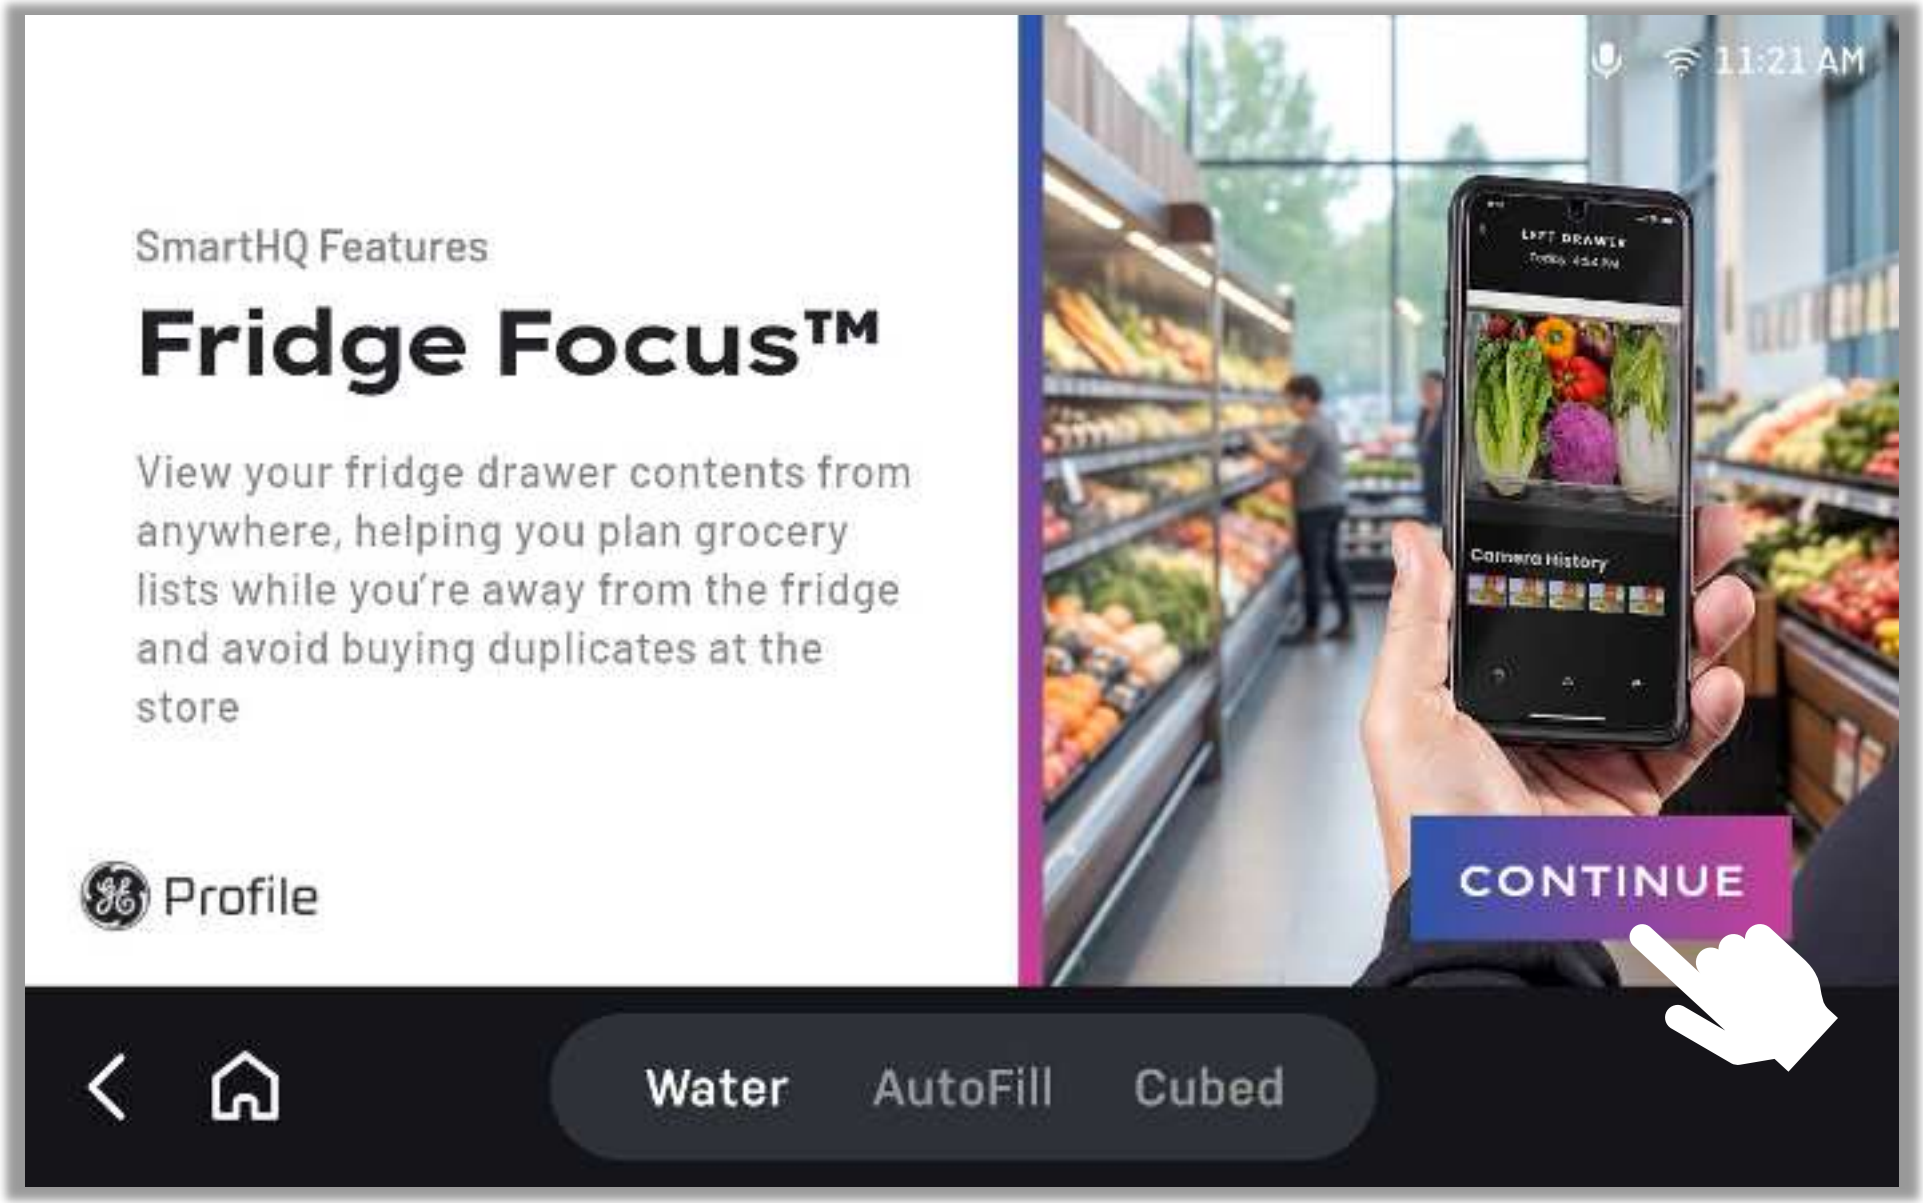

Getting Started

Click "CONTINUE"

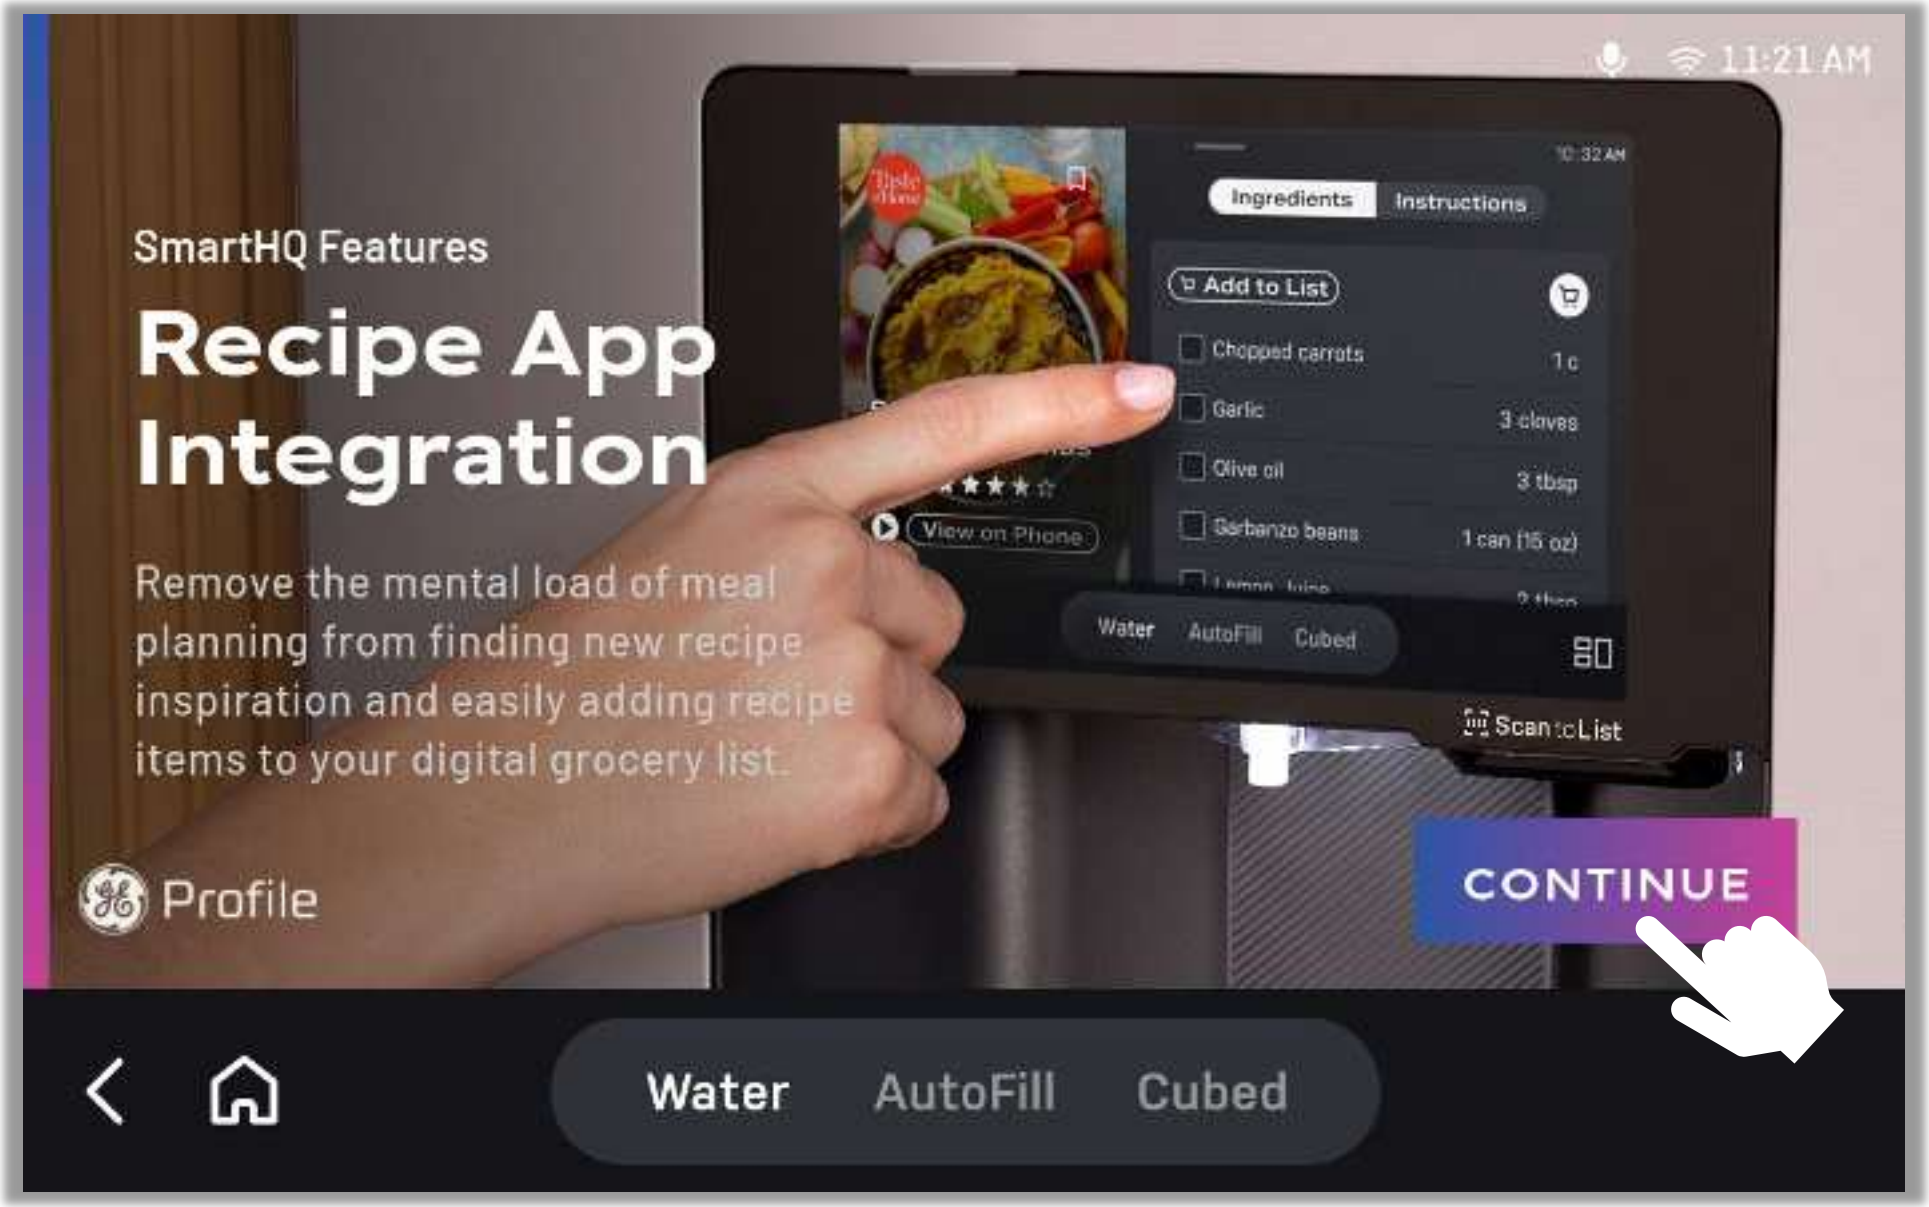

Getting Started

Click "CONTINUE"

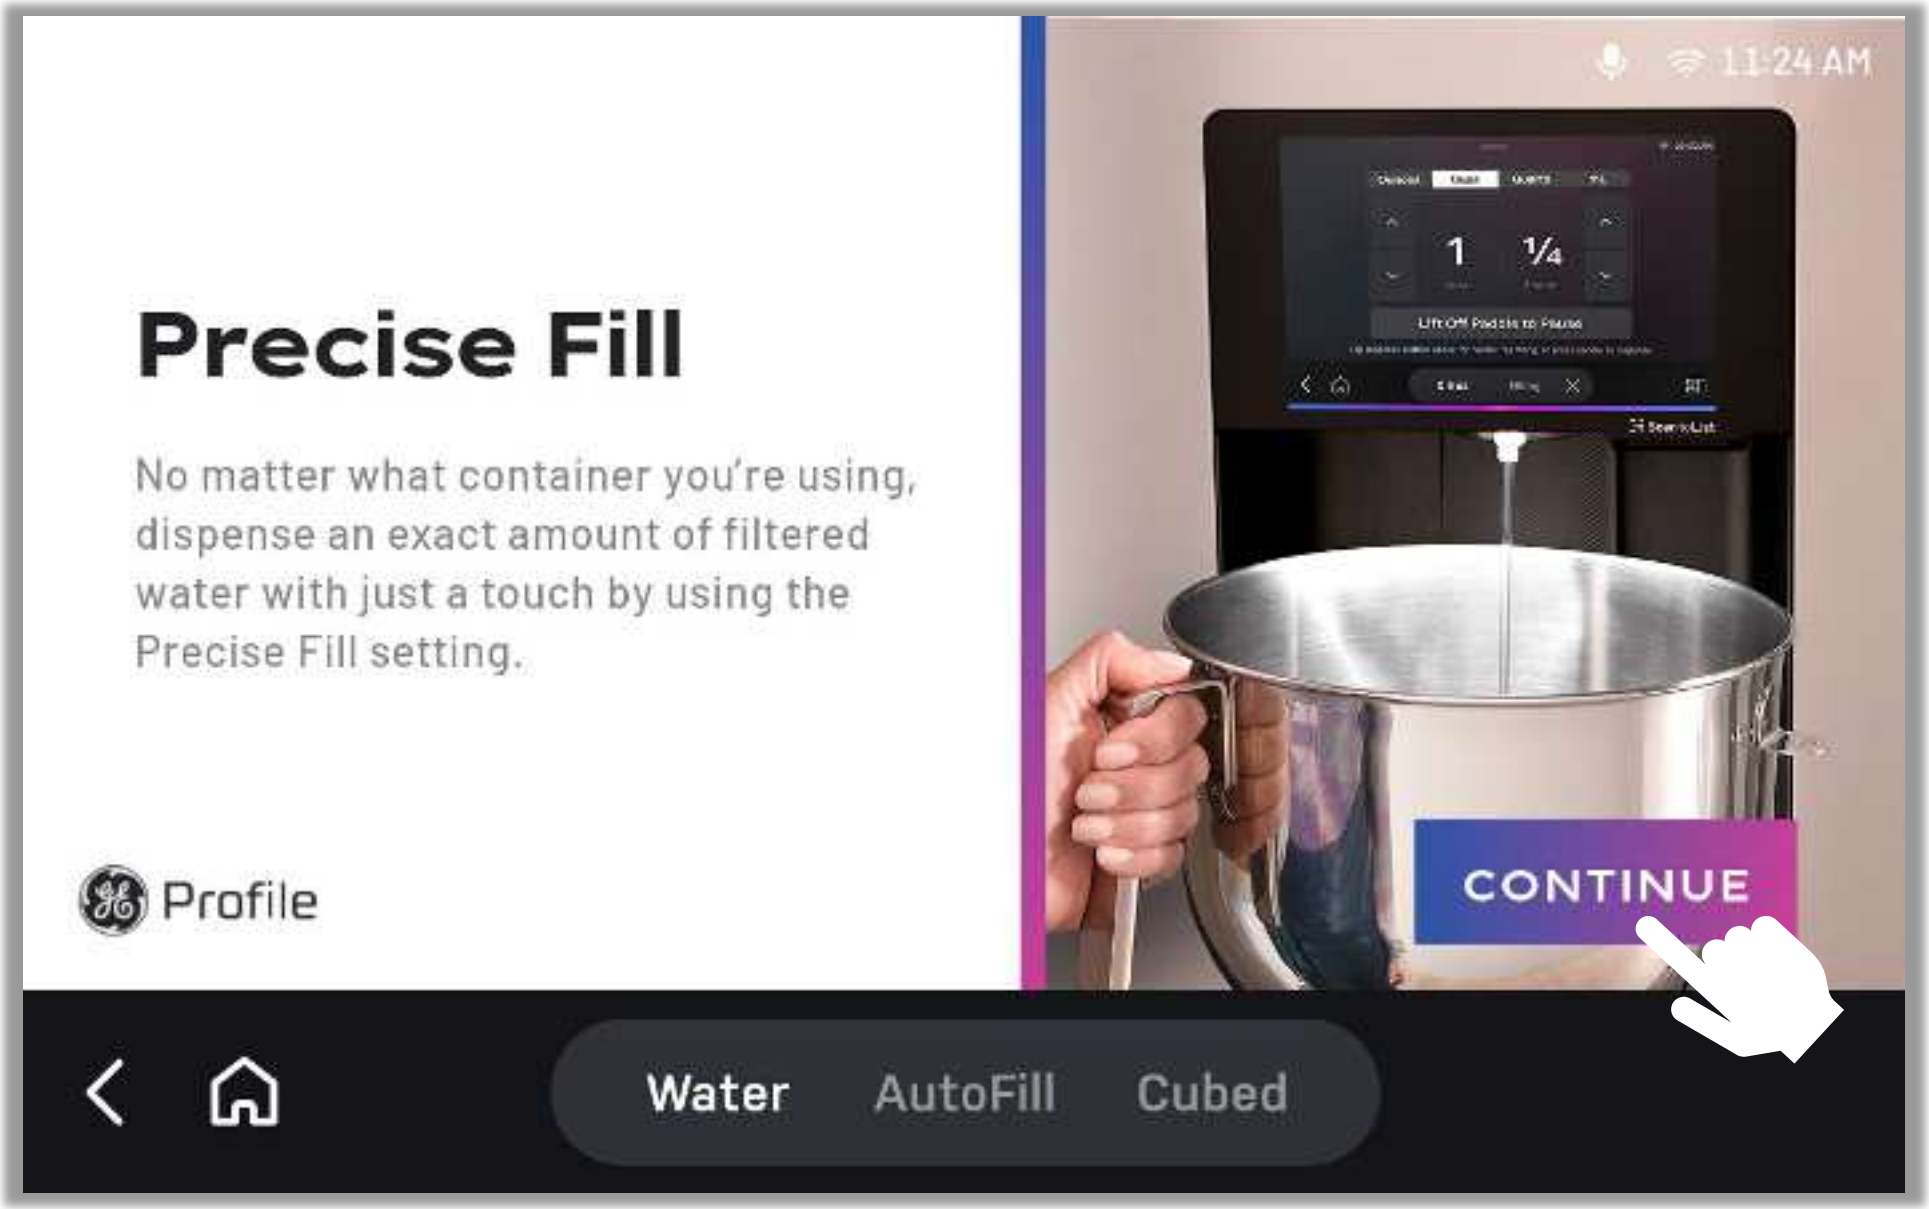

Getting Started

Click "CONTINUE"

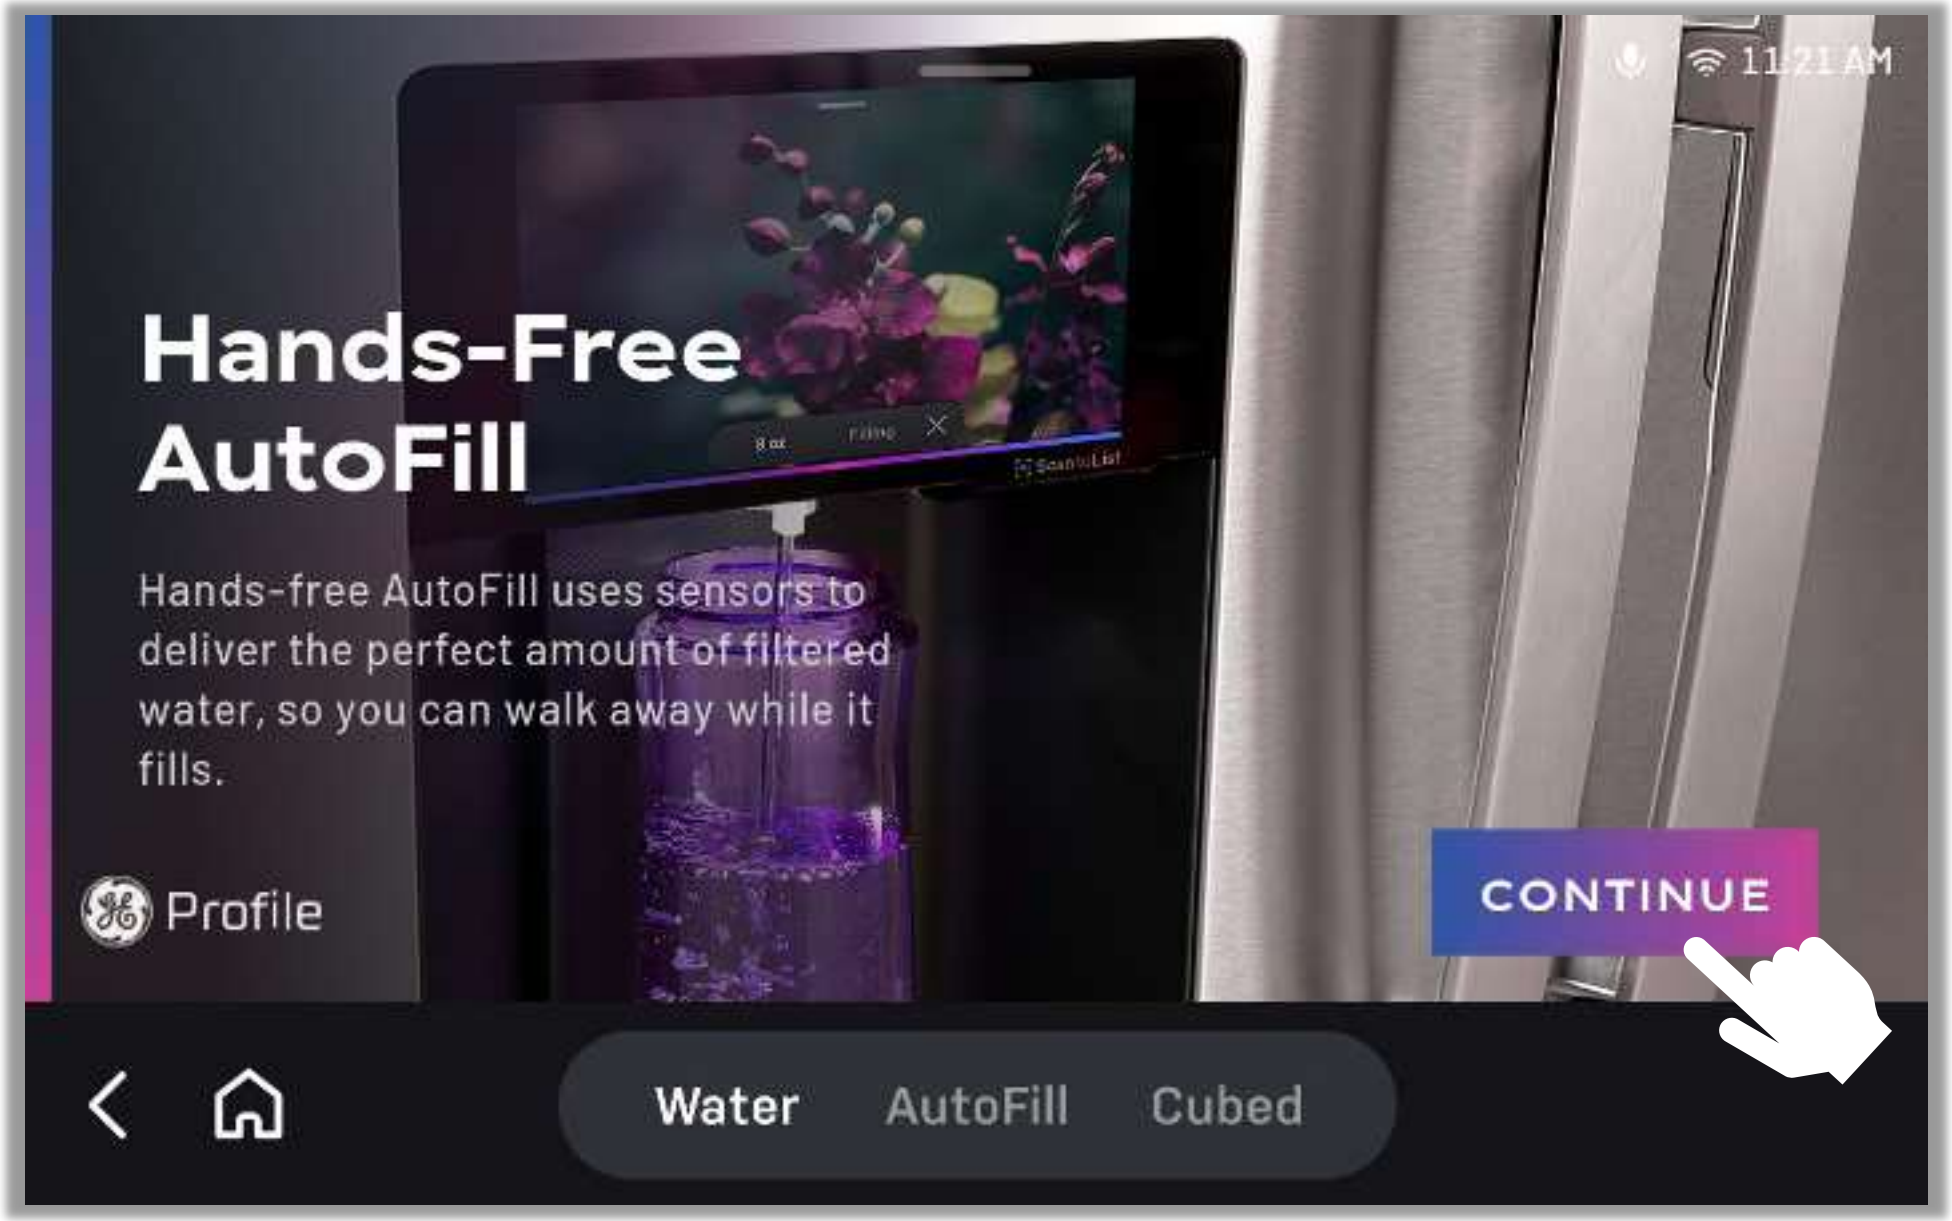

Getting Started

Click "CONTINUE"

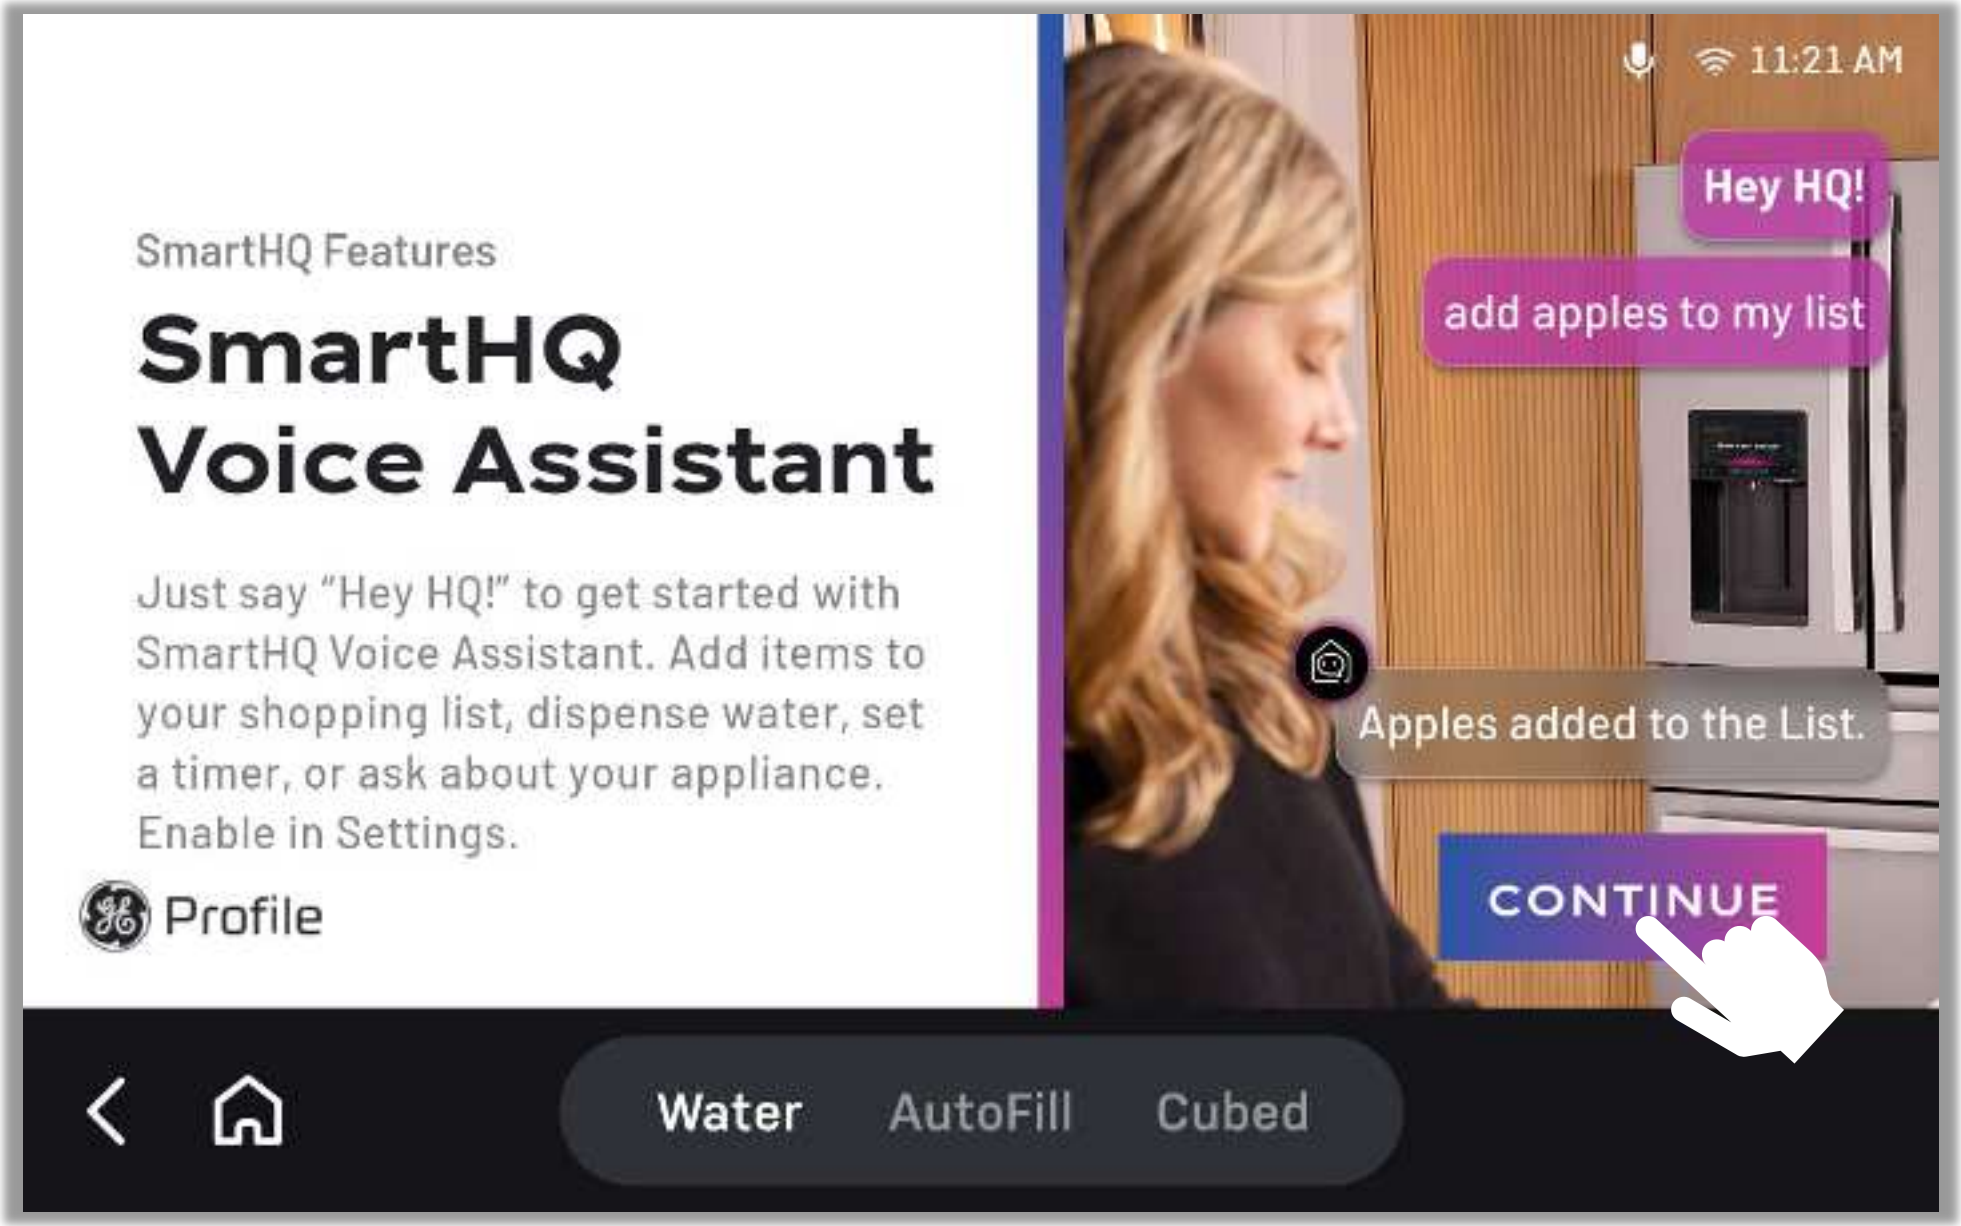

Getting Started

Click "CONTINUE"

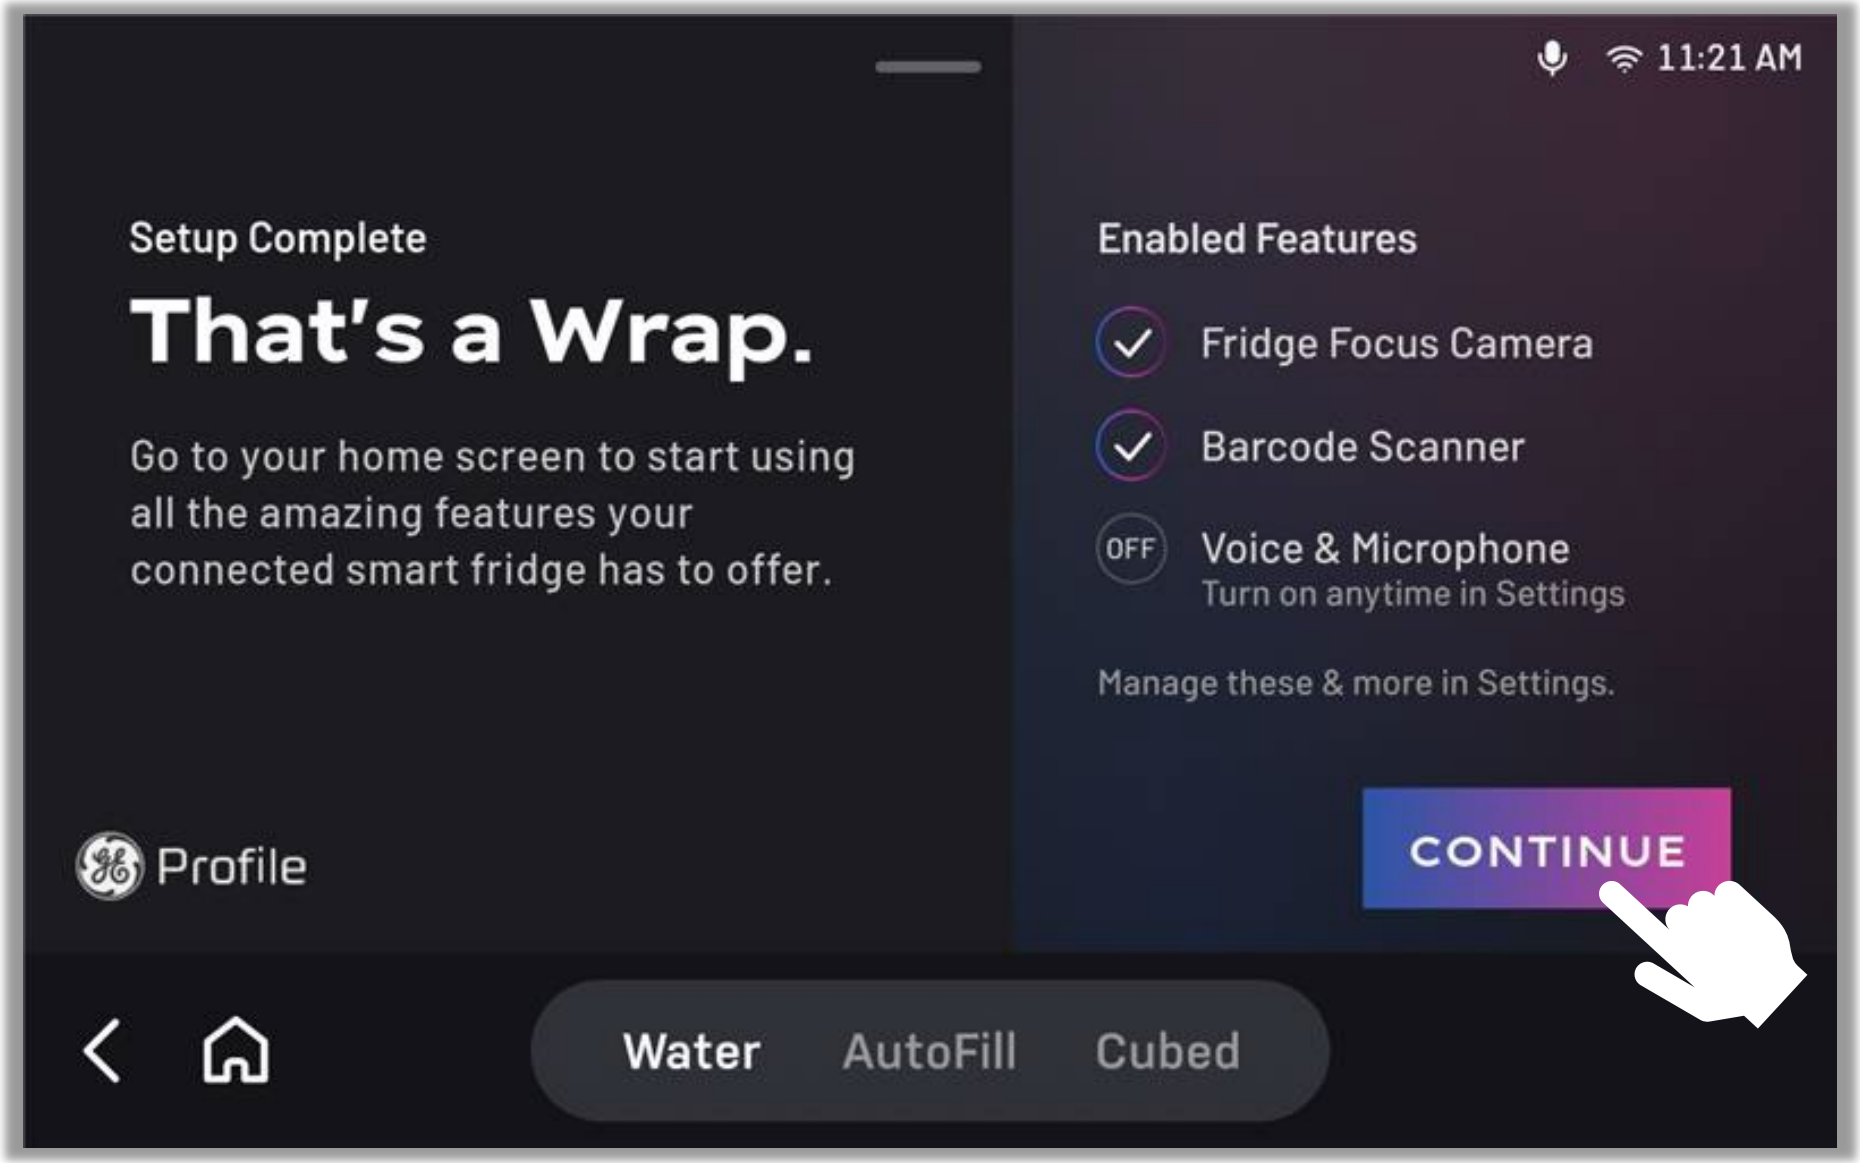

Getting Started

Click "GET STARTED"

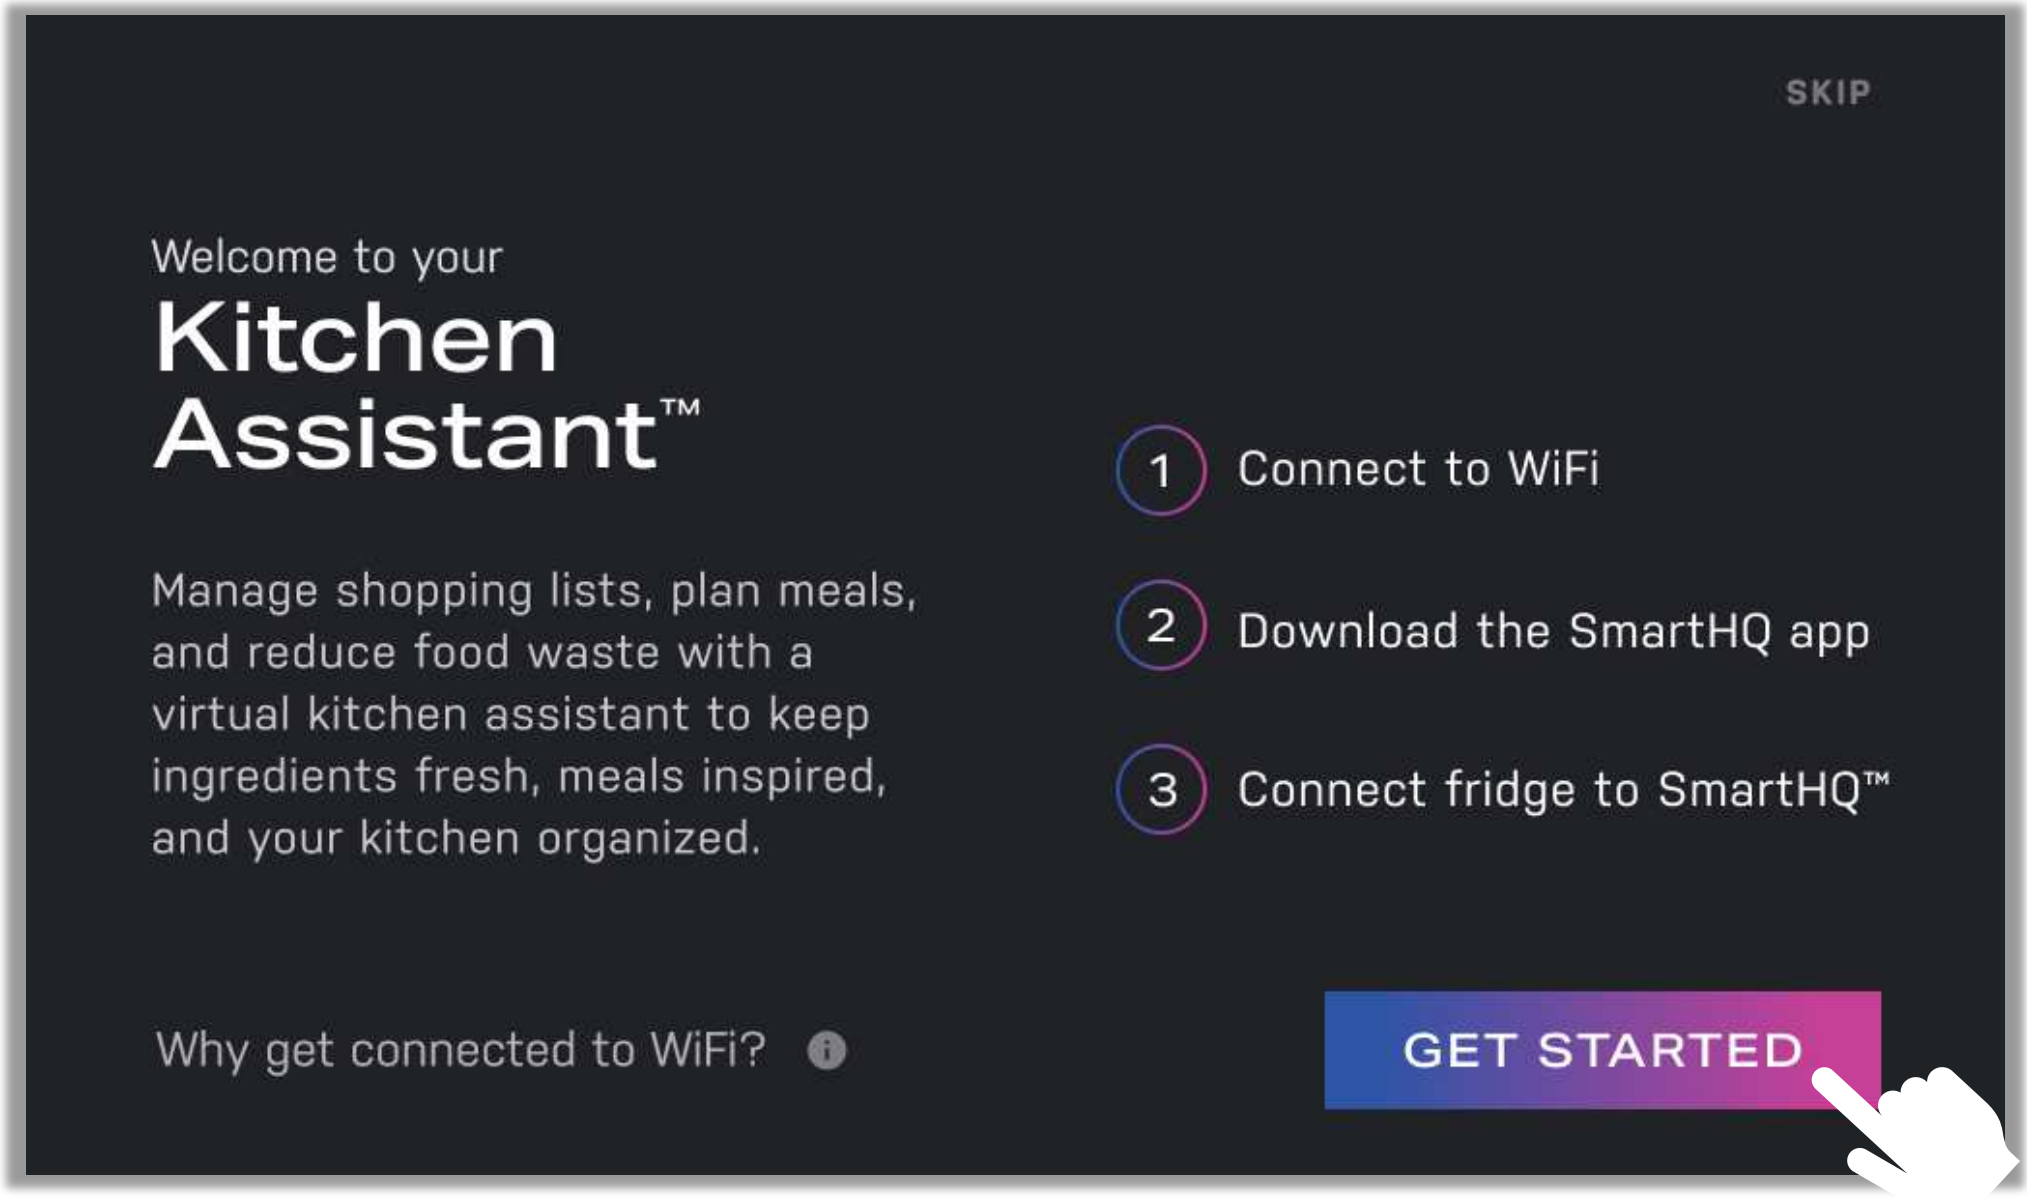

Getting Started

Select your time zone and click "NEXT"

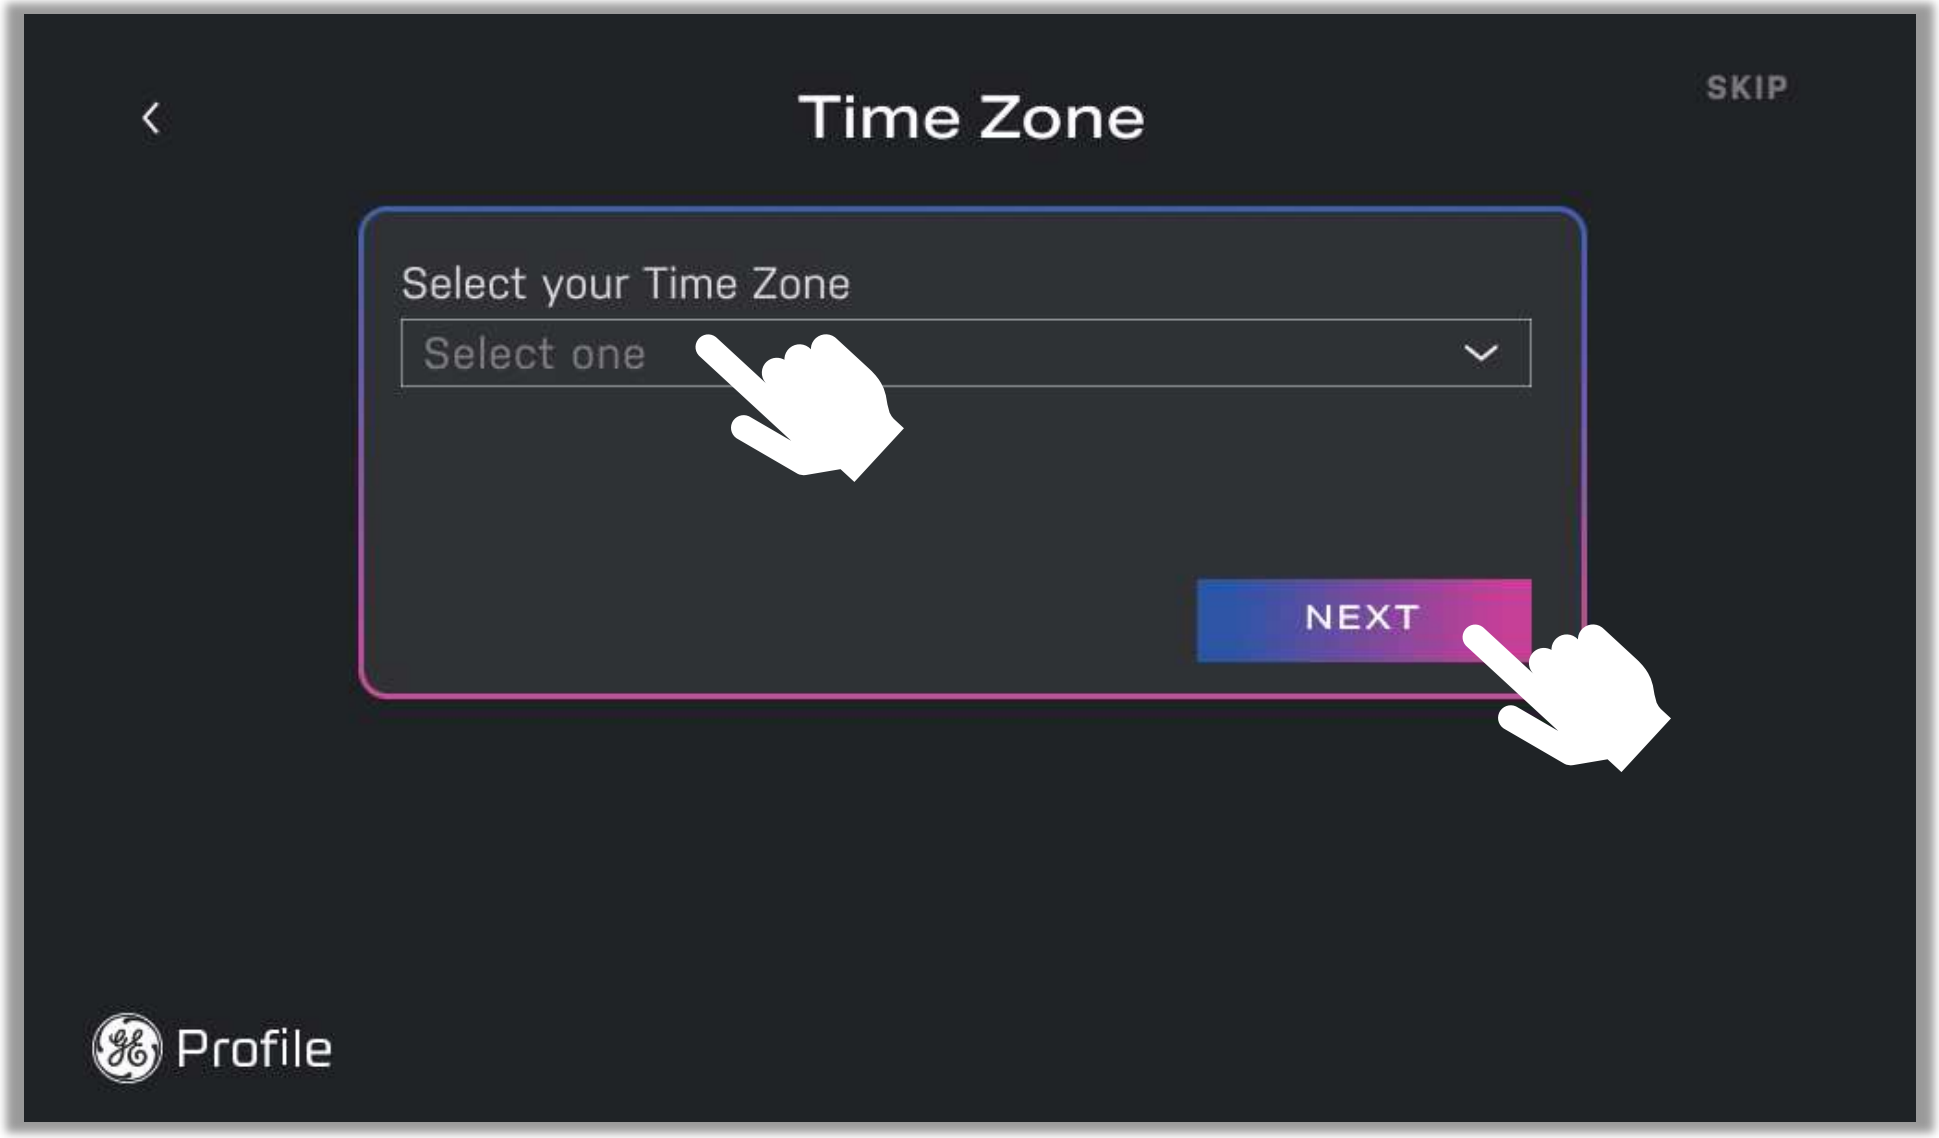

Getting Started

Select your WiFi network.

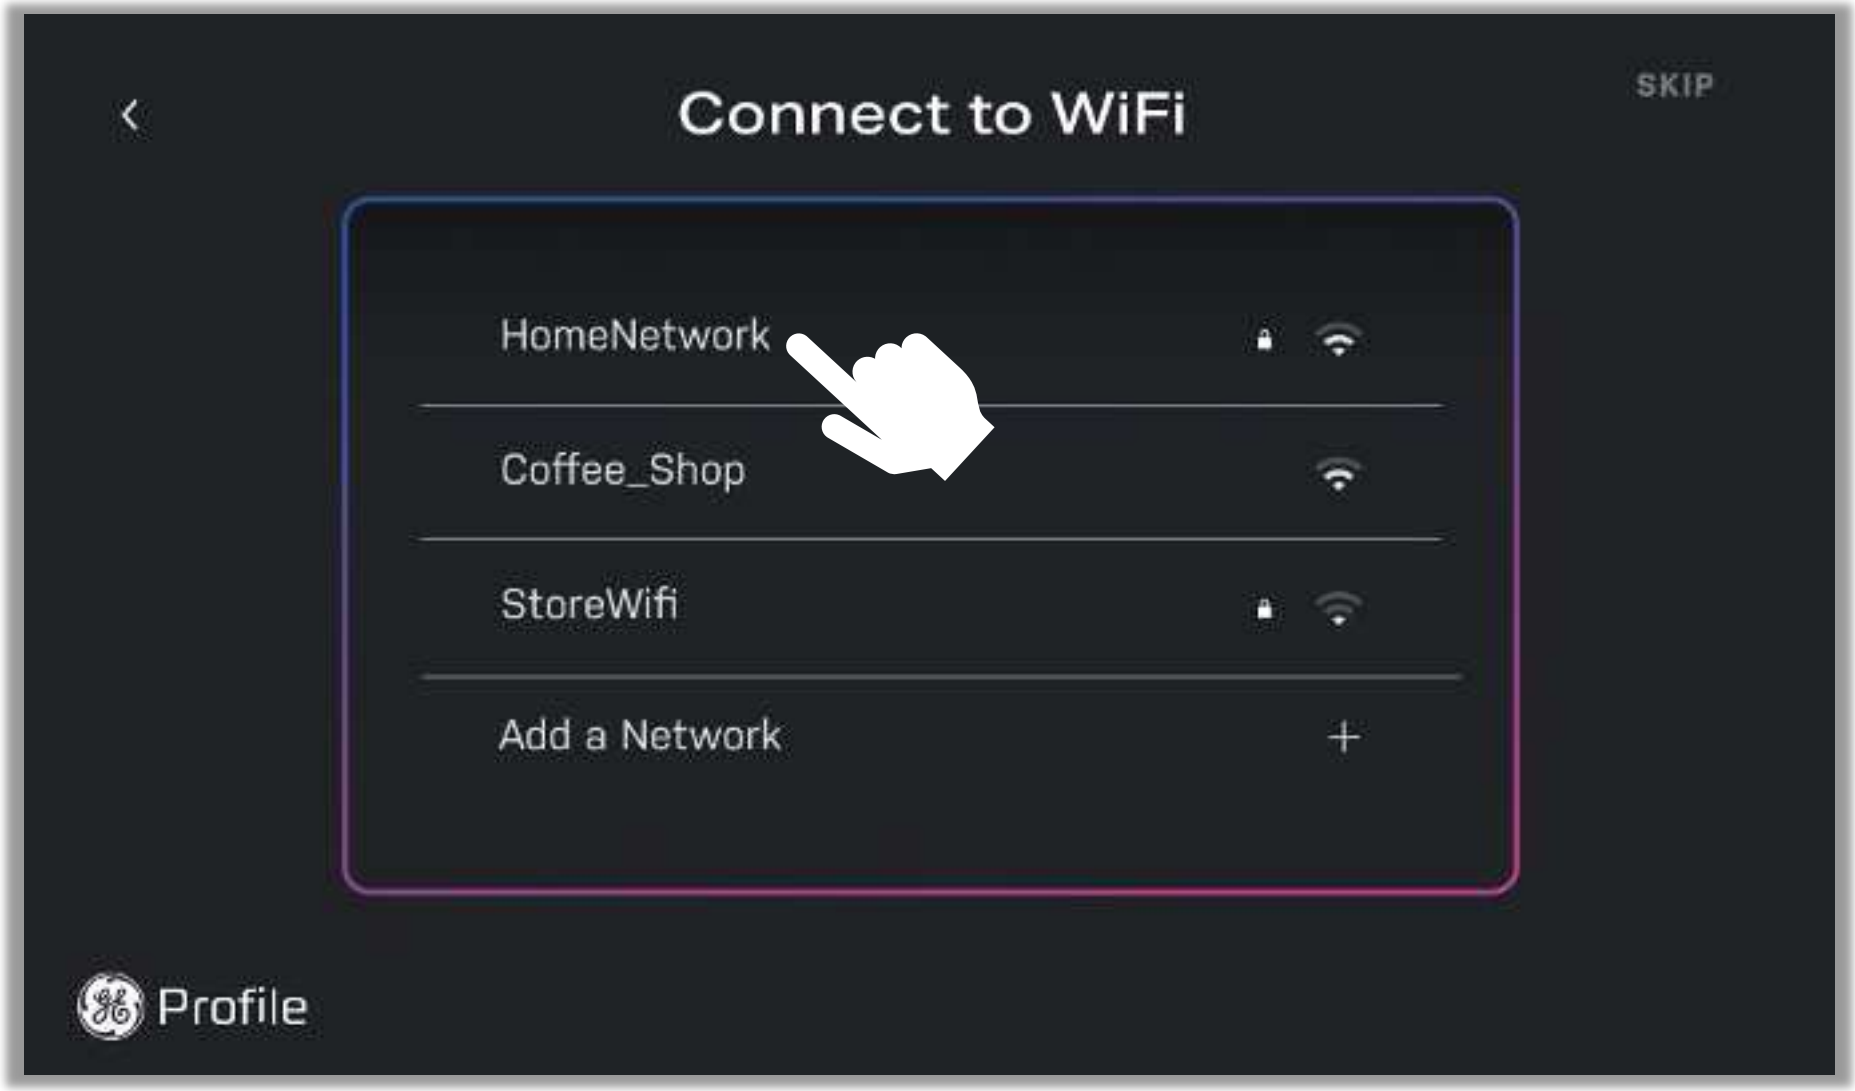

Getting started

Type your password then click "NEXT"

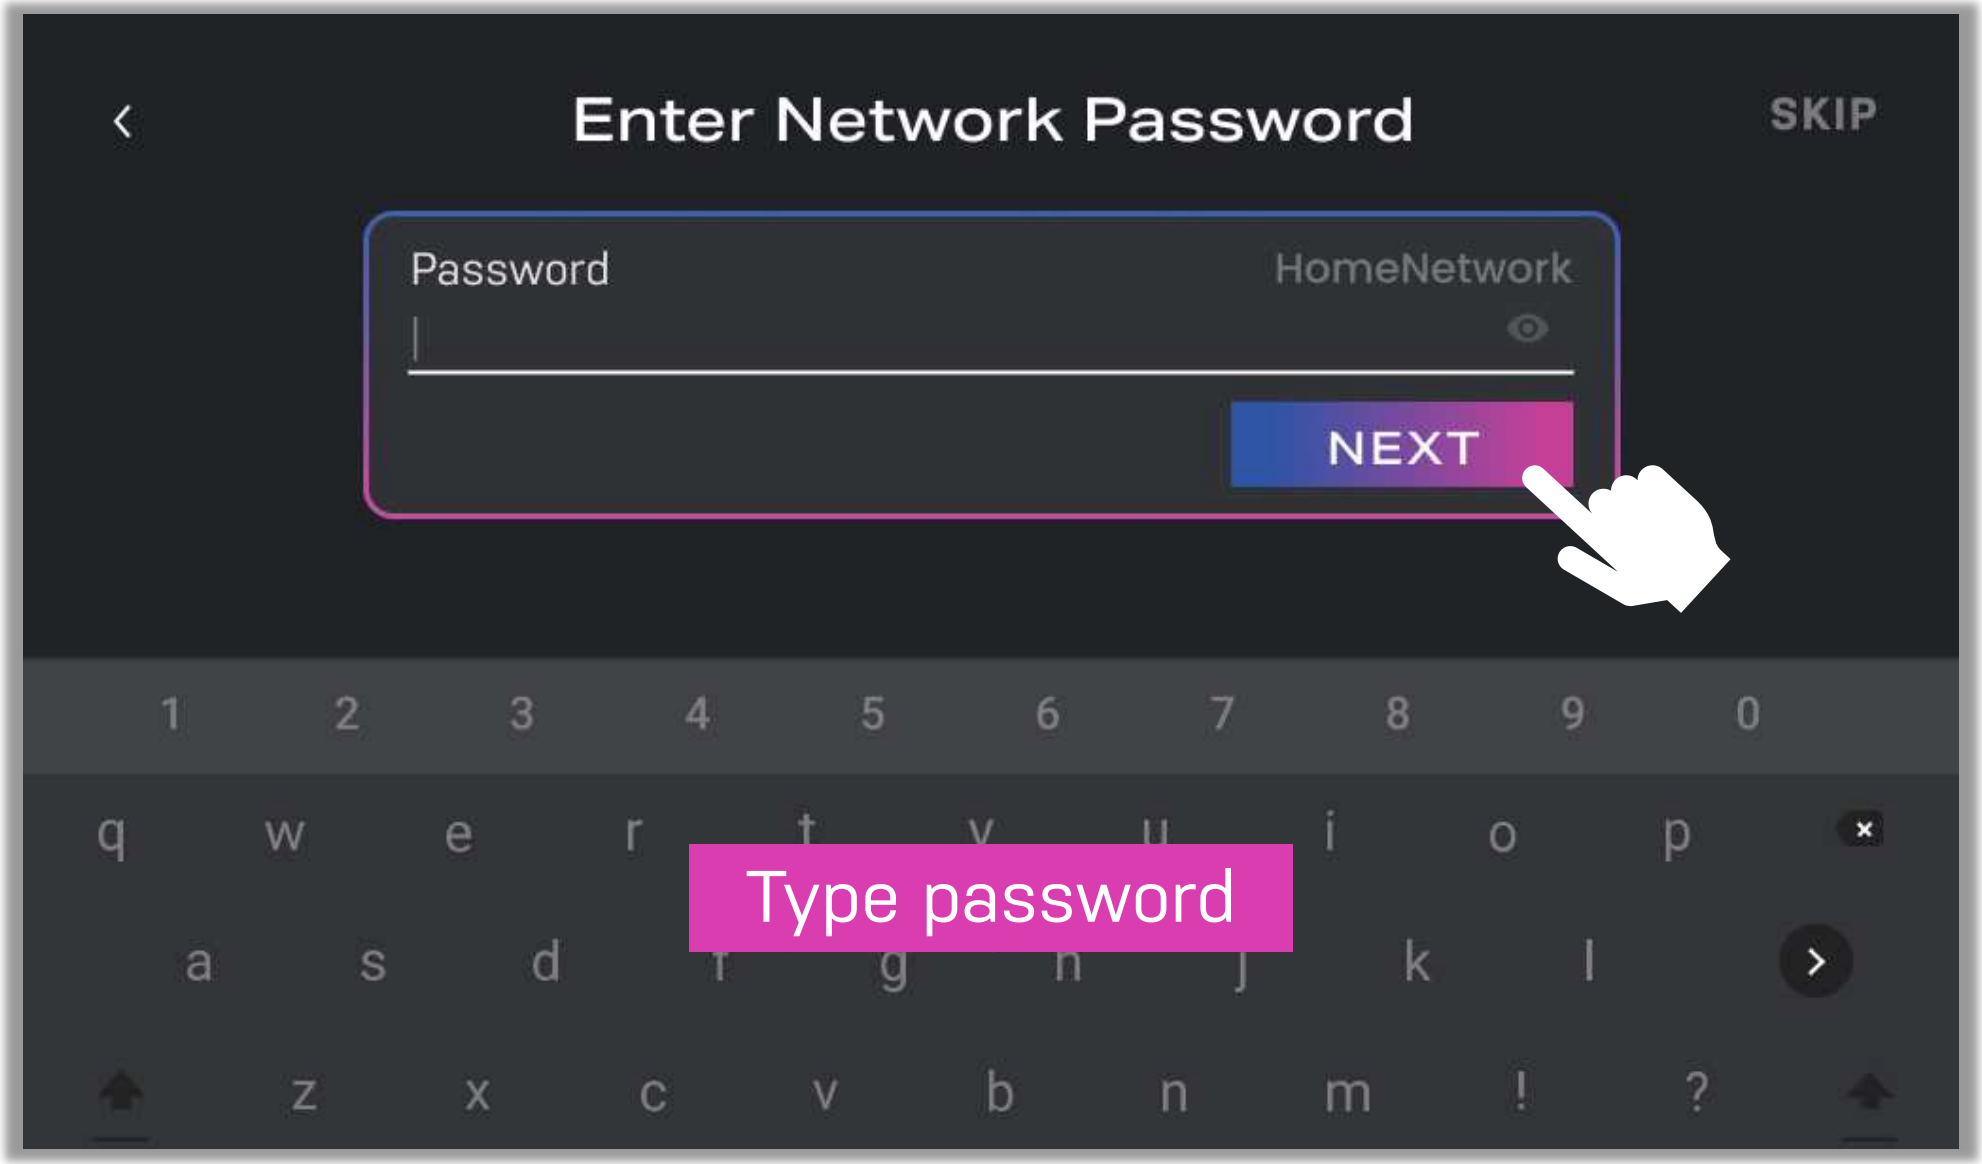

Getting Started

WiFi connection confirmation

Create a SmartHQ™ account (Or use the account you already have!)

Download the SmartHQ™ app

iPhone

https://apps.apple.com/us/app/smarthq/id992883749

Note: for everyone in the household to have access to the refrigerator and shared, digital shopping list on SmartHQ, you will be sharing a log-in and password. You will both use that log in on your own devices.

Google Play

https://play.google.com/store/apps/details?id=com.ge.kitchen&pcampaignid=web_share

Creating a SmartHQ™ account

https://accounts.brillion.geappliances.com/account/register

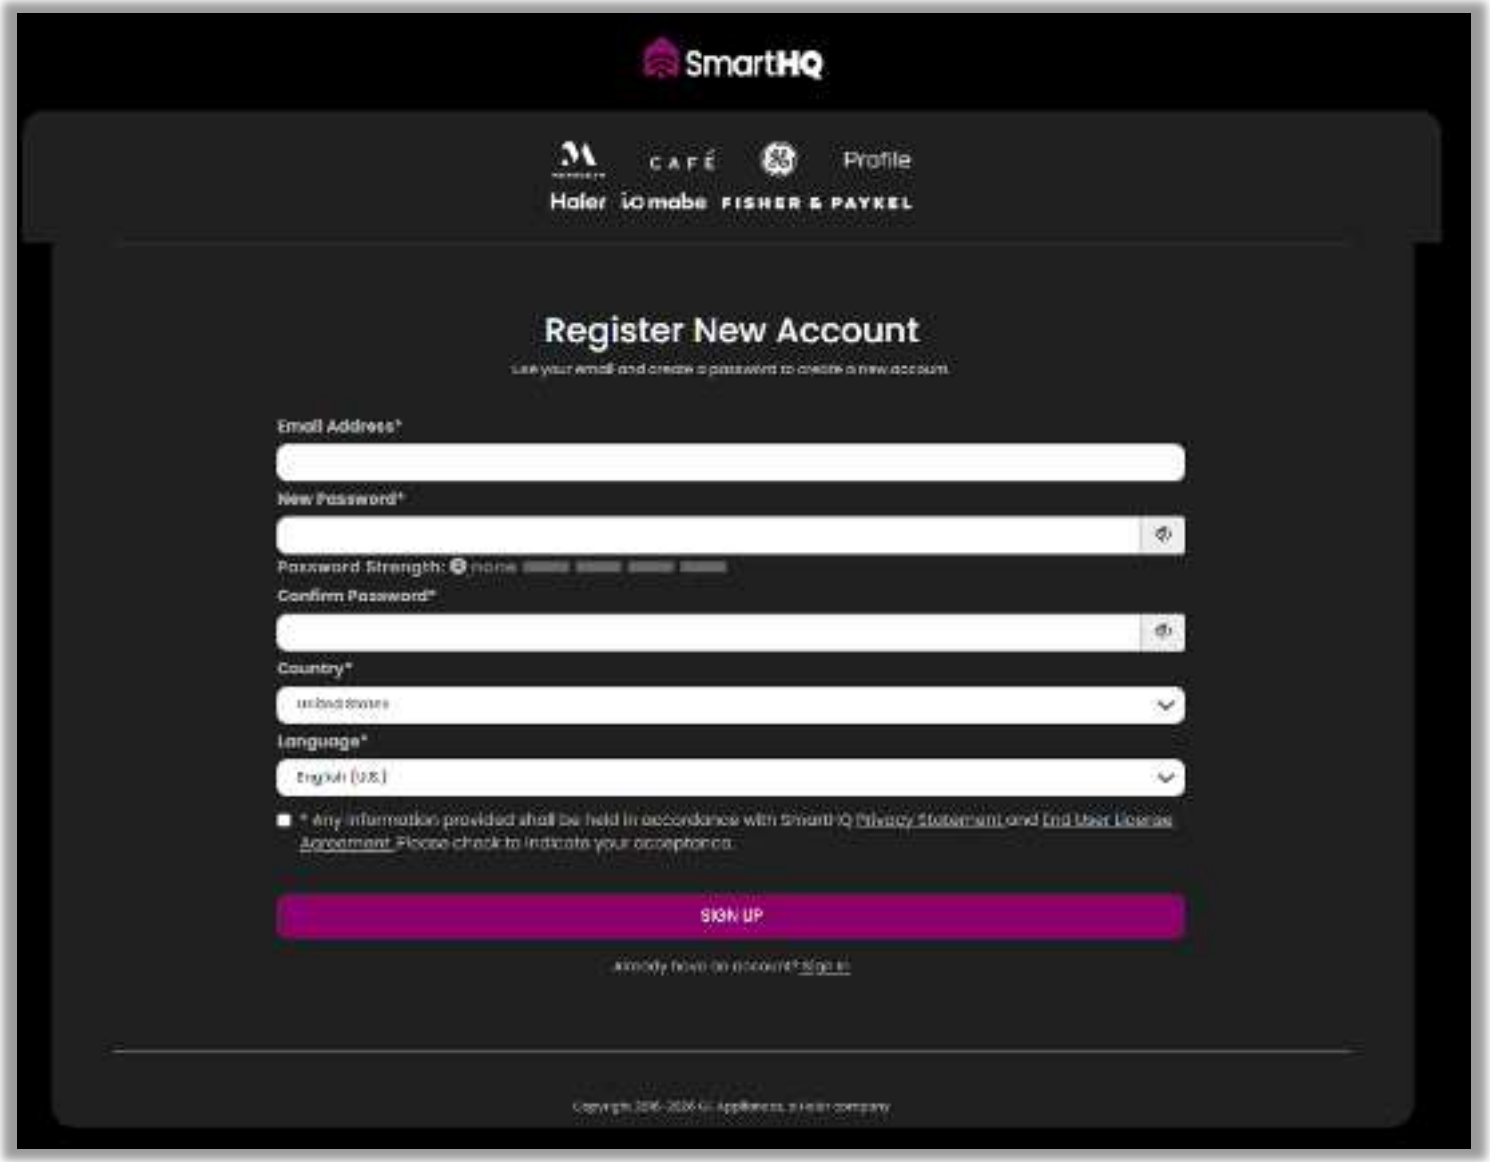

Connect your fridge to your SmartHQ™ account

Scan the QR code with your phone camera to sync to SmartHQ

Then enter the 5-digit code under the QR code when prompted

(easiest option)

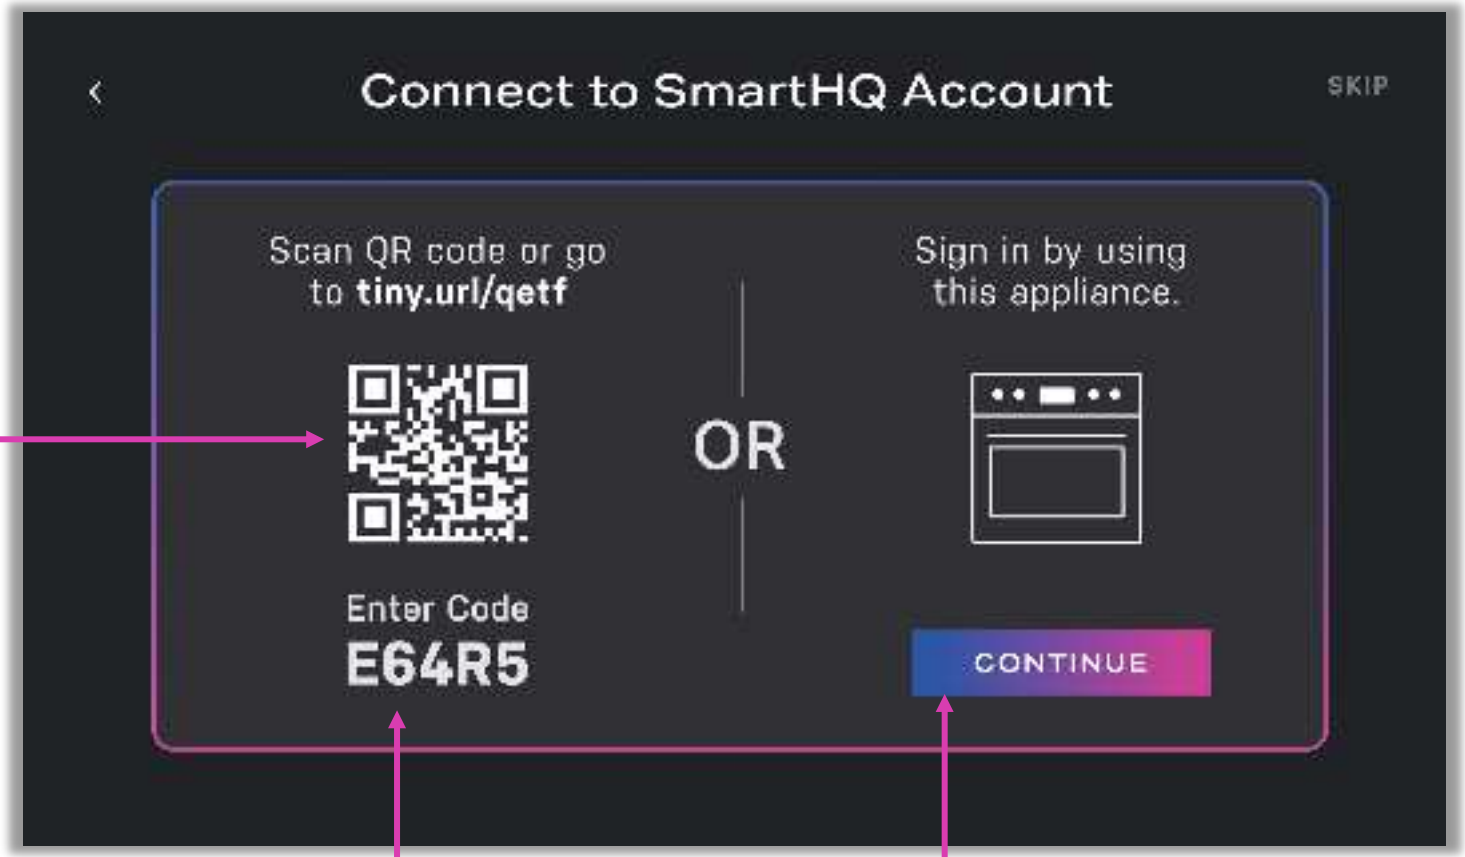

Code for example only

OR manually type your SmartHQ account email and password onto the appliance

Connect to SmartHQ

You can confirm you're connected when you see "Sign Out"

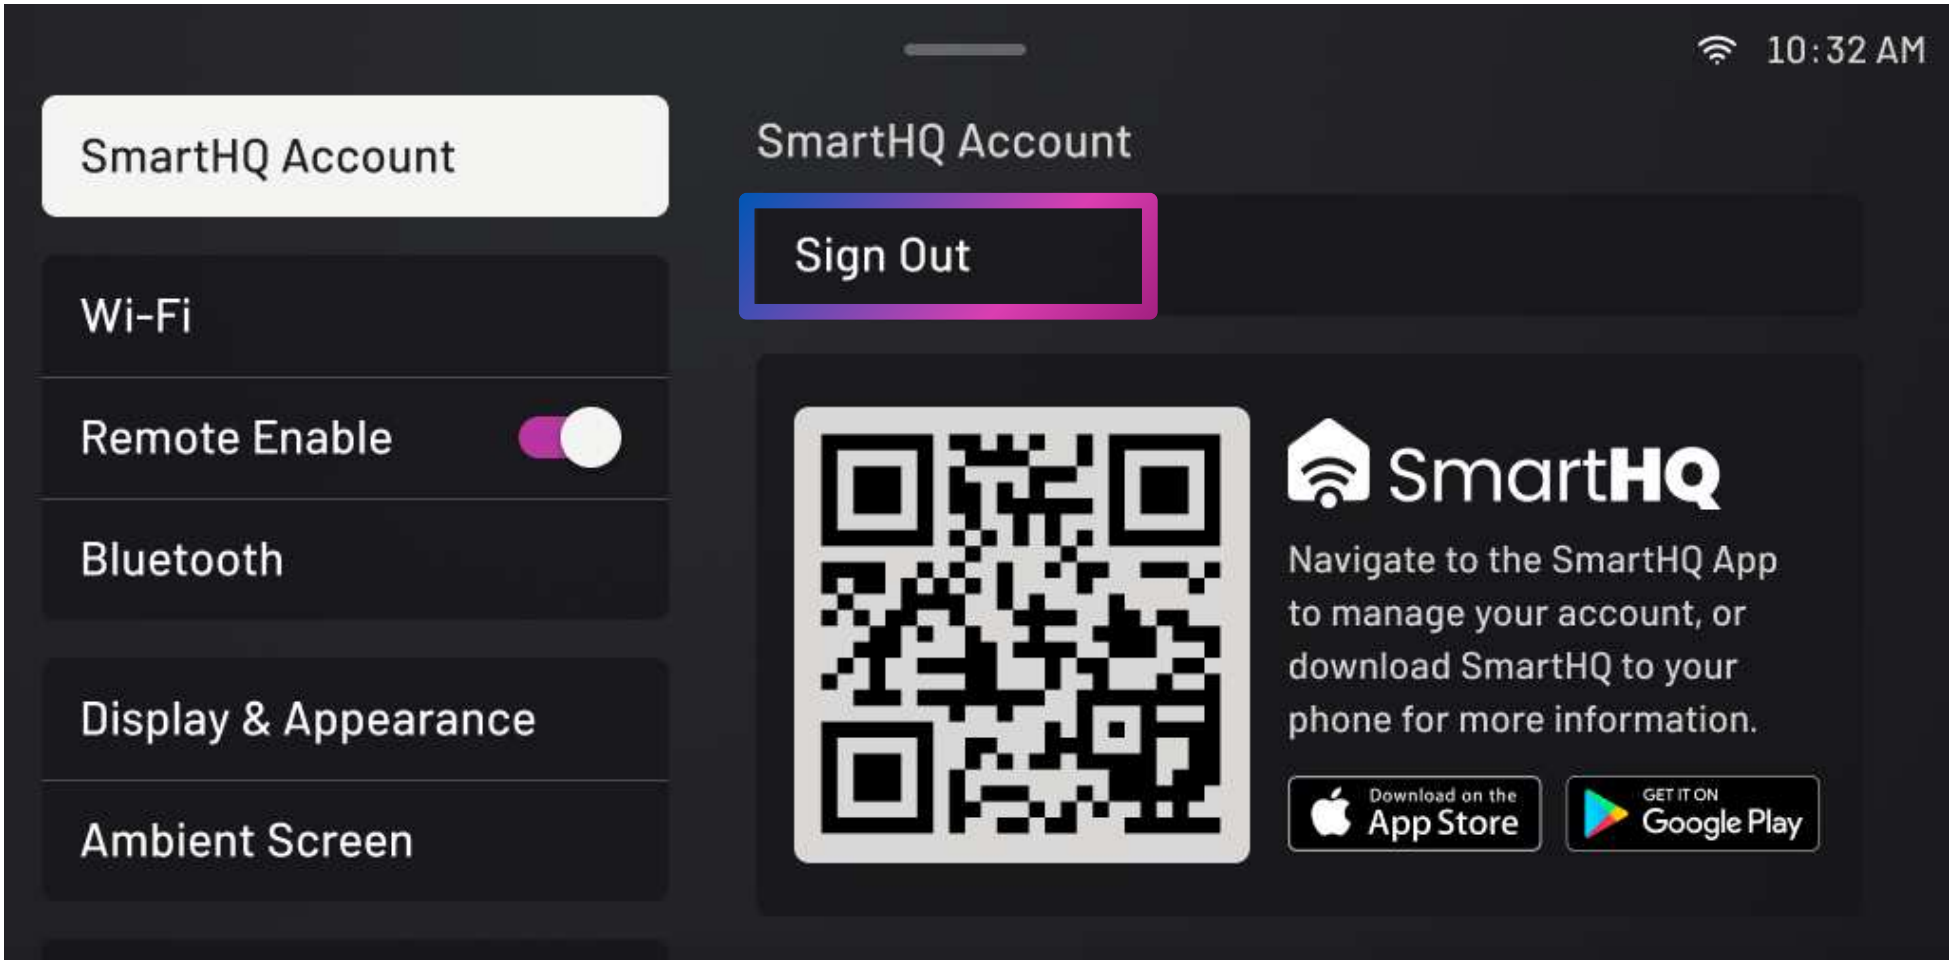

Access Your Settings

Profile™

4-door fridge with Kitchen Assistant™

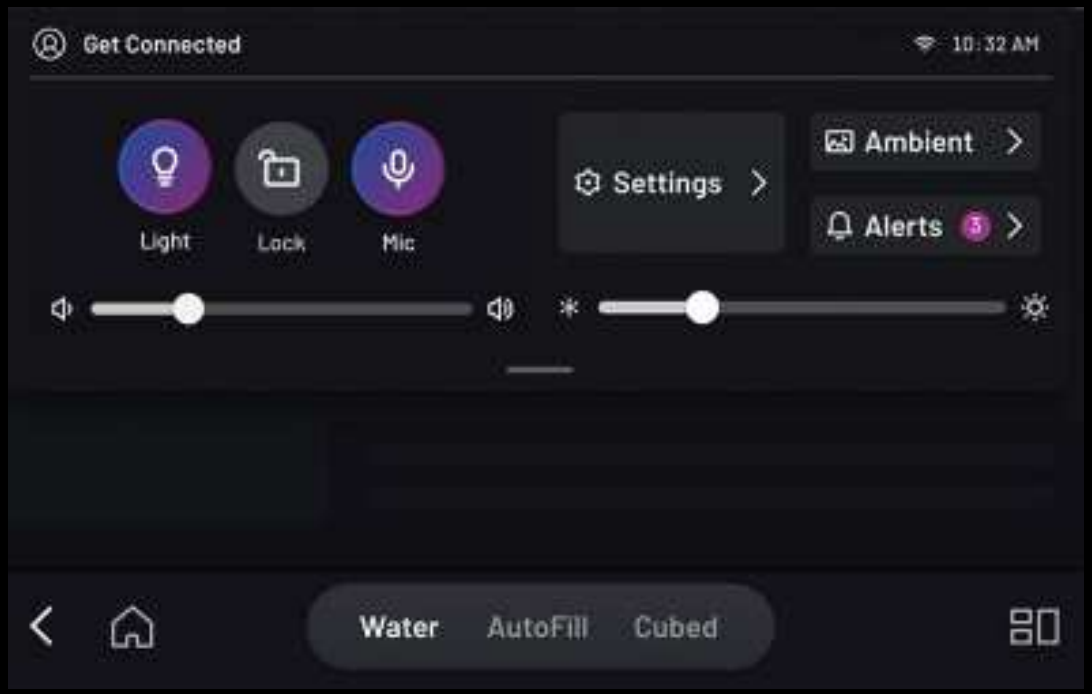

Access Your Settings

While you're on any screen, access the settings shade by holding your finger on the gray bar and swiping down from any screen.

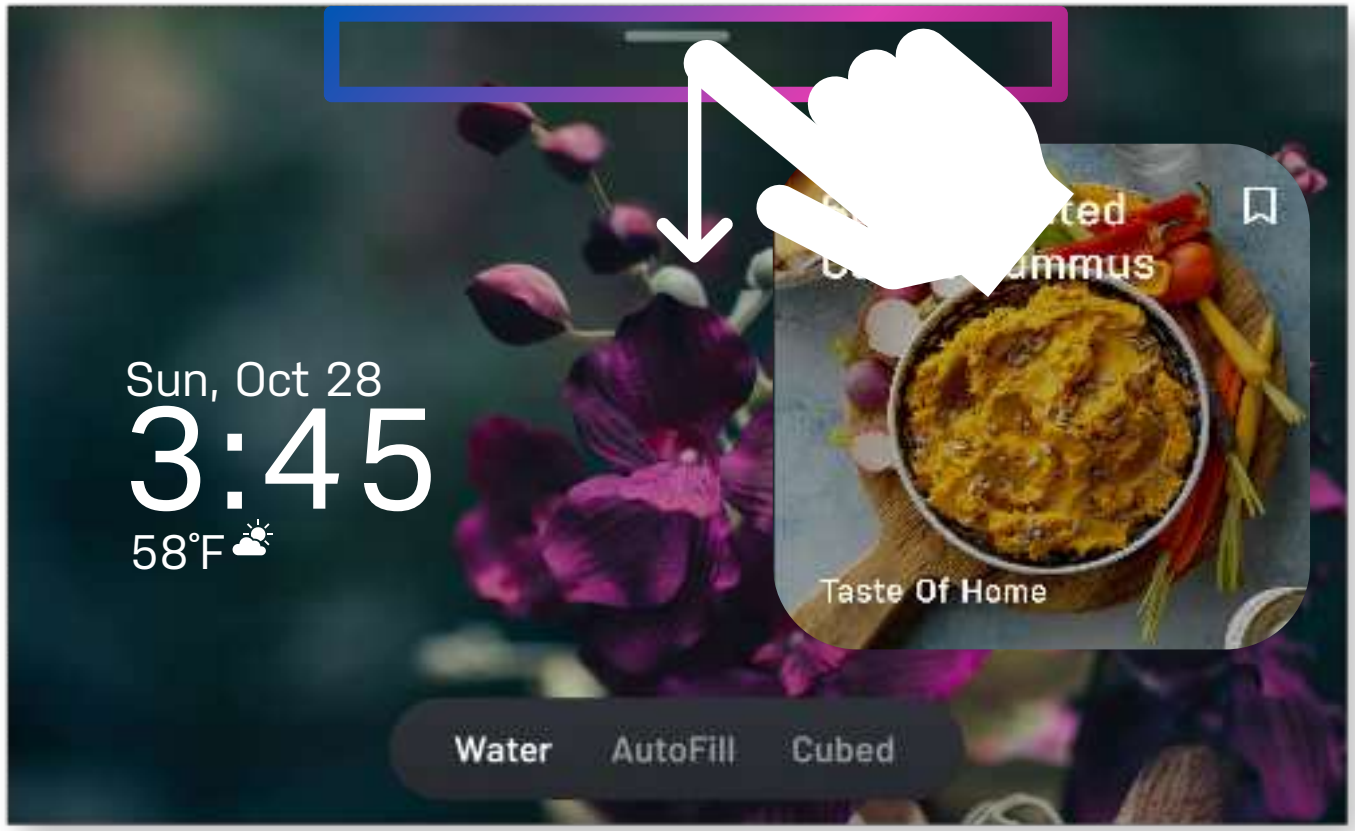

Access Your Settings

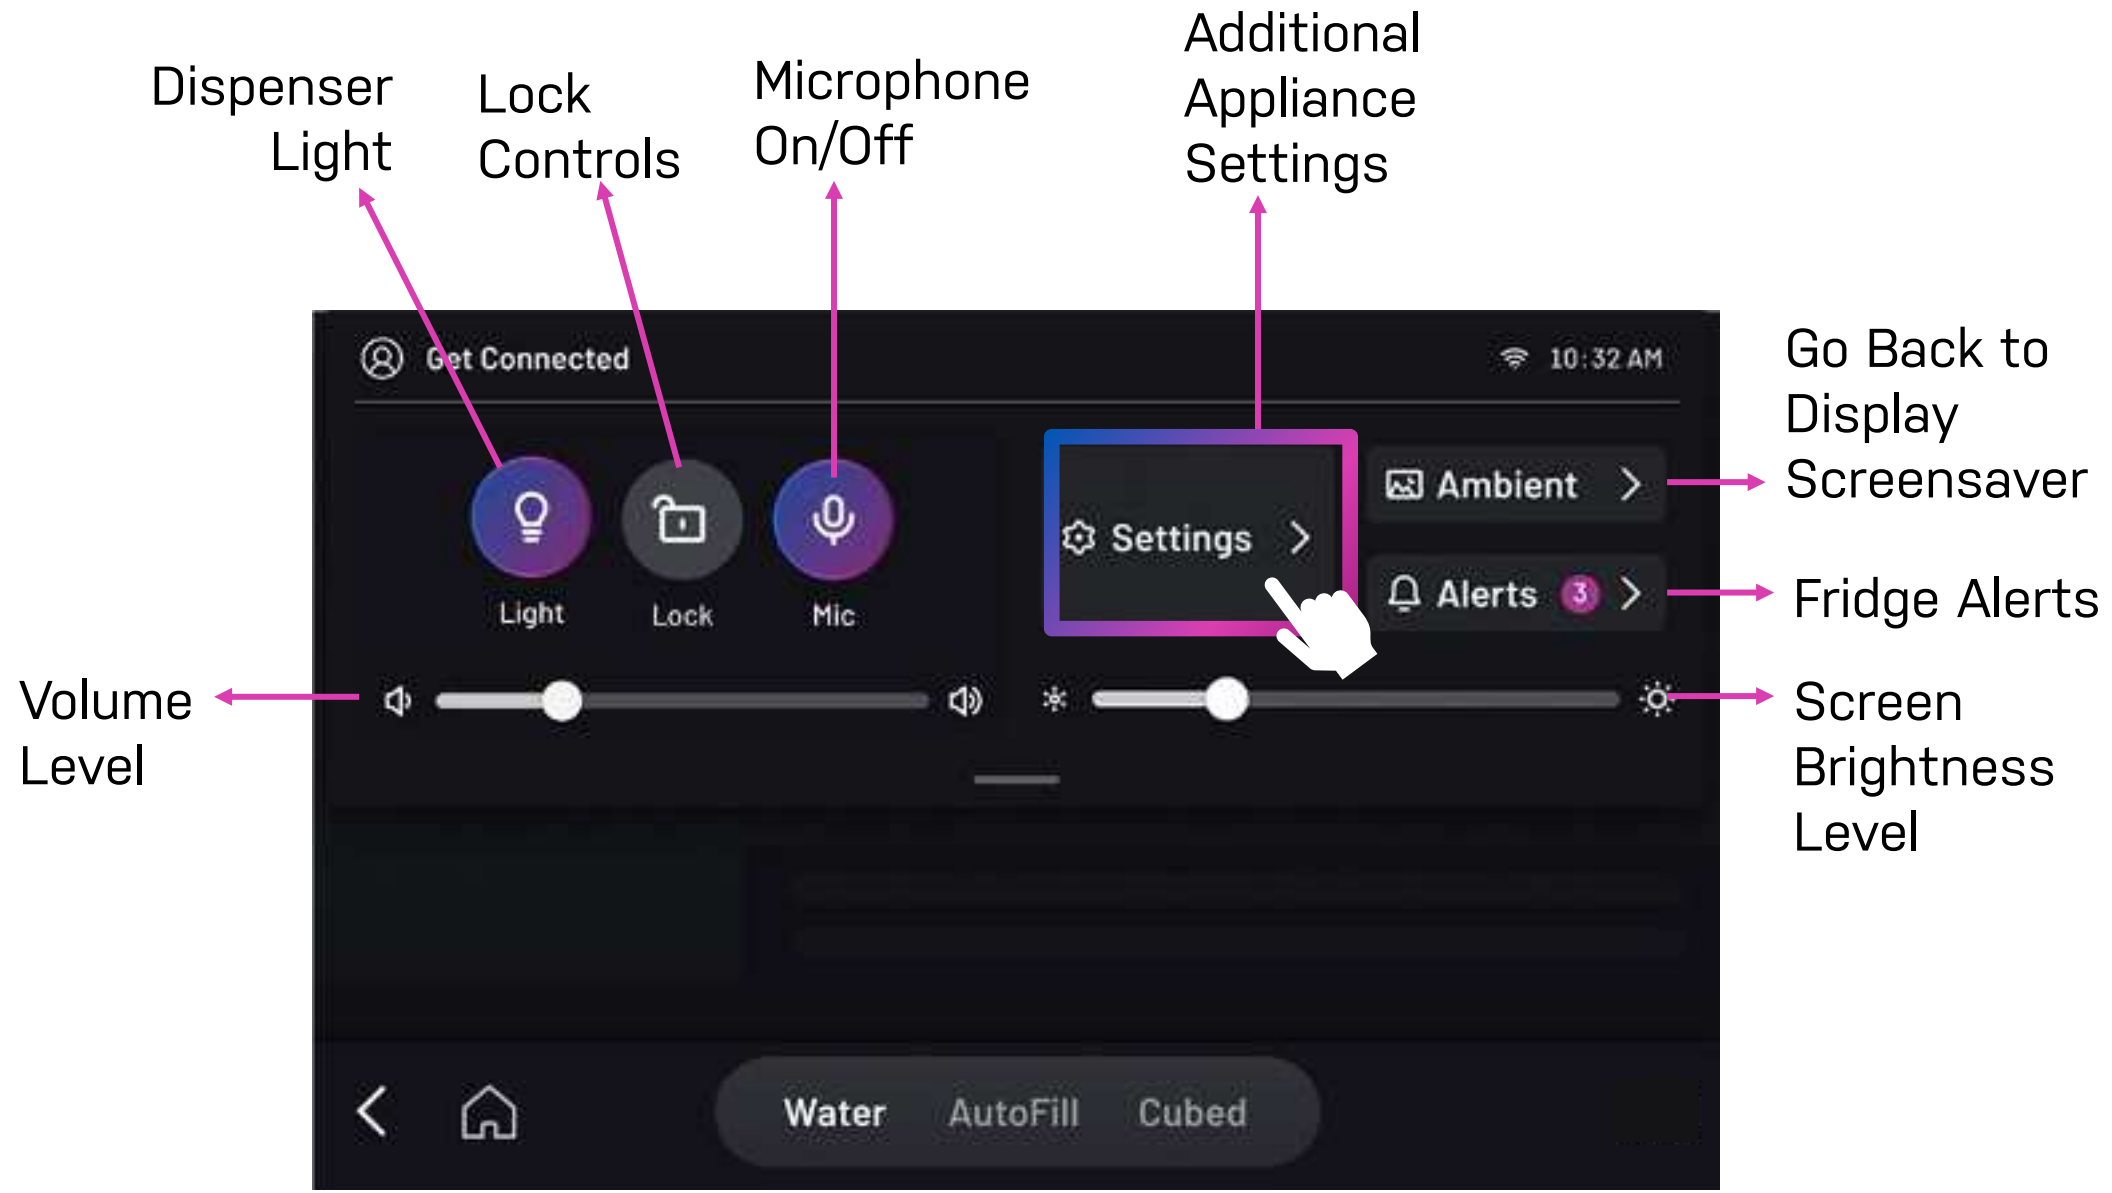

Personalizing Your Touch Screen

Profile™

4-door fridge with Kitchen Assistant™

Personalize Your Widgets & Wallpaper

Access the settings shade by holding your finger on the gray bar and swiping down.

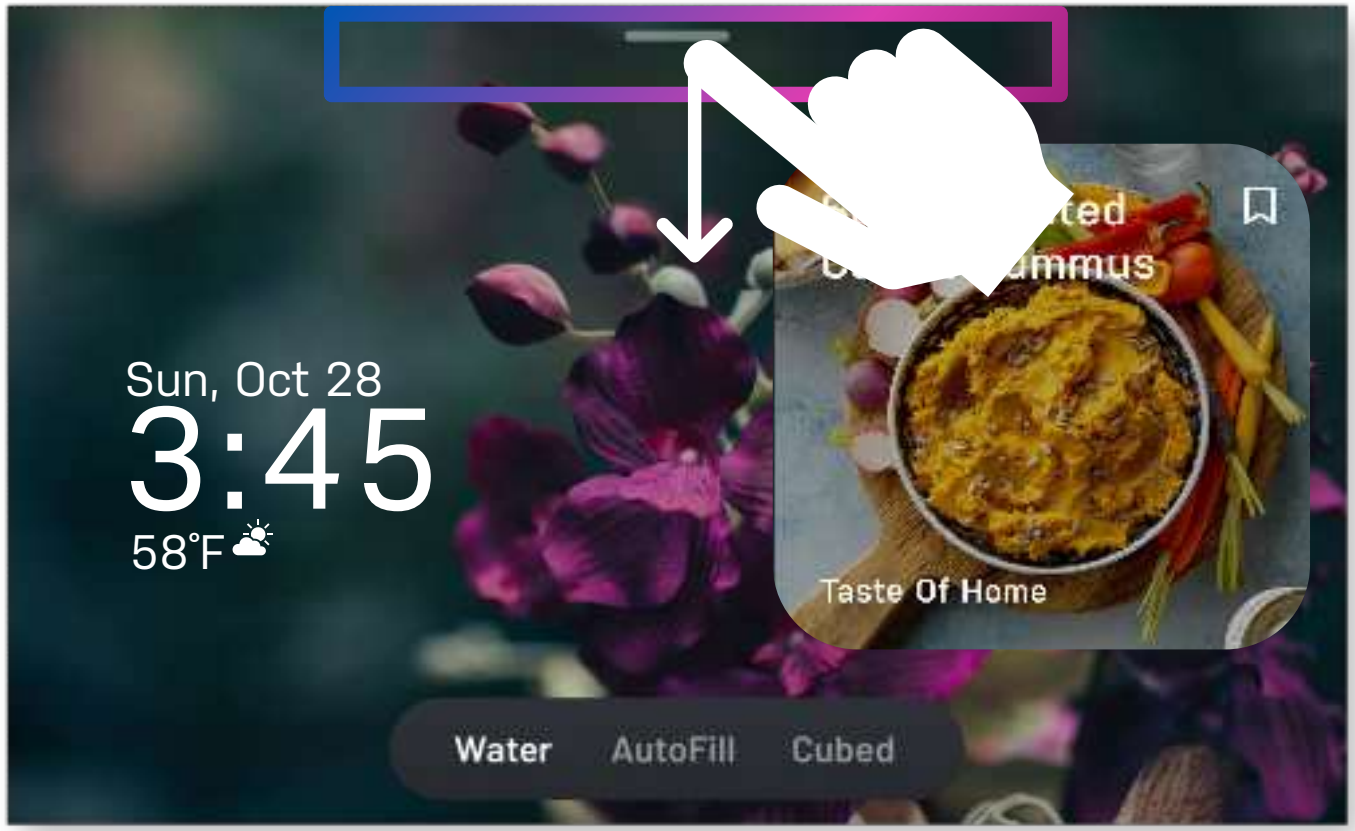

Personalize Your Widgets & Wallpaper

Dispenser Light

Lock Controls

Microphone On/Off

Expanded Appliance Settings – click here to personalize your fridge wallpaper/ambient screen

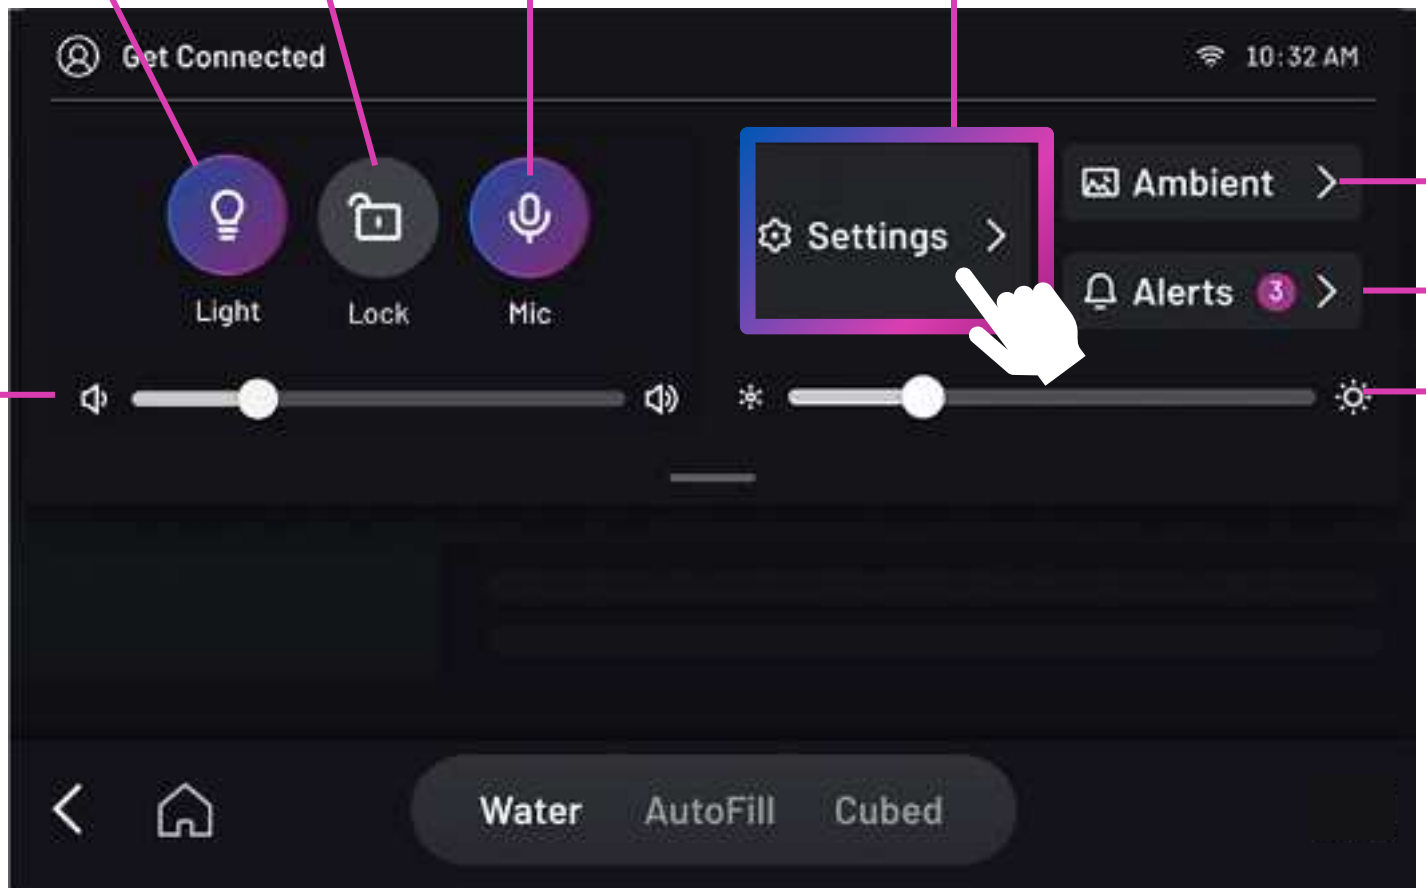

Go Back to Display Screensaver

Fridge Alerts

Volume Level

Screen Brightness Level

Personalize Your Widgets & Wallpaper

Choose whether you want the clock, date, or weather displayed

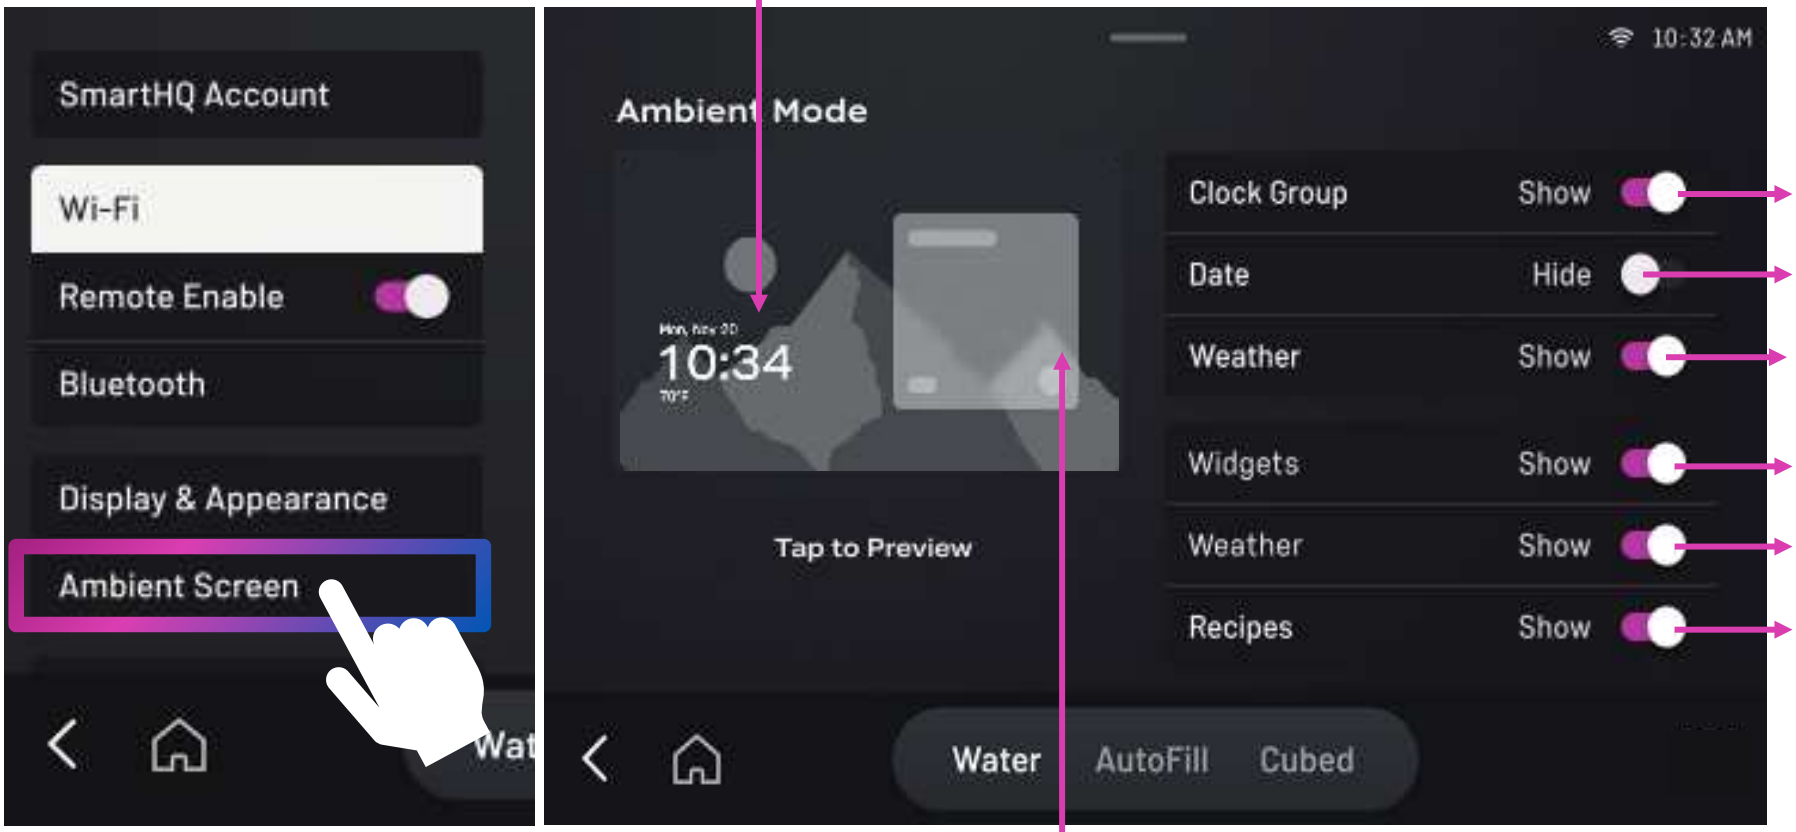

Choose whether you want widgets displayed

Personalize Your Widgets & Wallpaper

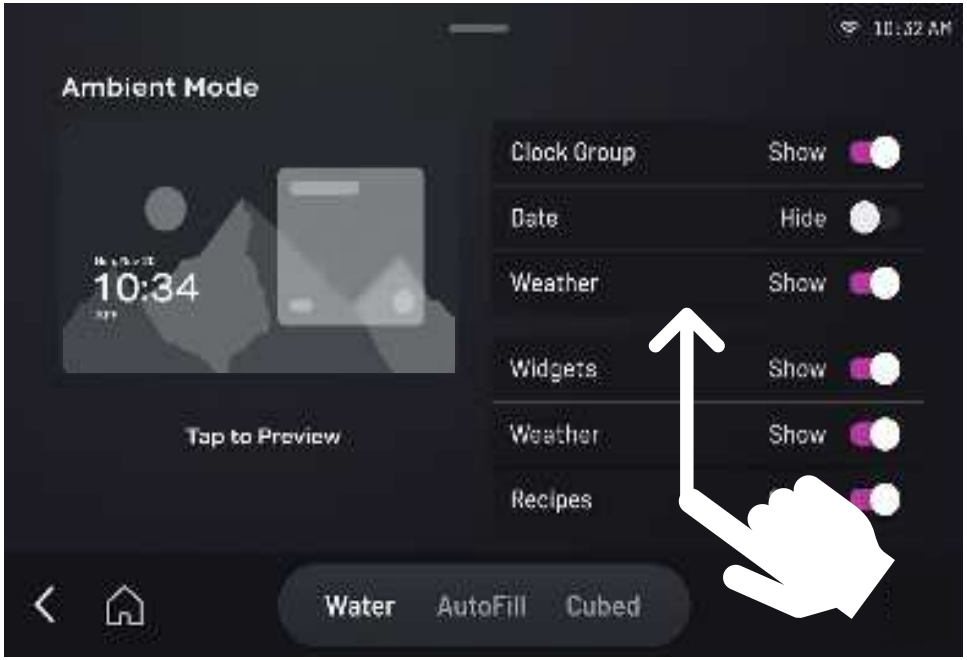

Scroll up to change the ambient screen wallpaper by finding “Select Backdrop”

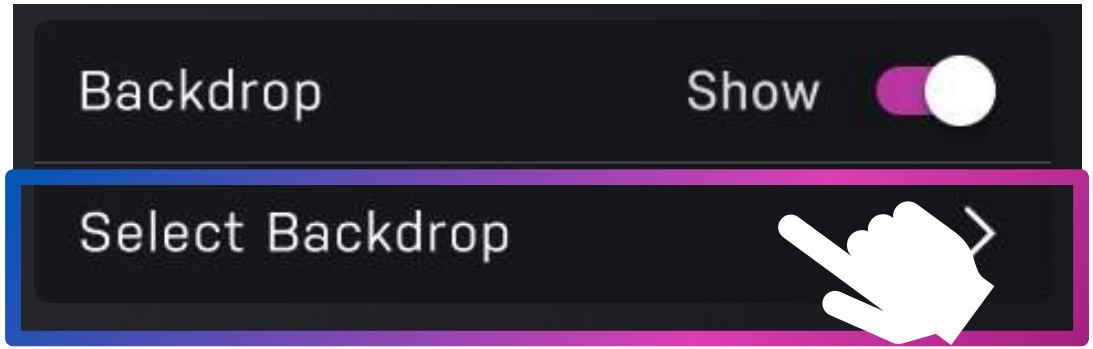

Click “Select Backdrop" to browse ambient screen wallpapers

Personalize Your Widgets & Wallpaper

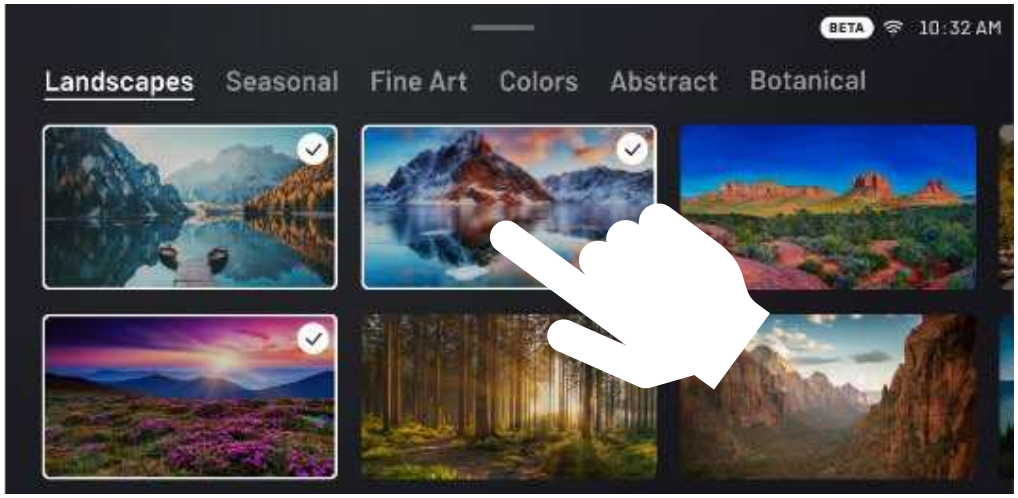

Select one wallpaper or select multiple that will rotate

Click "clear all" to start over

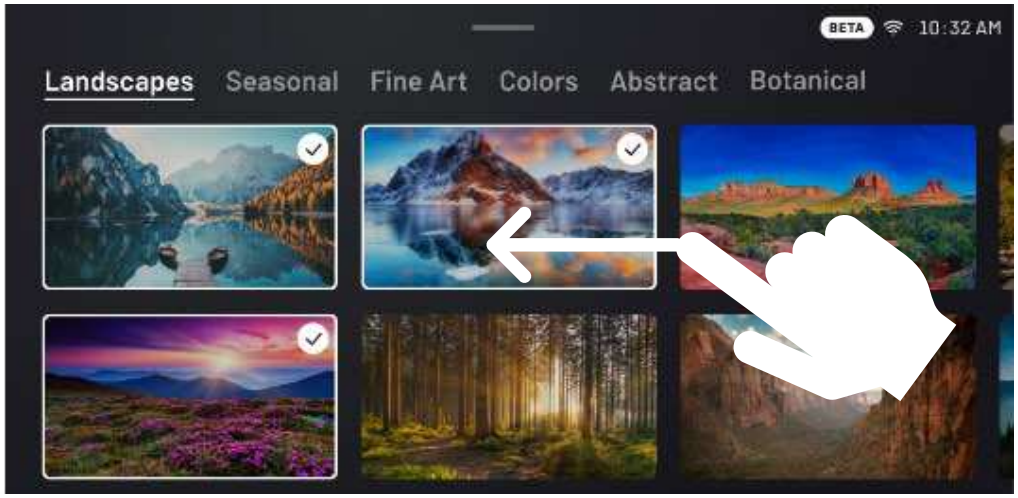

Scroll to the right to see more options or click the categories above to skip forward

Personalize Your Widgets & Wallpaper

This is an example of the ambient screen when you have all options selected

Custom Background

Date

Time

Weather

Widget (choose between rotating recipes or weather)

Water Bar

Personalize Your Widgets & Wallpaper

This is an example of the ambient screen when you have all options removed for a clean aesthetic.

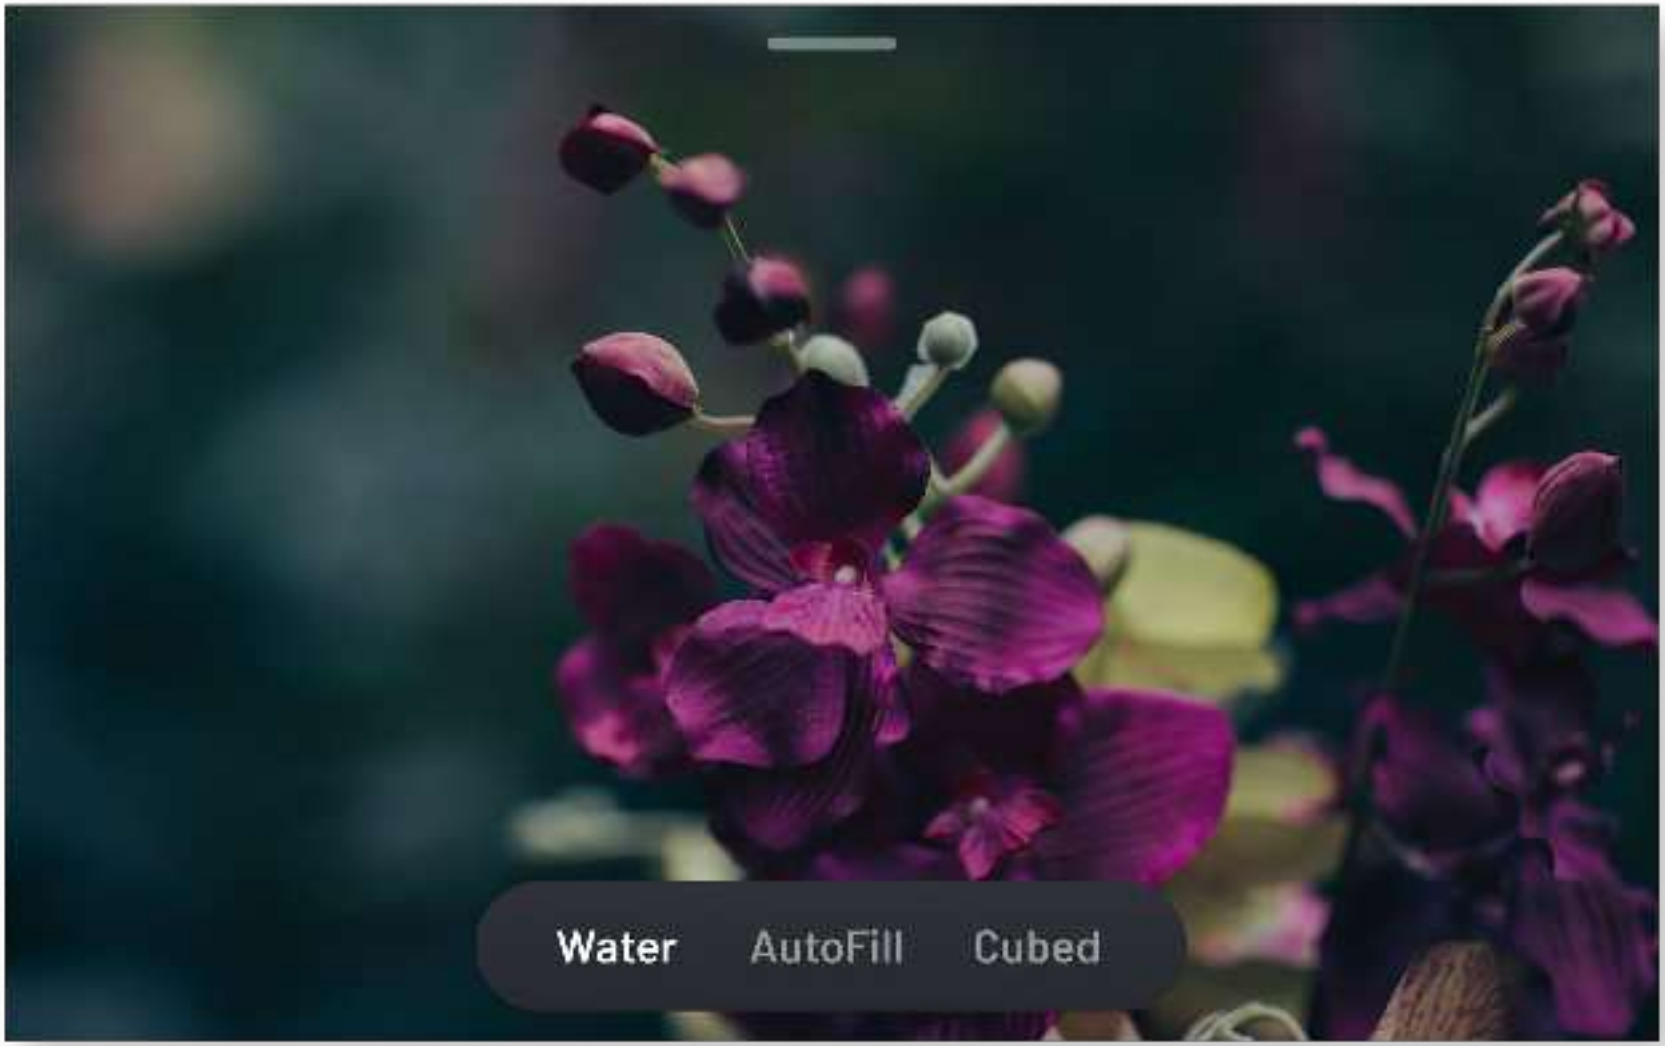

Explore Your Home Screen Apps

Profile™

4-door fridge with Kitchen Assistant™

Home Screen

To access more features, swipe to the left.

Home Screen

This is a view of the features as you swipe left on the home screen.

Shortcuts

Shopping List

King Arthur

Water Center

SmartHQ Assistant

Kitchen Timers

Weather

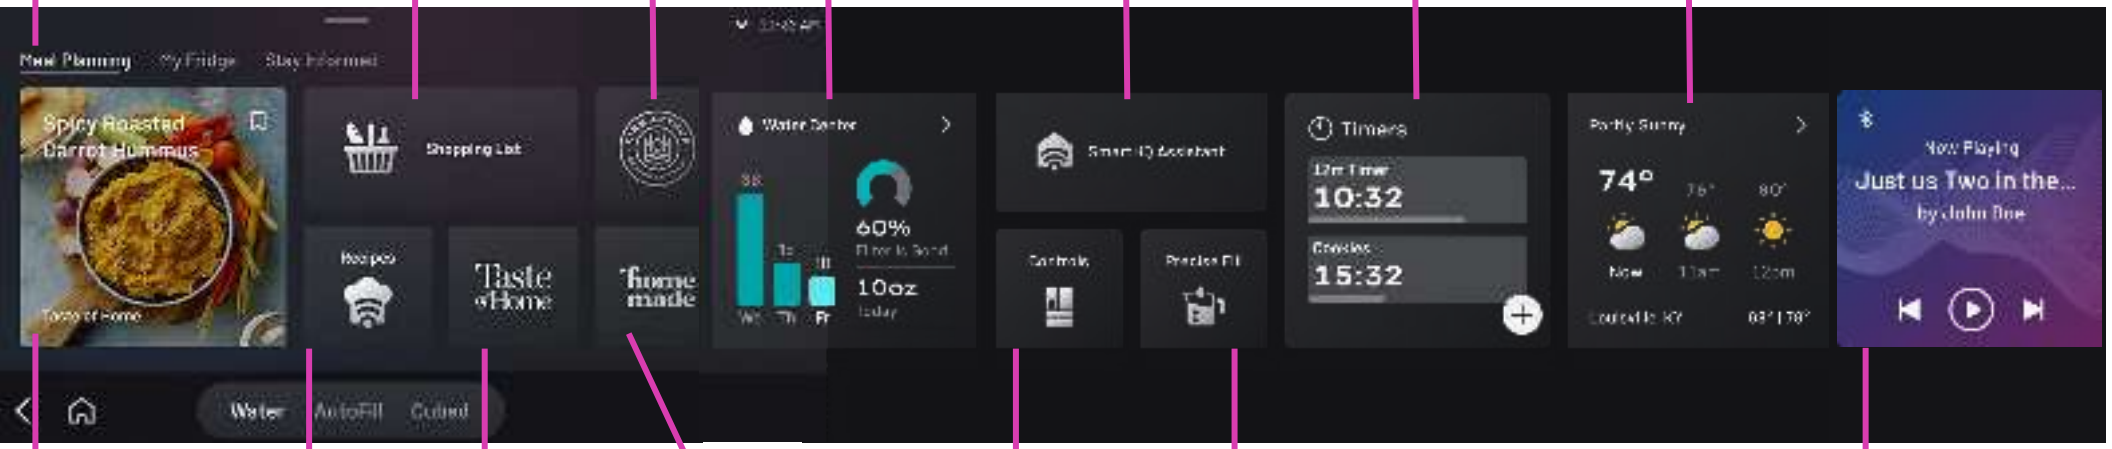

Rotating Recipe Widget

Explore All Recipes

Taste of Home

Homemade

Fridge & Freezer Controls

Precise Fill

Bluetooth® Media Player

Shopping List

Profile™

4-door fridge with Kitchen Assistant™

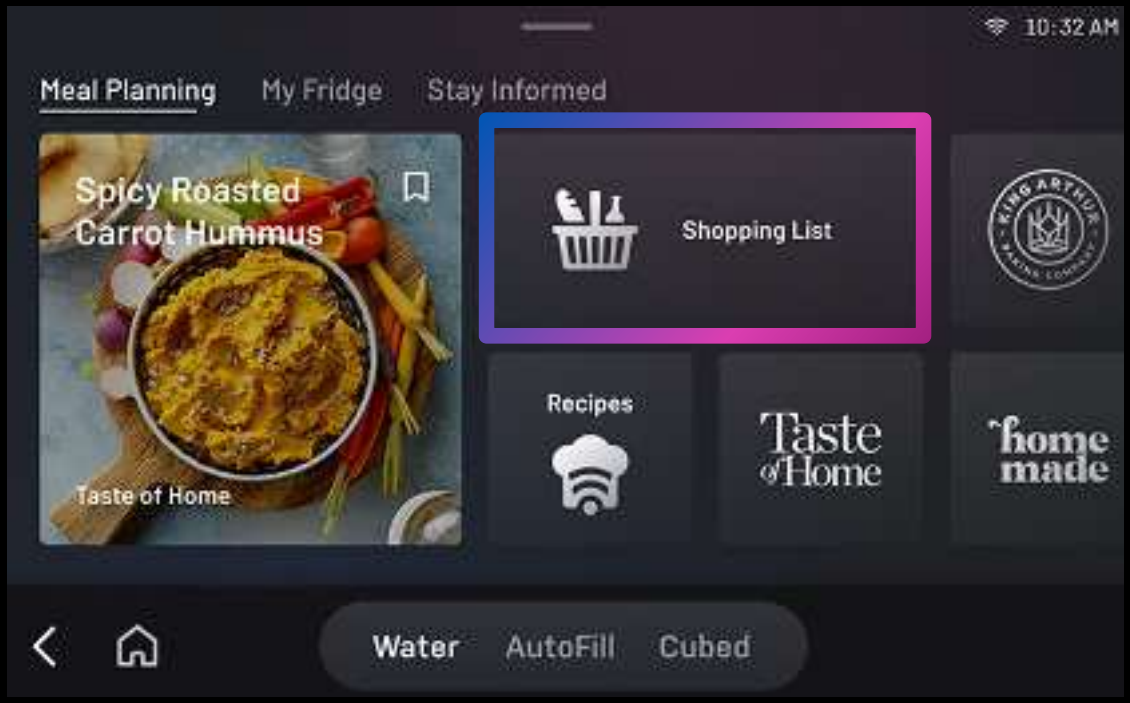

Scan-to-List

This is how you scan an item onto your shared, digital shopping list.

Hold item halfway up the dispenser on the right side under the scanner.

You will see the item populate on screen.

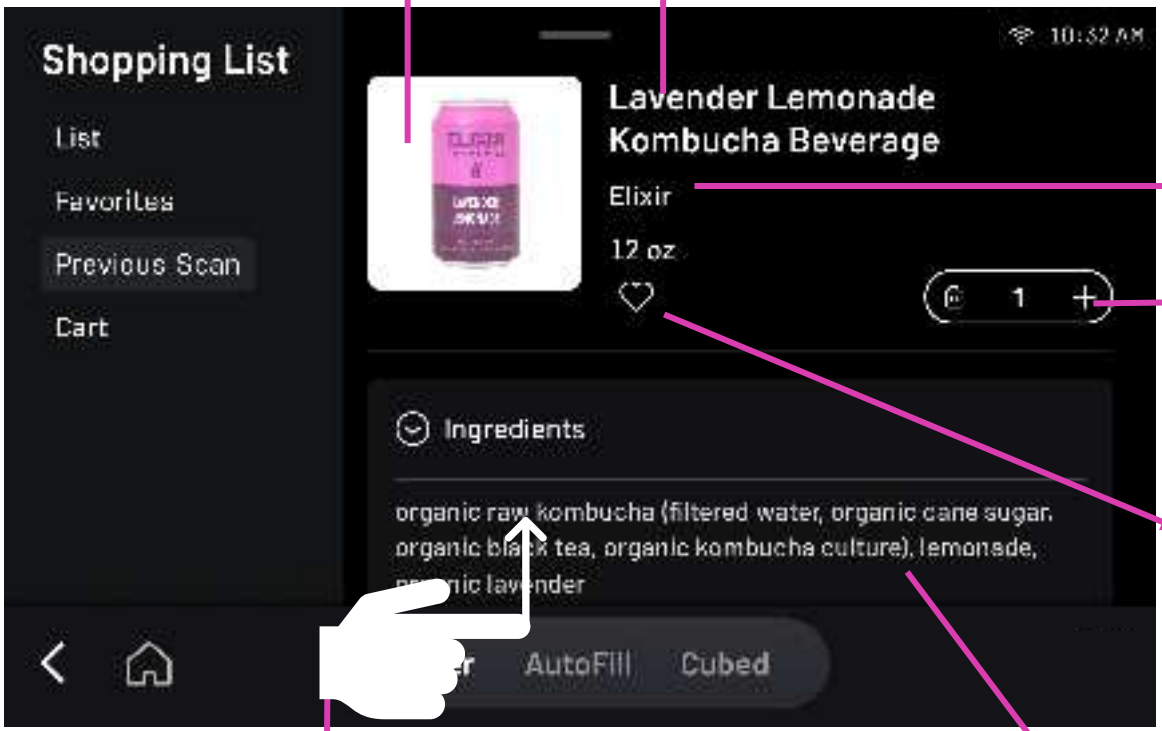

Scan-to-List

Our database contains over 4 million UPC codes from all categories of items: pantry items, fridge items, frozen goods, baking, drinks, pet supplies, baby items, home goods, self care items, toiletries, supplements, home improvement, school and office supplies, and cleaning supplies.

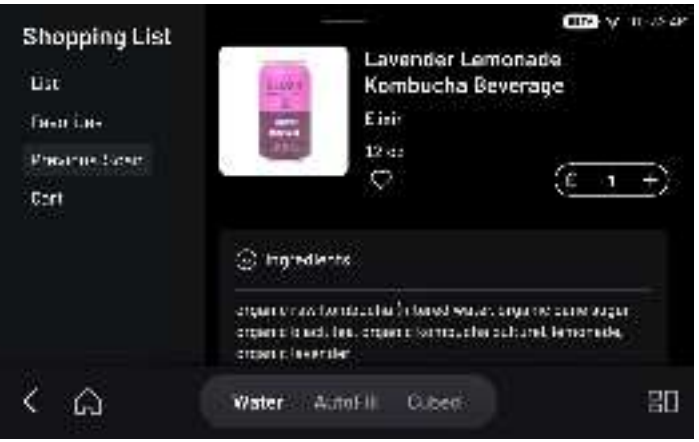

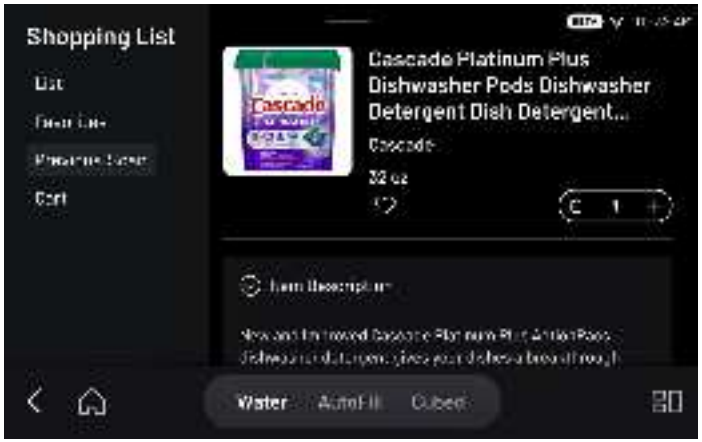

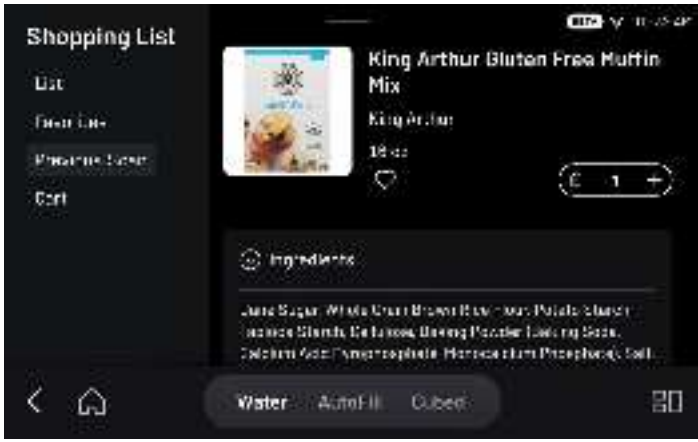

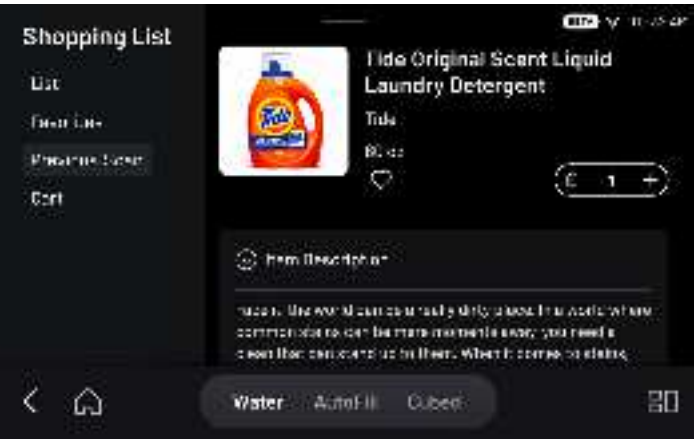

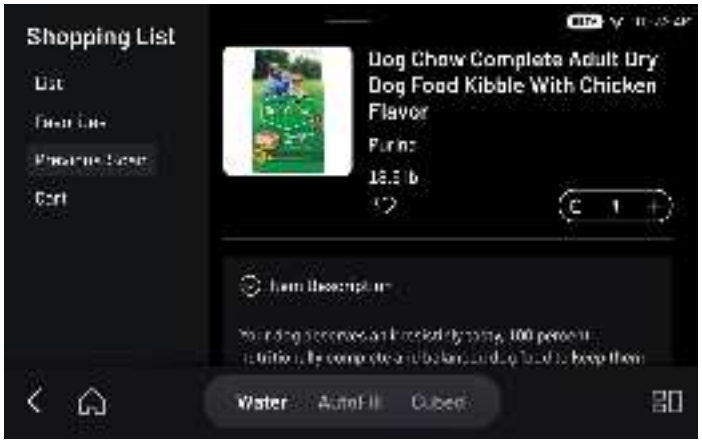

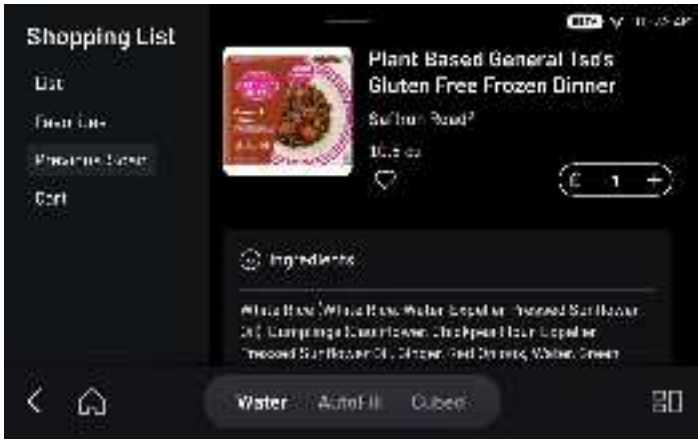

Shopping List

View your entire list.
The most recent item will be at the top.

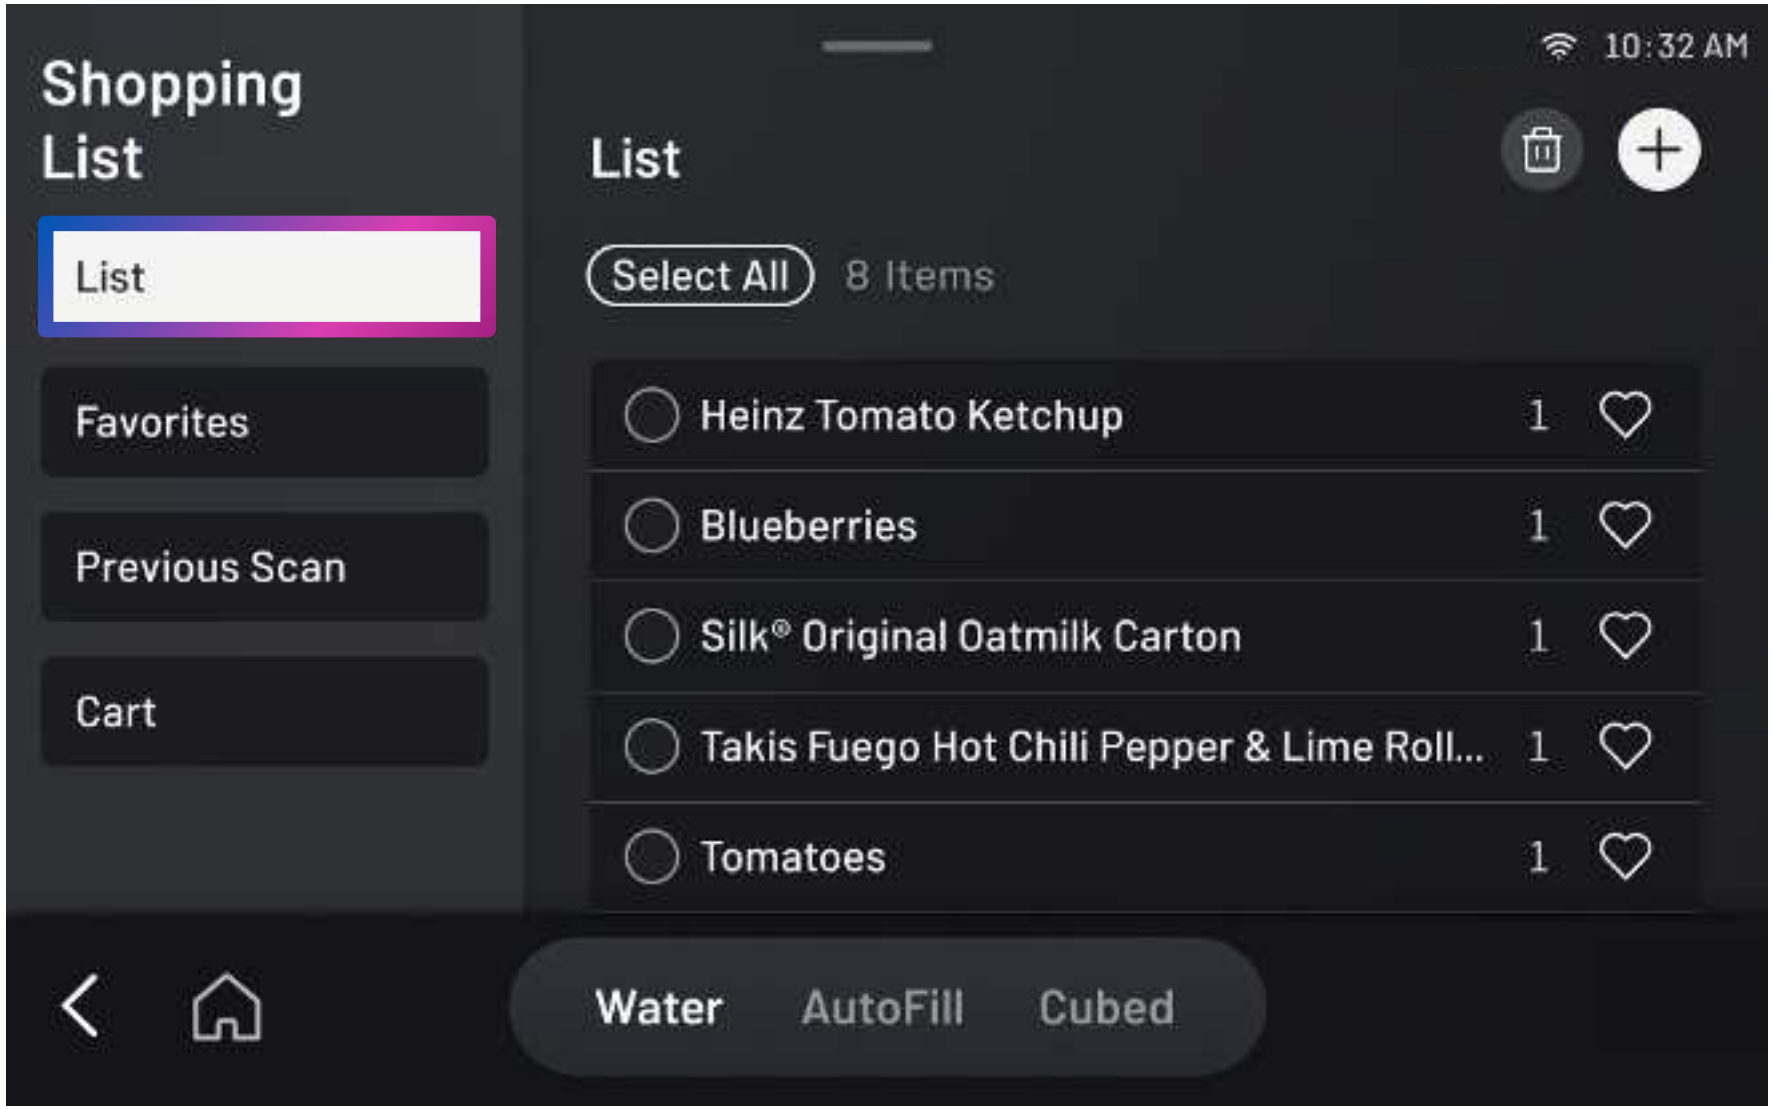

Shopping List

For items without a bar code like an apple or orange, manually type it in.

Click the (+) button.

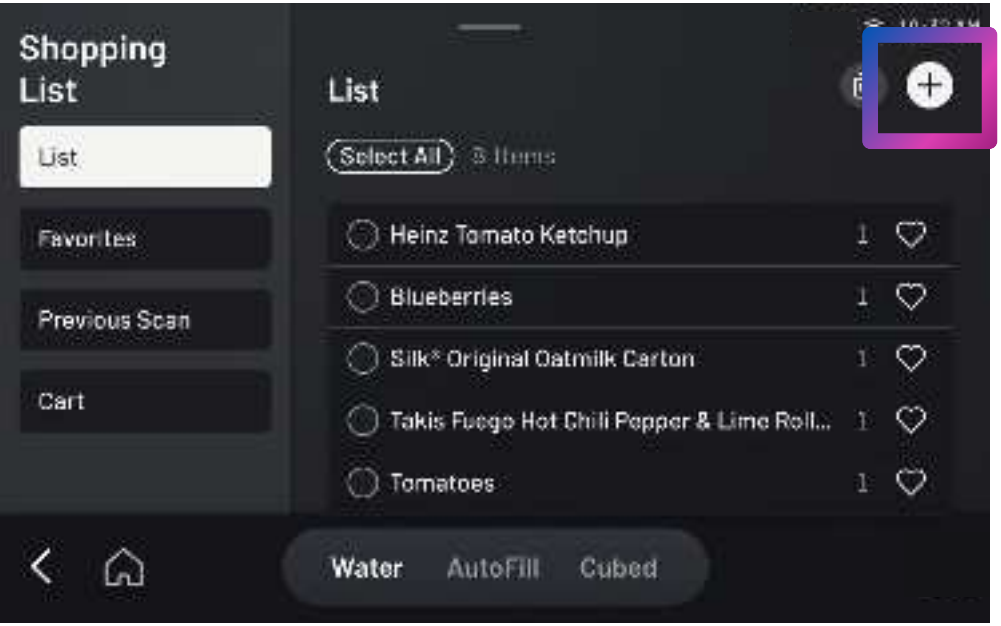

Type in your item such as "2 Honeycrisp apples" and click enter.

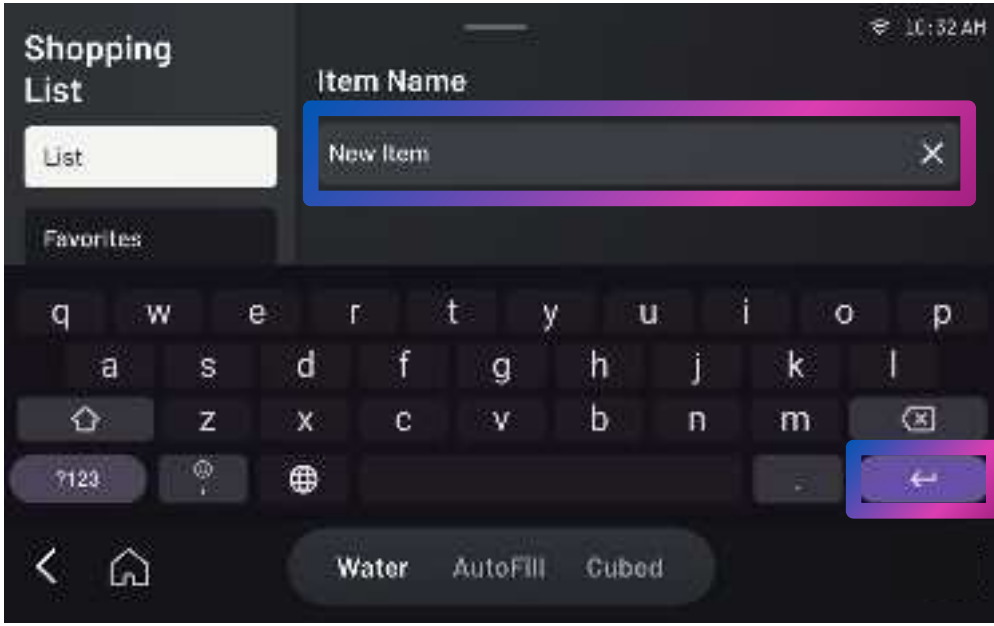

Shopping List

The list on your fridge syncs to your phone on the SmartHQ app. Your shared, digital shopping list is on the home screen of your account.

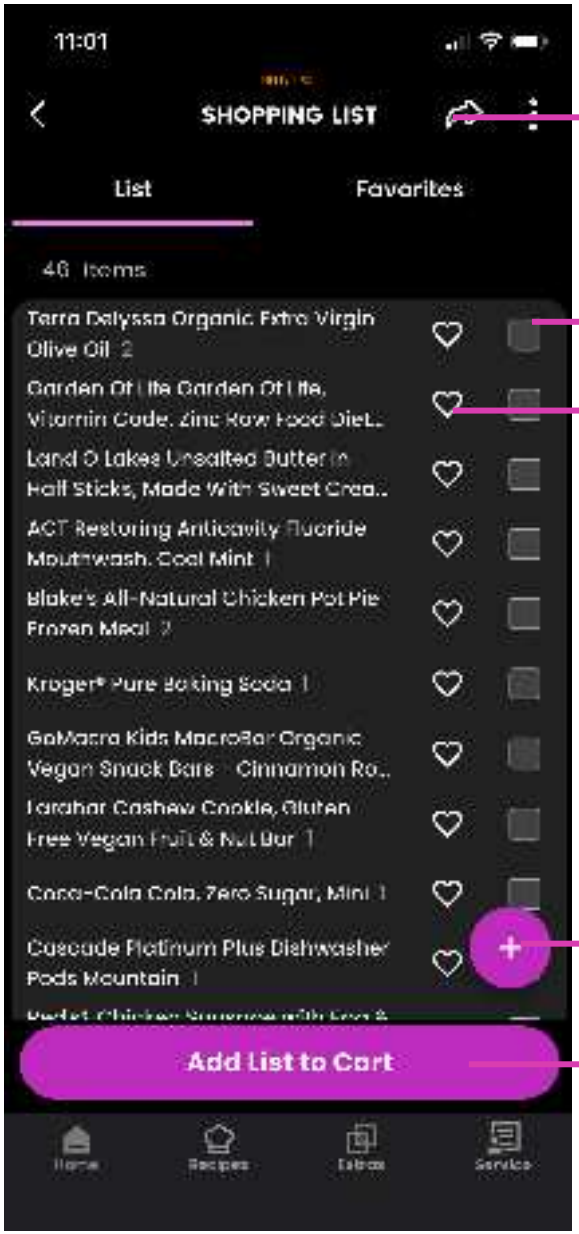

Export to PDF, email, or text list to someone not using SmartHQ

Check items off as you shop

Add to favorites to reference later

Add items to your list from your phone

Add the list to your cart

Instacart

You can sync your shared, digital shopping list to Instacart for grocery delivery.

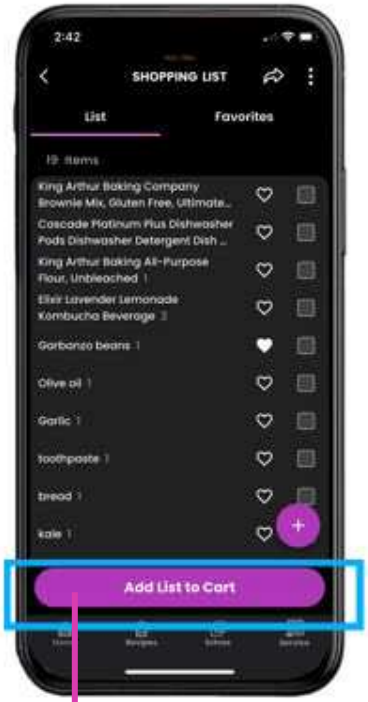

Add your list to the cart

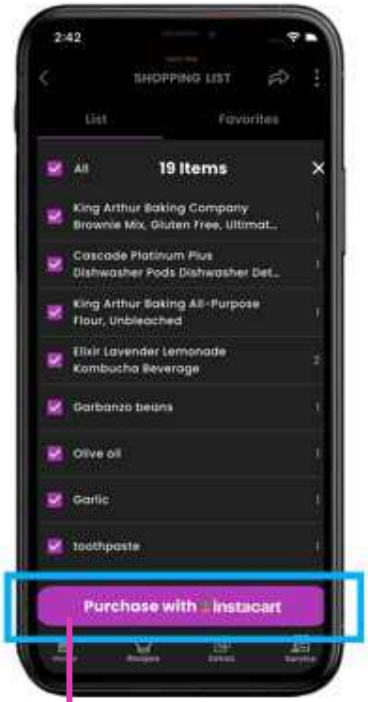

Purchase with Instacart

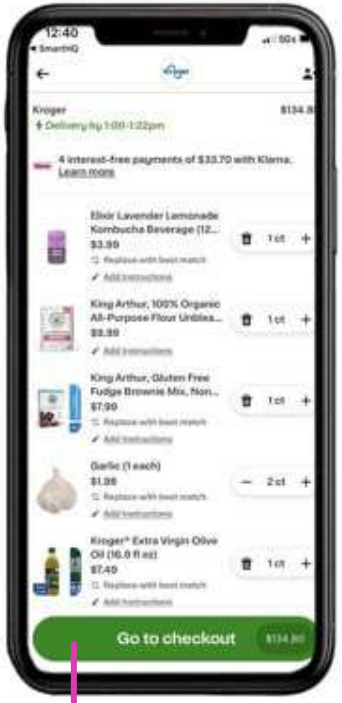

Checkout

Recipe Content

Profile™

4-door fridge with Kitchen Assistant™

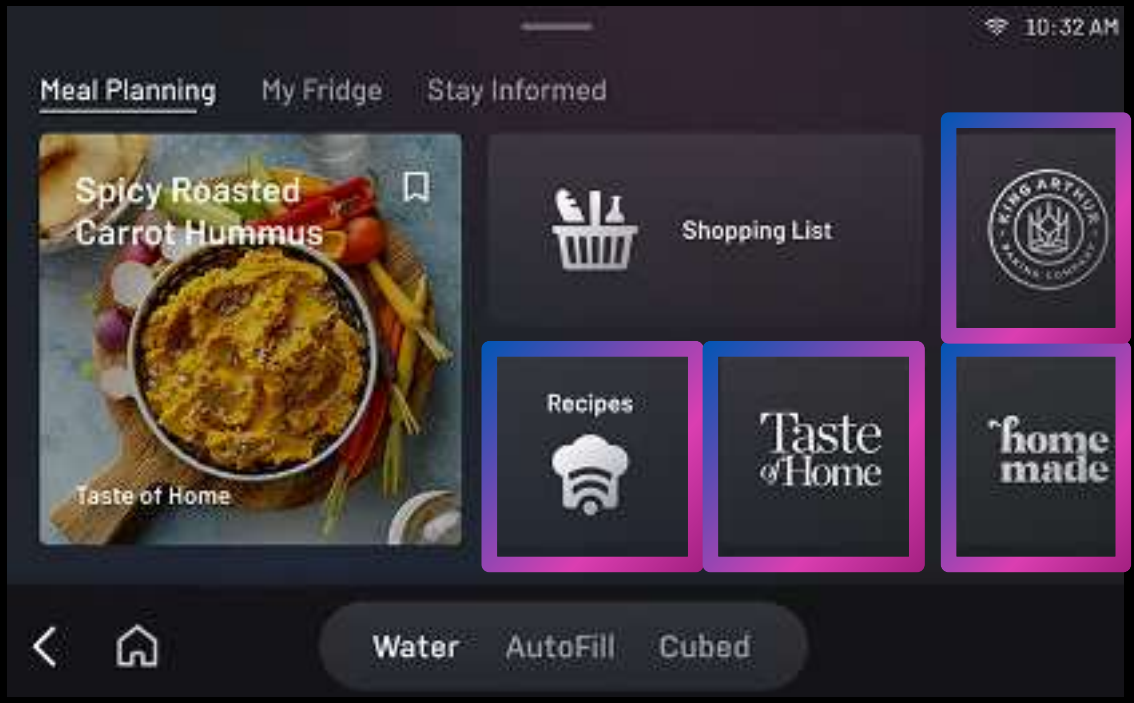

Integrated Recipes

Swipe up to explore various recipes.
Click your favorite.

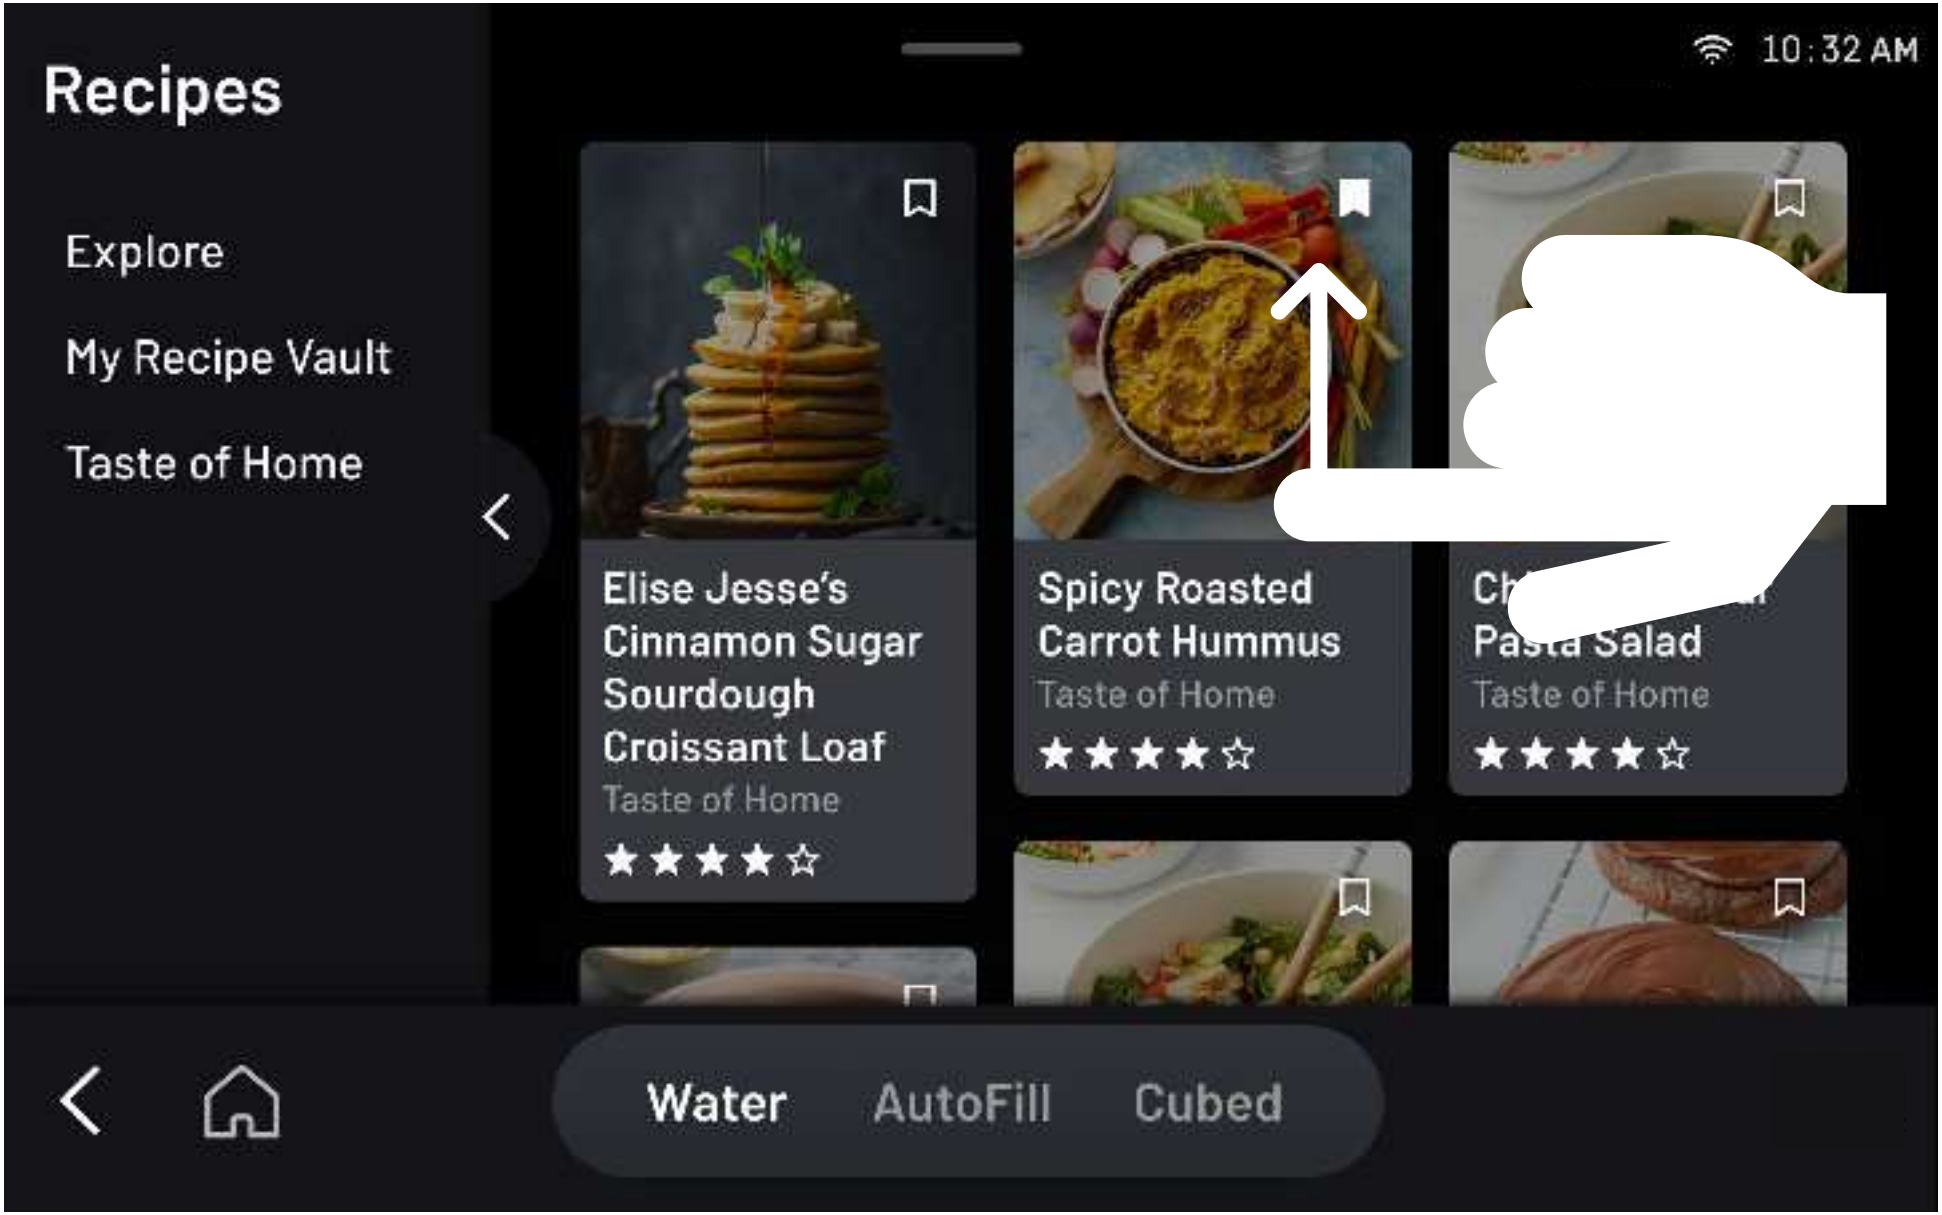

Integrated Recipes

On the ingredients tab, select items and easily add them to your shopping list by clicking "Add to List."

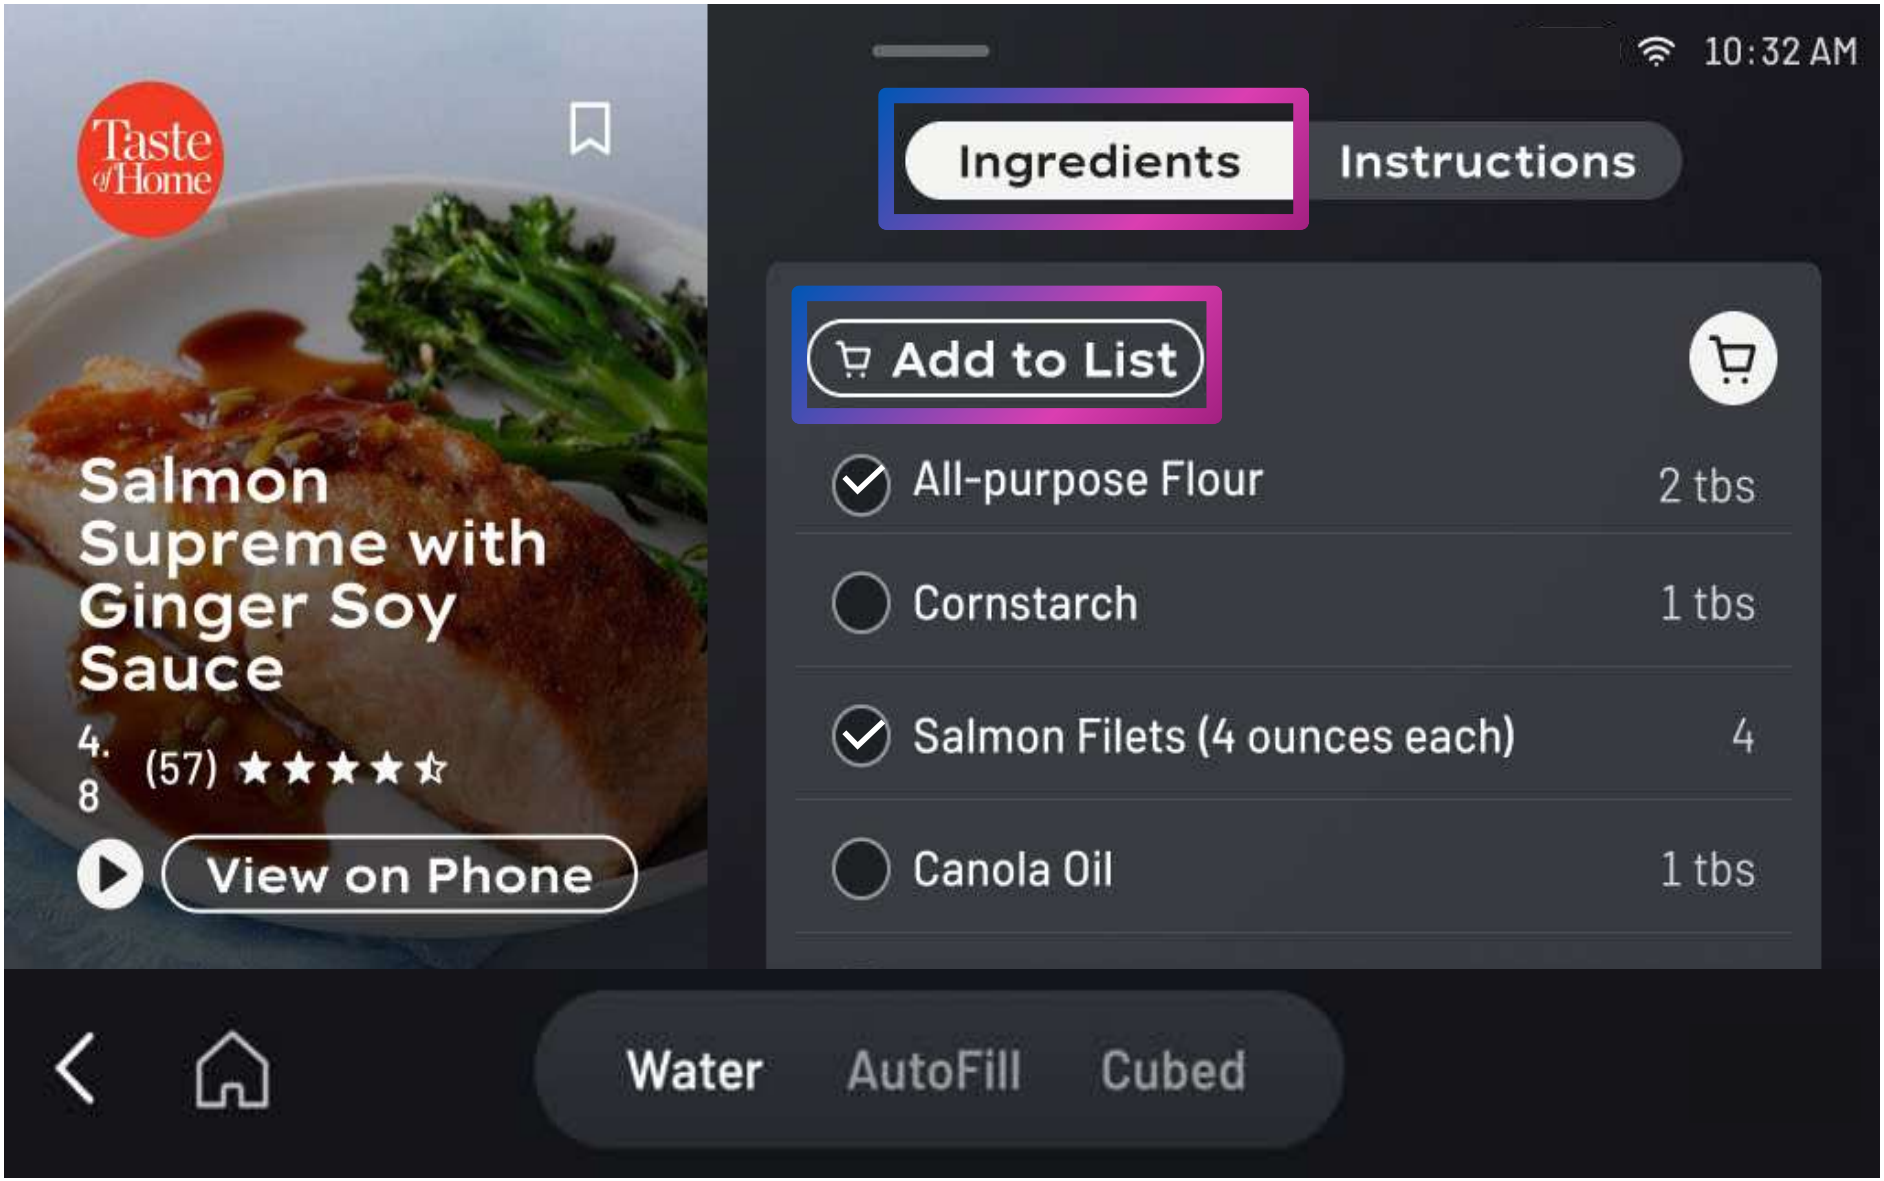

Integrated Recipes

On the instructions tab, scroll up to view recipe steps. You can also view the recipe on your phone.

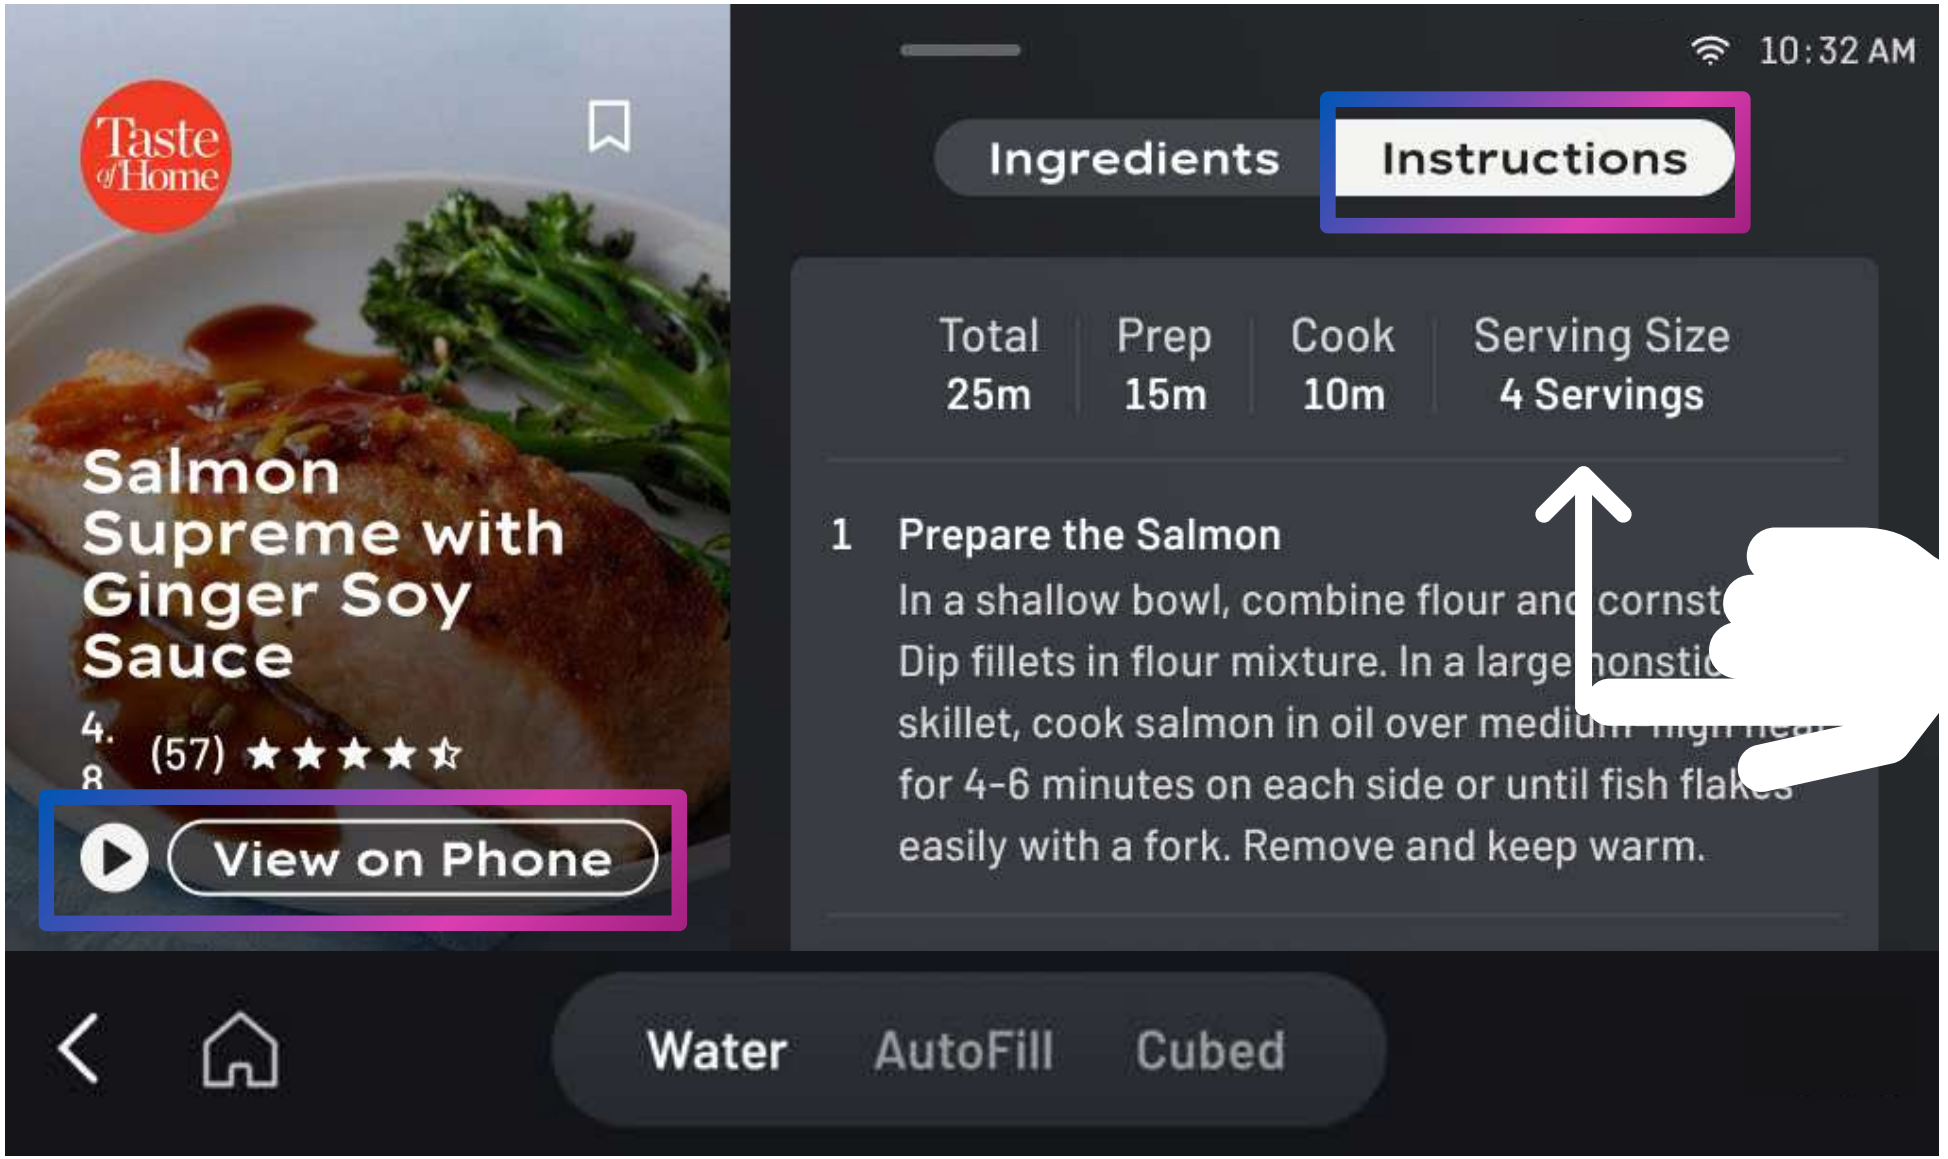

Integrated Recipes

Get recipe inspiration from Homemade

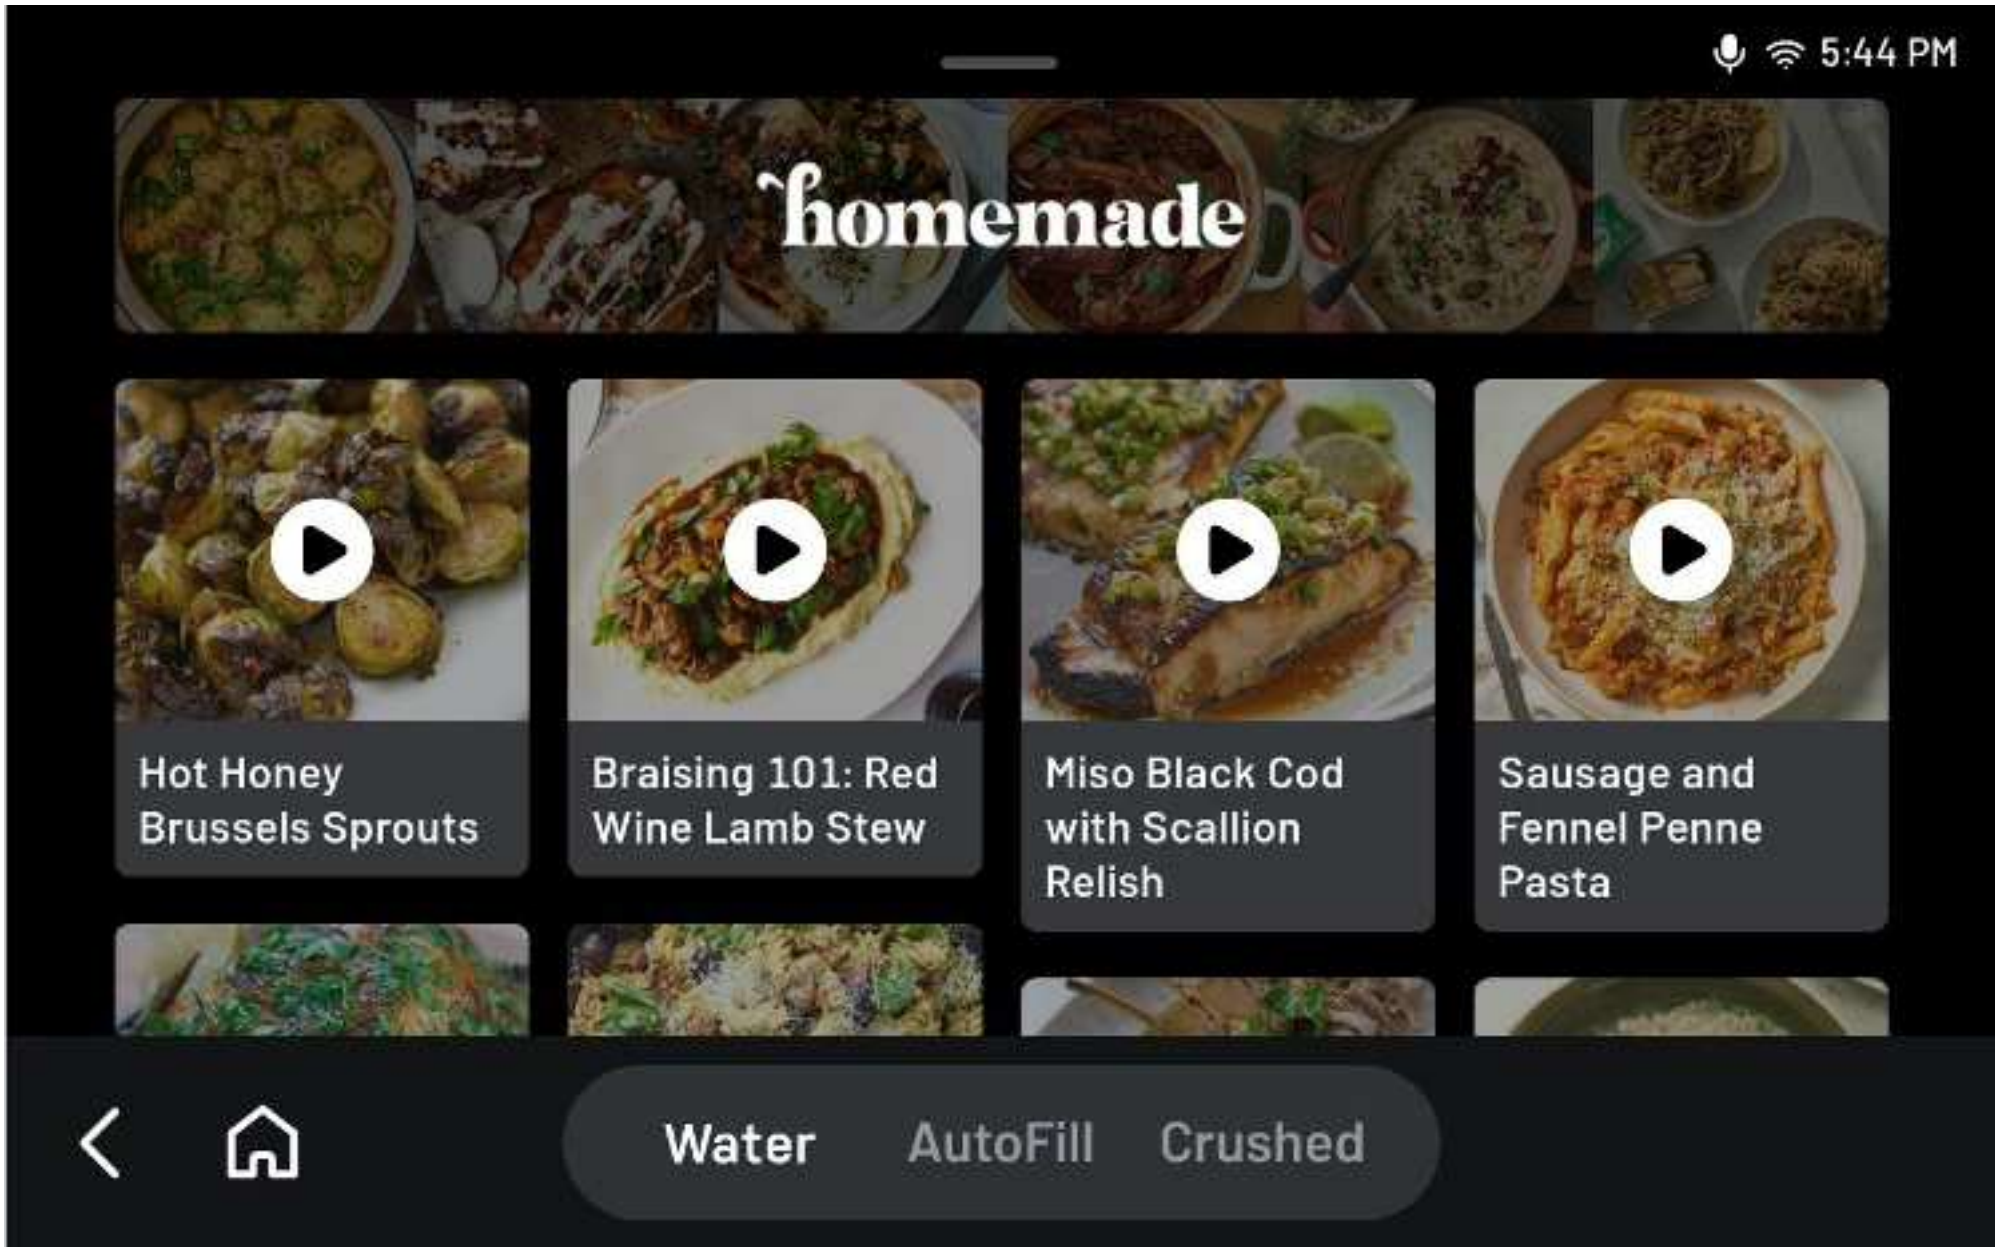

Tips & Tricks

Enjoy videos from King Arthur Baking Company

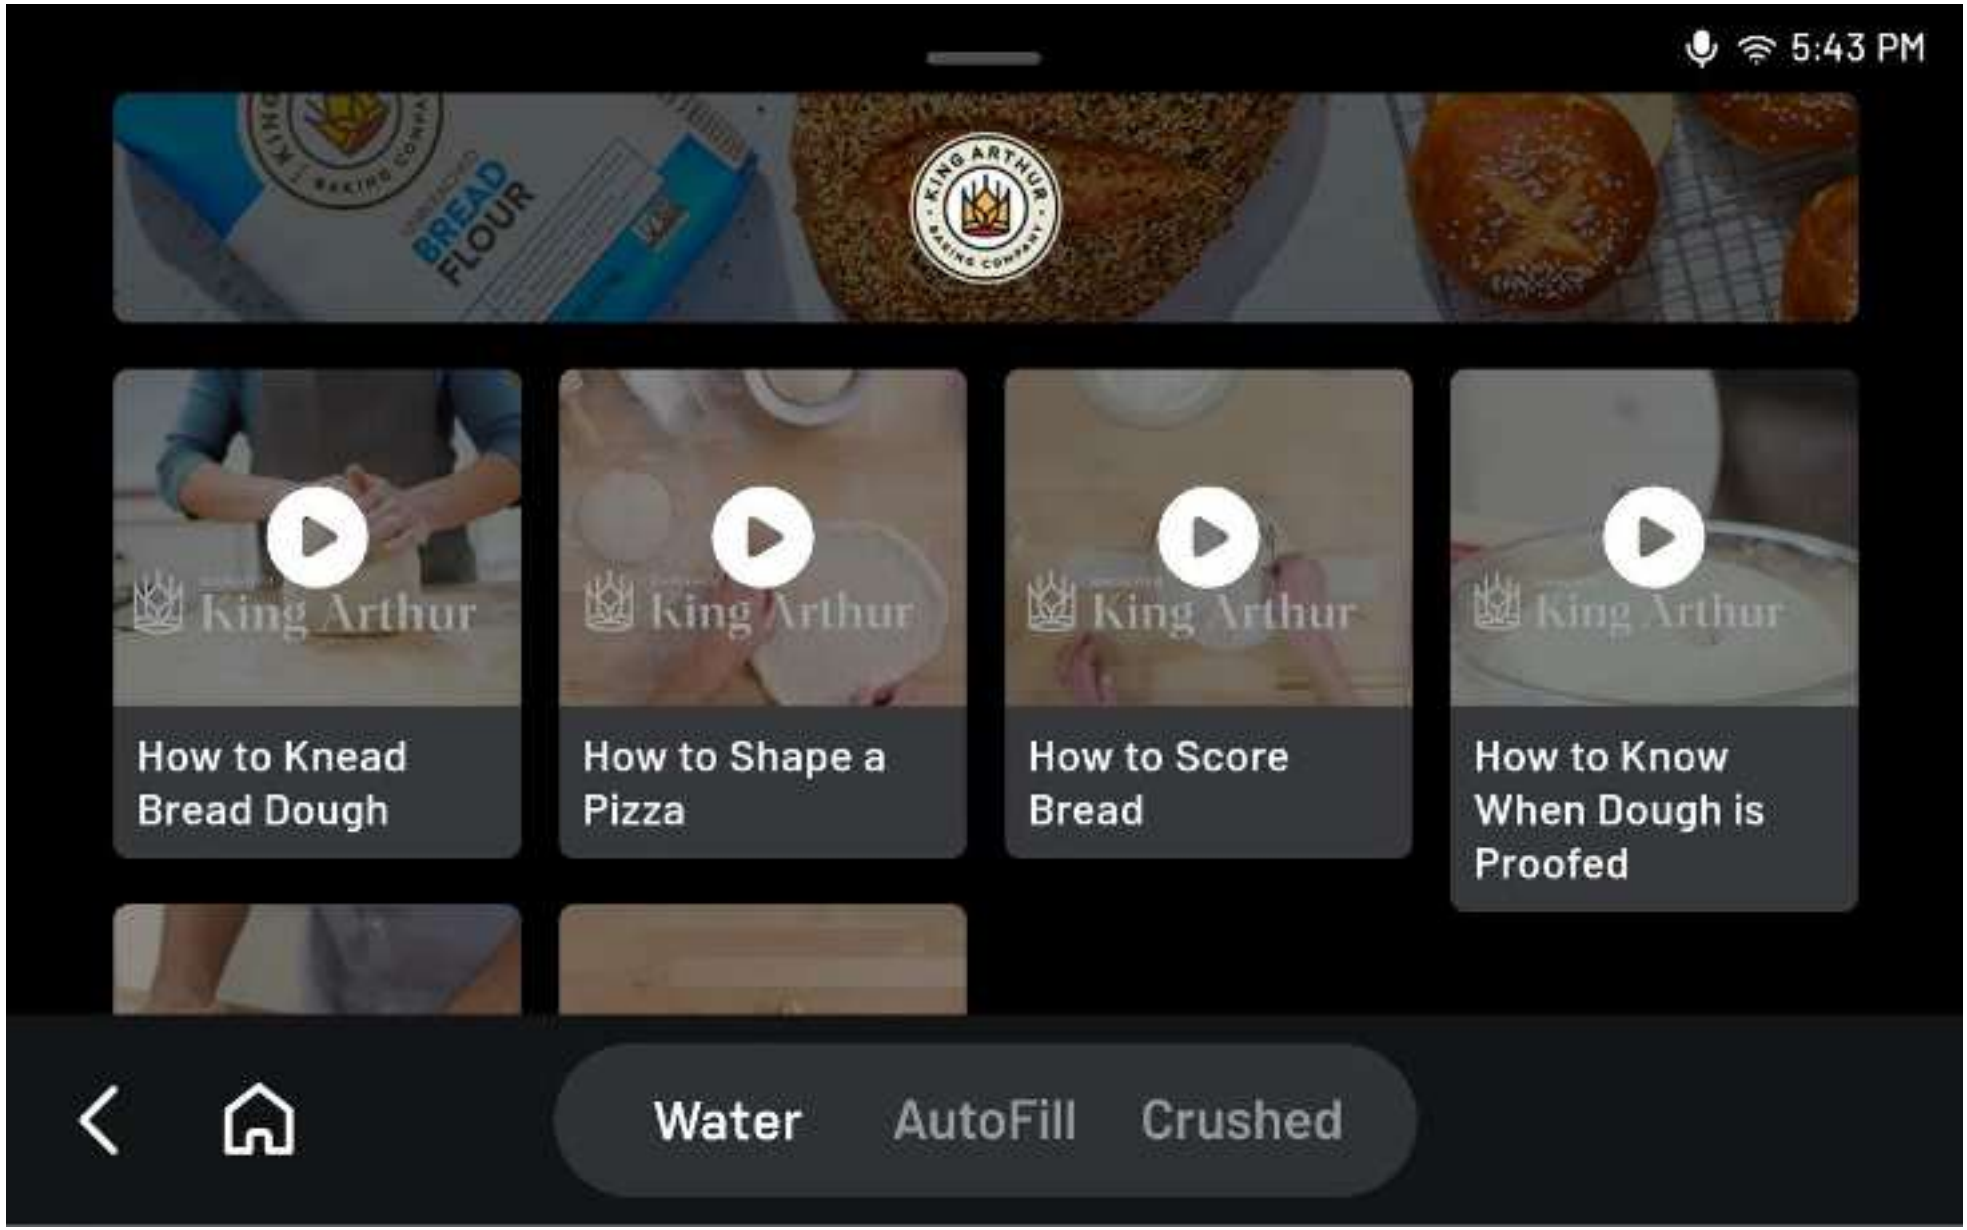

Fridge & Freezer Controls

Profile™

4-door fridge with Kitchen Assistant™

Fridge Controls - Fridge

Increase fresh food temperature

Current set temperature

Decrease fresh food temperature

Toggle to activate TurboCool

Fridge Controls - Fridge

These are the set temperature options for the fresh food section.

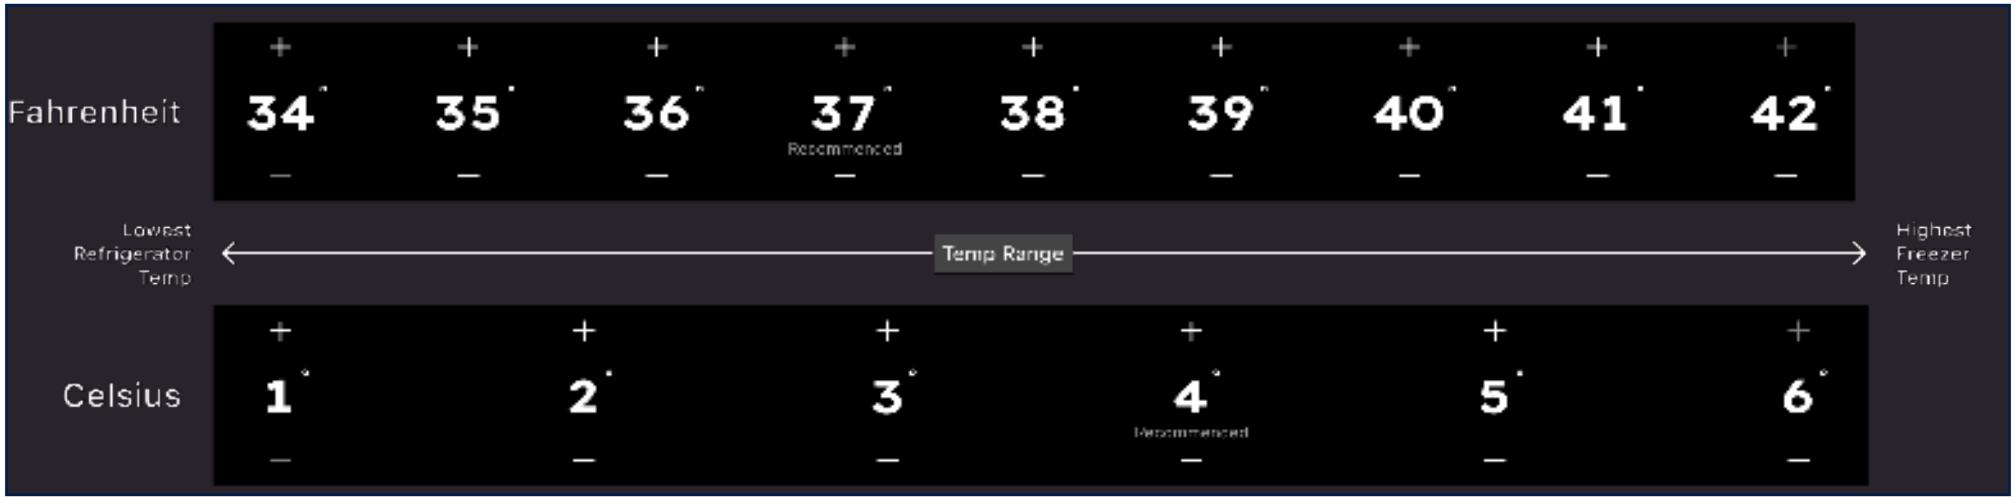

Your fridge can display set temperatures in Fahrenheit or Celsius, which can be selected in the Advanced section of the fridge controls.

Fridge Controls – Middle Drawer

Tap your preferred setting to change your adjustable temperature drawer

Fridge Controls - Freezer

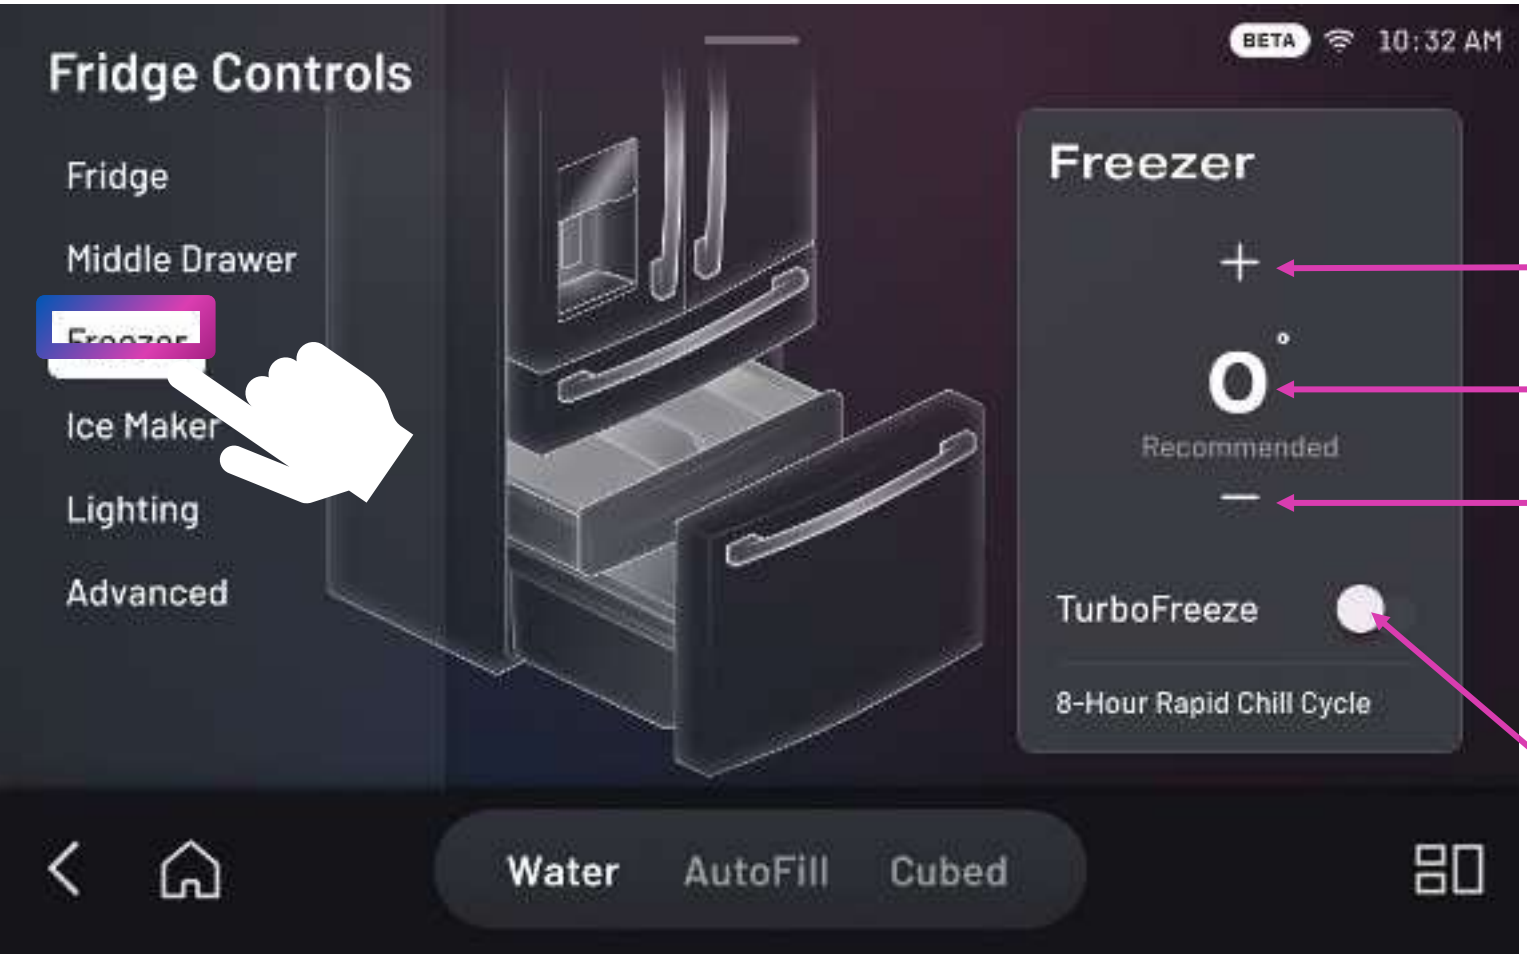

Increase freezer temperature

Current set temperature

Decrease freezer temperature

Toggle to activate TurboFreeze

Fridge Controls - Freezer

These are the set temperature options for the freezer section.

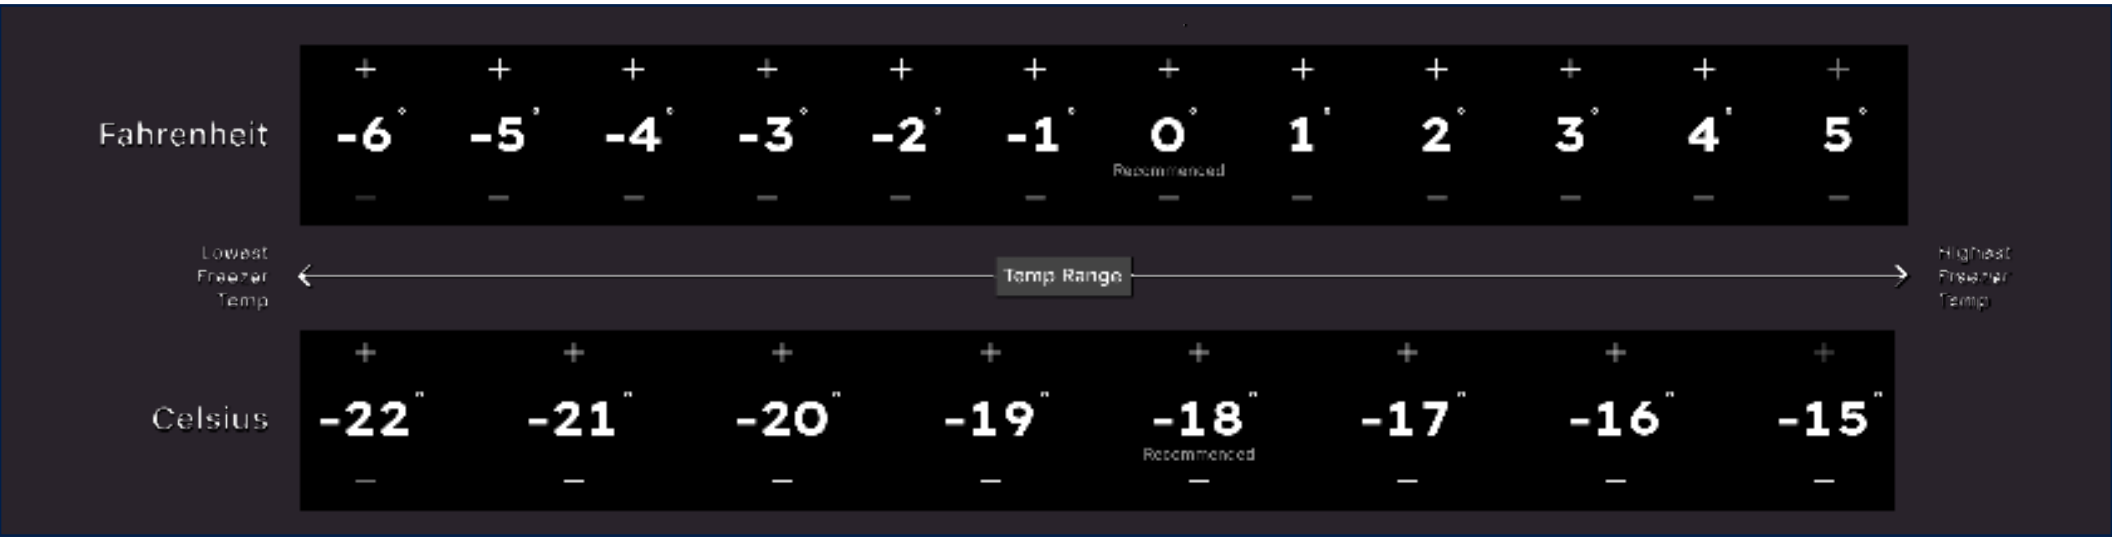

Your fridge can display set temperatures in Fahrenheit or Celsius, which can be selected in the Advanced section of the fridge controls.

Fridge Controls – Ice maker

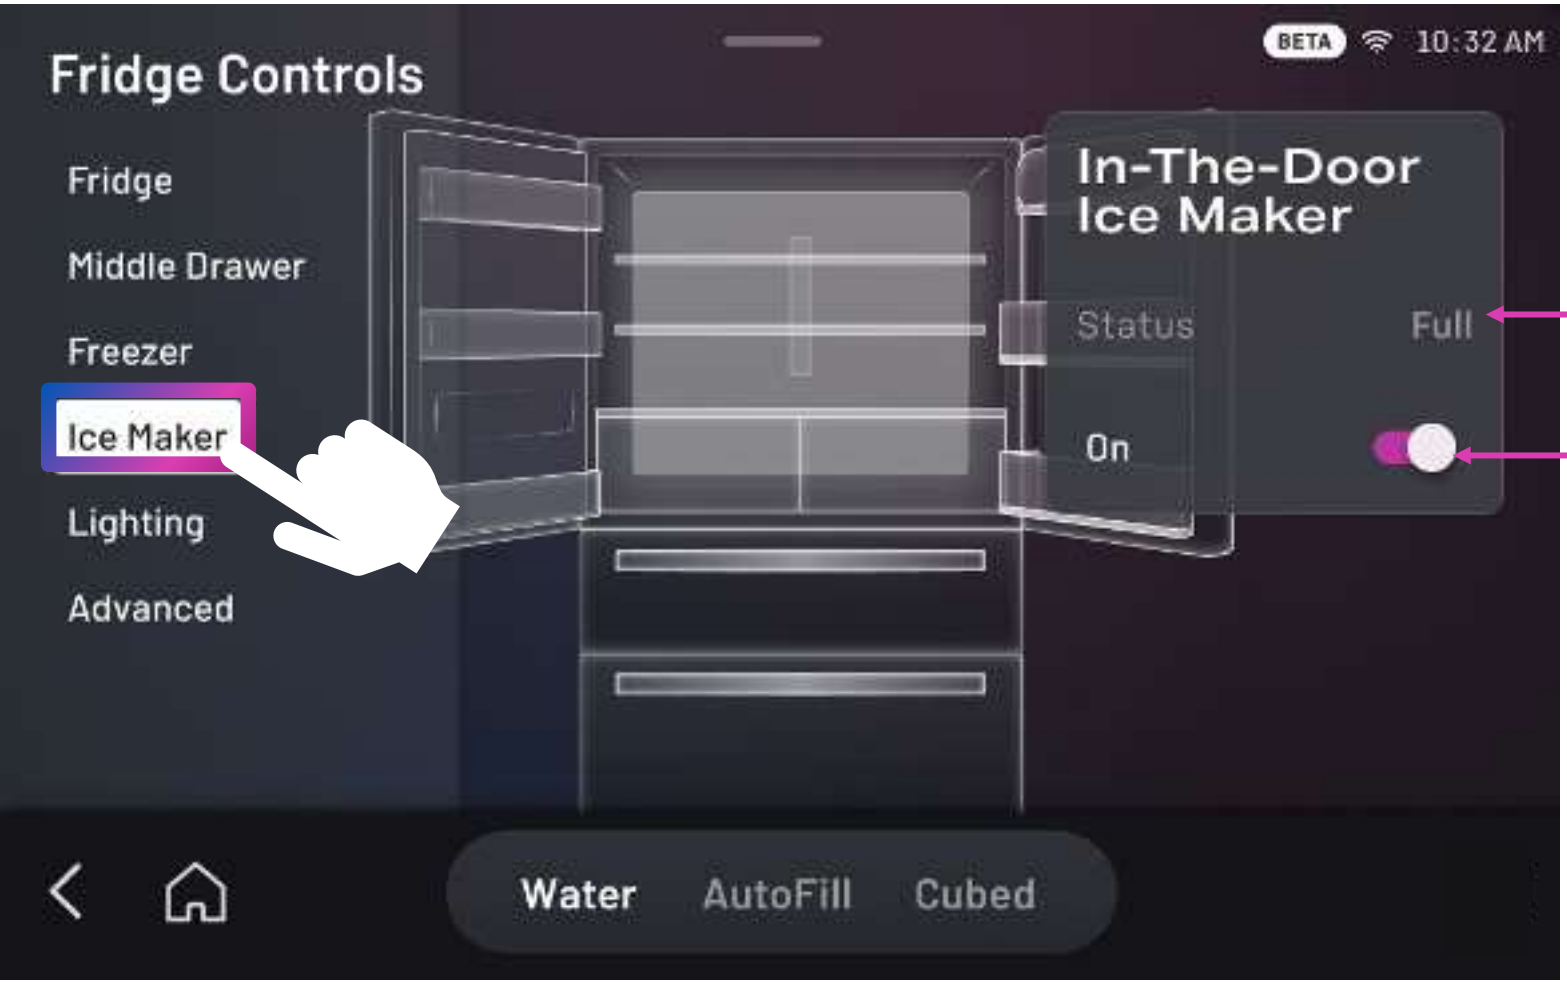

Status will display full or making ice

Ice maker can be toggled on or off

Fridge Controls - Lighting

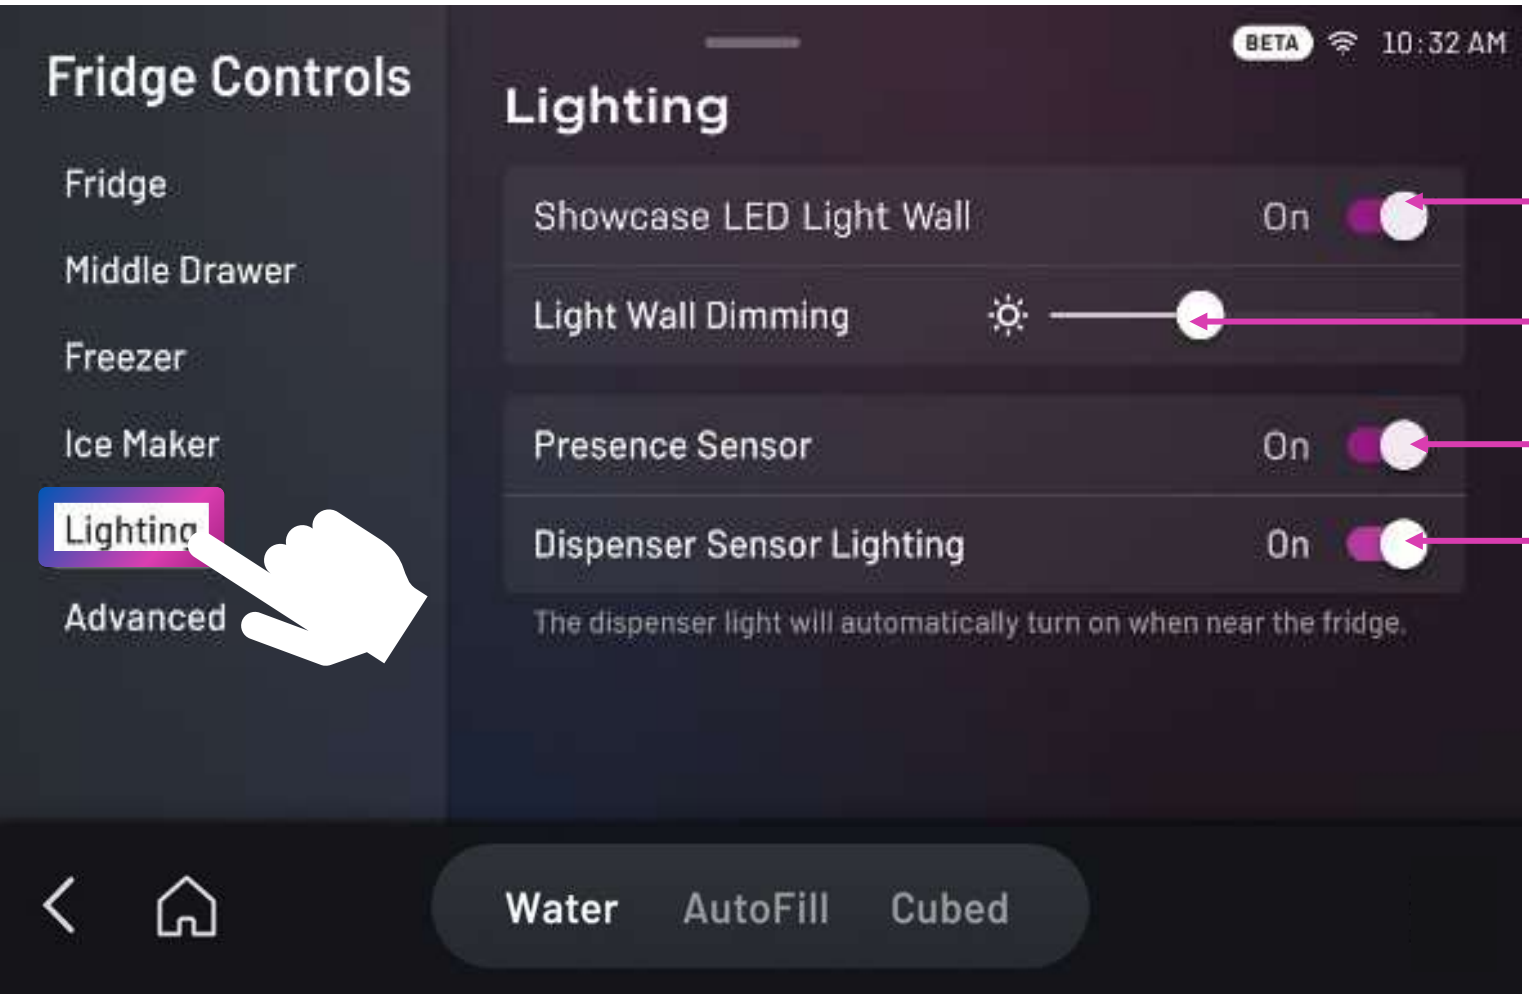

Toggle LED Light Wall on or off

Choose the brightness of the LED Light Wall

Bar code scanner presence sensing

Choose whether you want the dispenser light to come on when you approach the fridge

Fridge Controls - Advanced

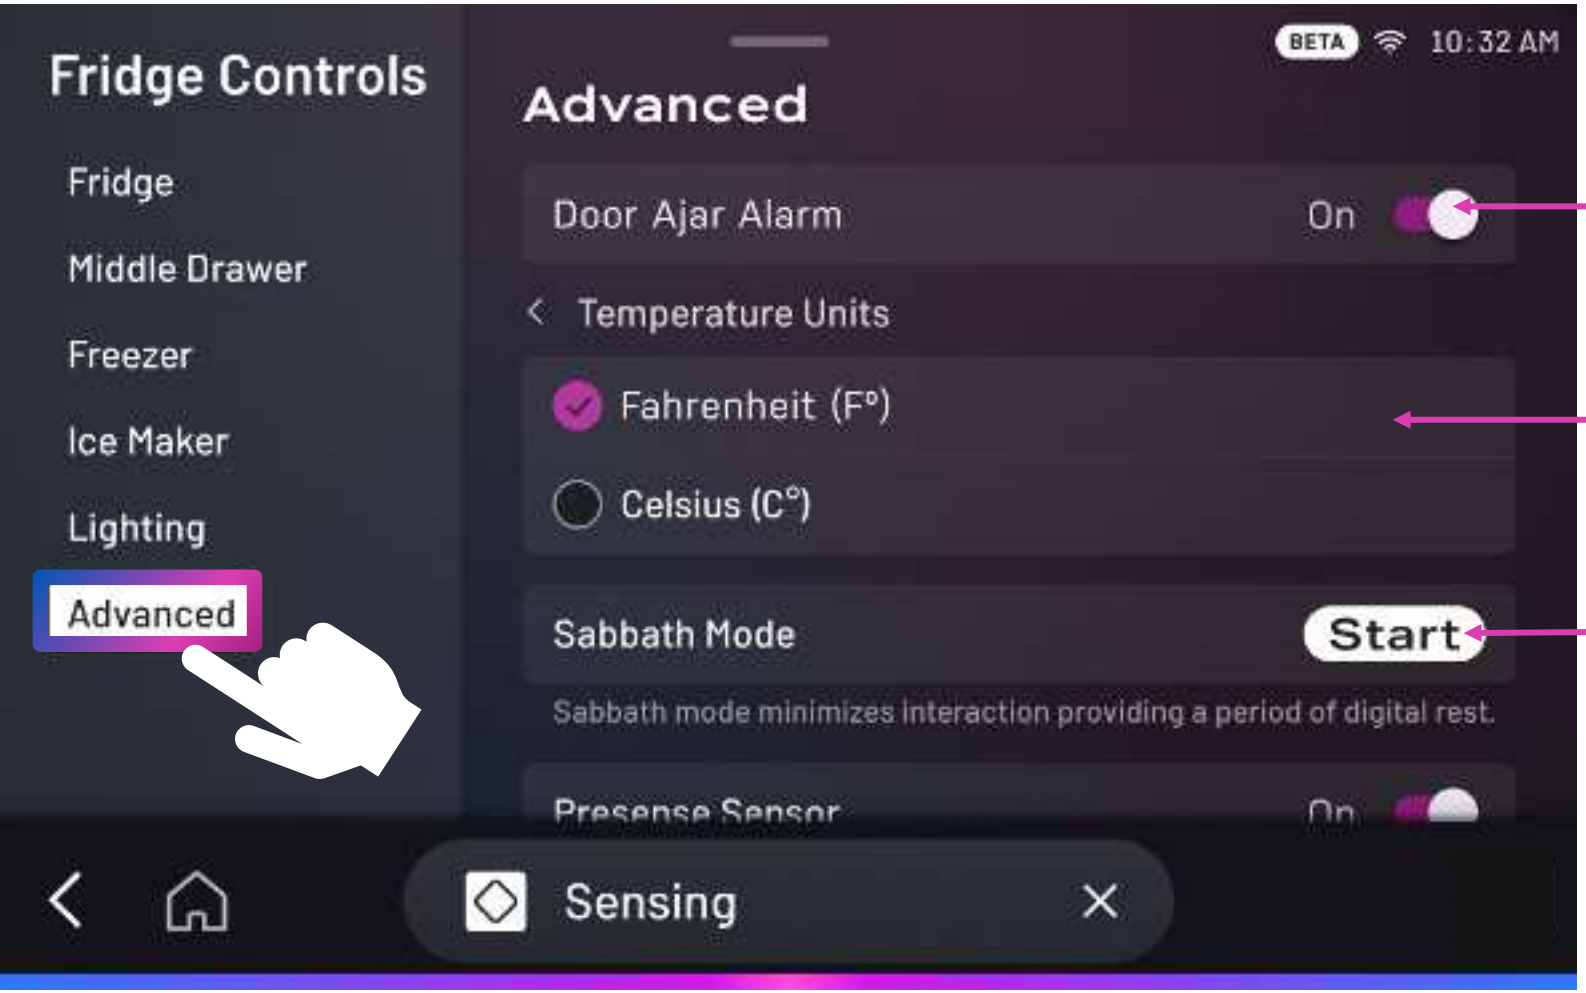

Toggle Door Alarm on or off where the unit will beep if you forgot to close any of the doors

Choose between Fahrenheit or Celsius temperature settings

Put the unit in Sabbath mode

Ice & Water Dispensing

Profile™

4-door fridge with Kitchen Assistant™

Ice & Water Dispensing

The water bar stays on every screen for easy access to filtered water and ice. When you select cubed ice you also can toggle to crushed ice.

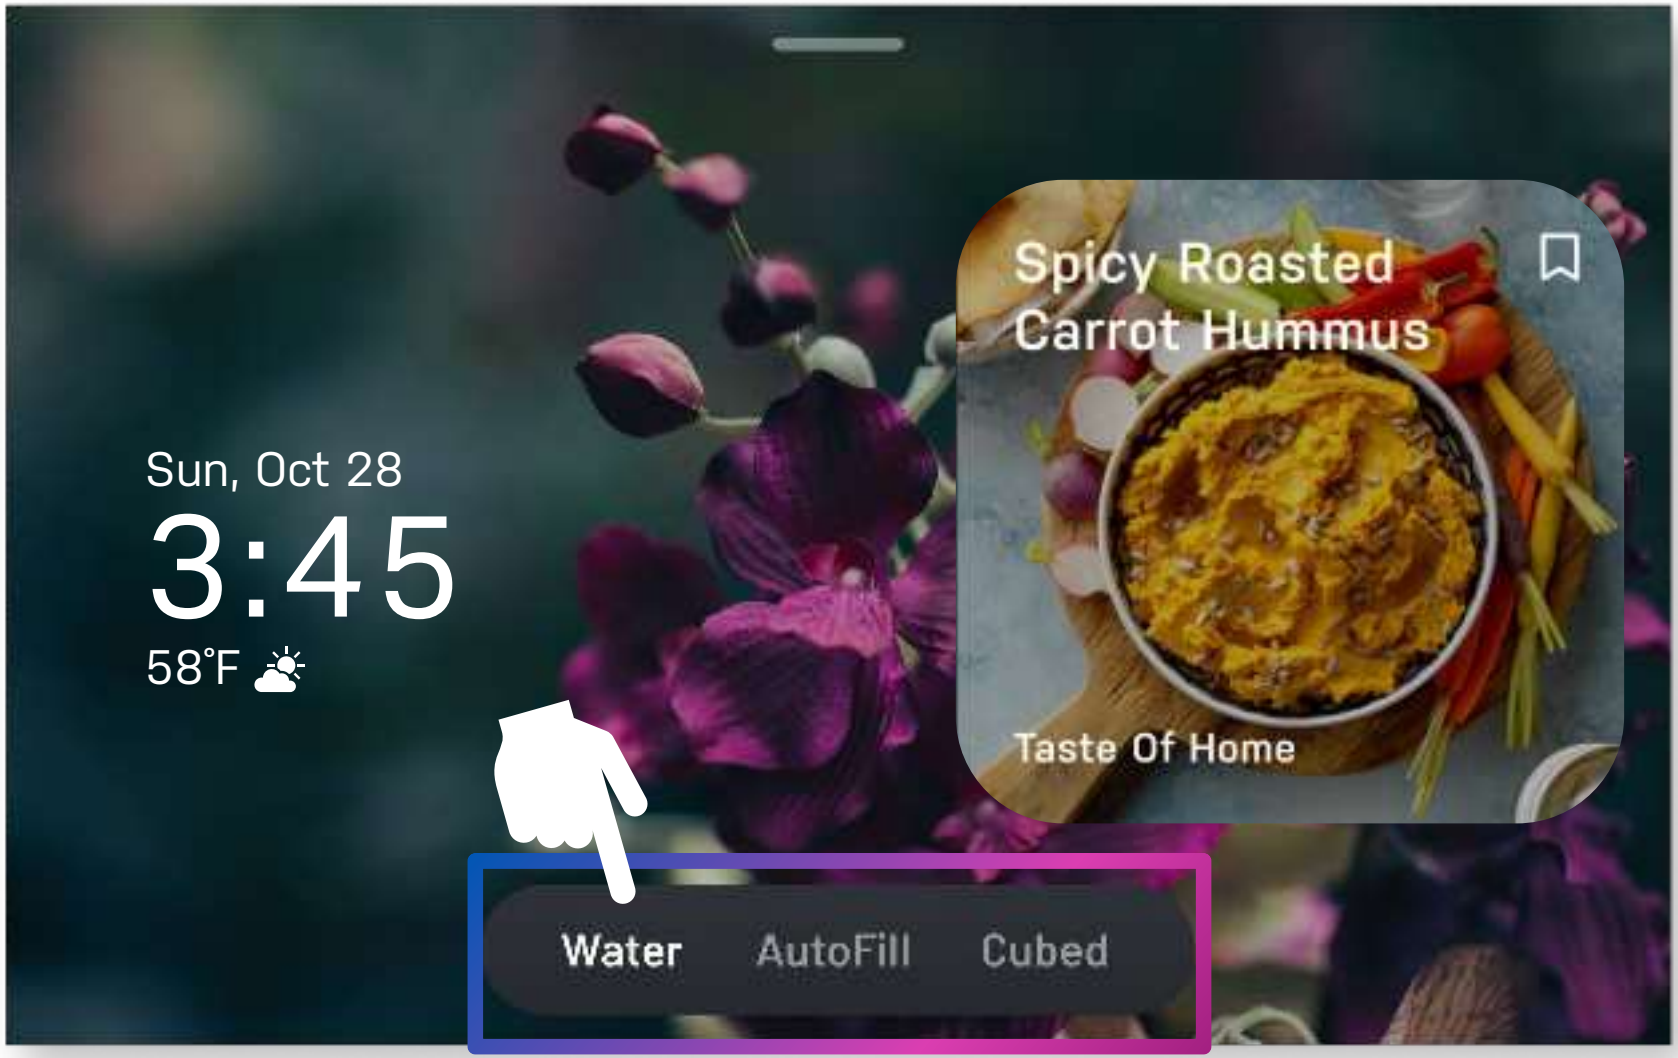

Ice & Water Dispensing

Hands-free AutoFill uses sensors in the refrigerator dispenser to release the exact amount of filtered water you want, so you can walk away while your bottle fills up.

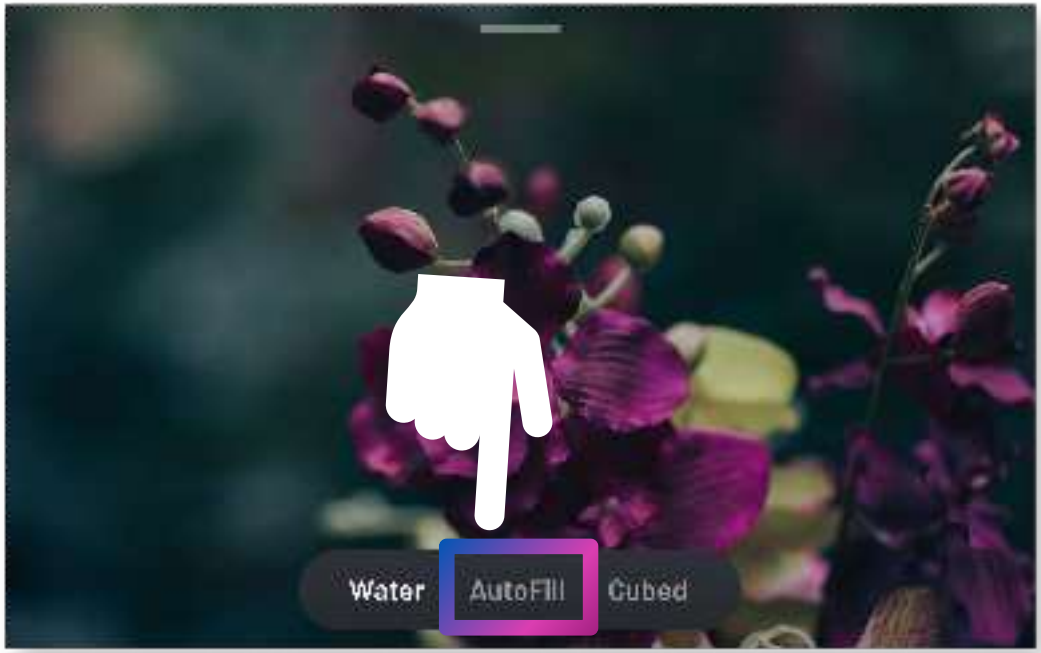

Tap to activate

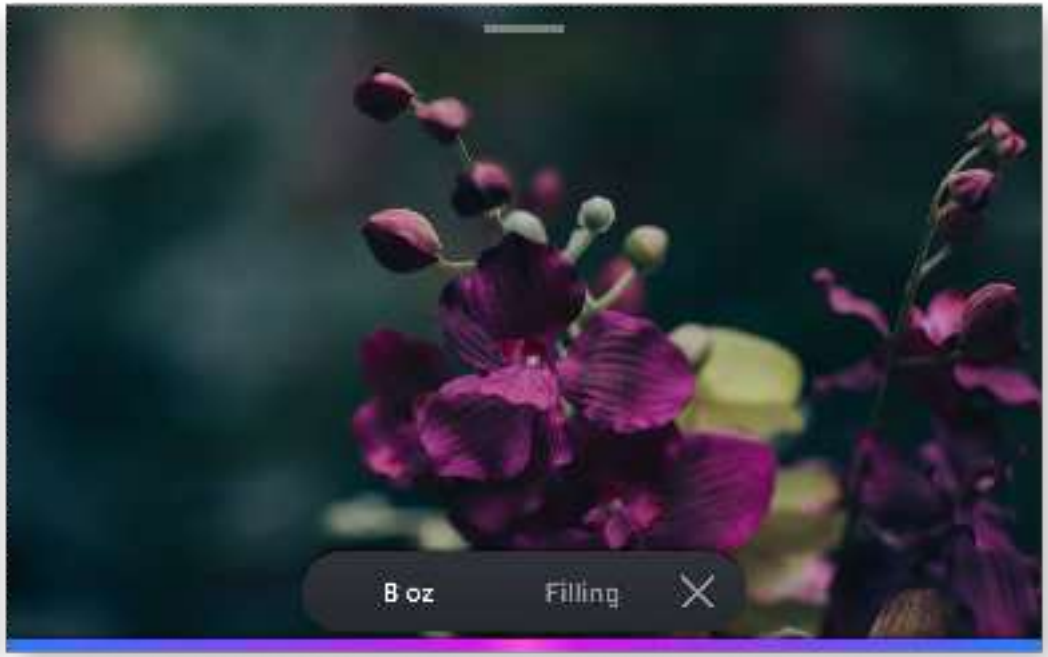

Ounces are counted as it fills

Tap X to cancel

Precise Fill

Profile™

4-door fridge with Kitchen Assistant™

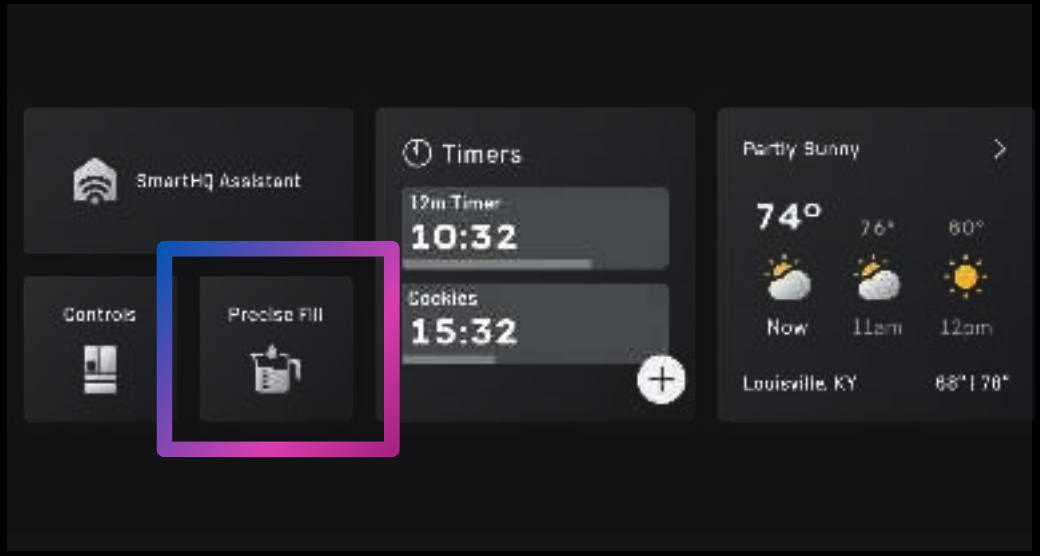

Precise Fill

Toggle between ounces, cups, quarts, or milliliters.
Hold your finger on an arrow to quickly navigate.

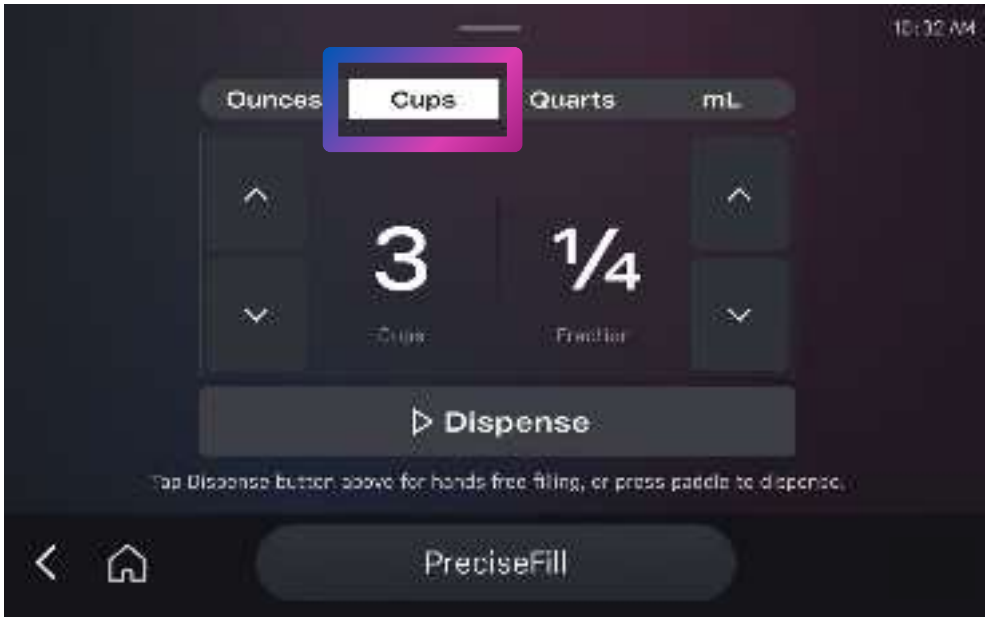

Precise Fill

Either use Precise Fill hands-free or push the water paddle with larger containers.

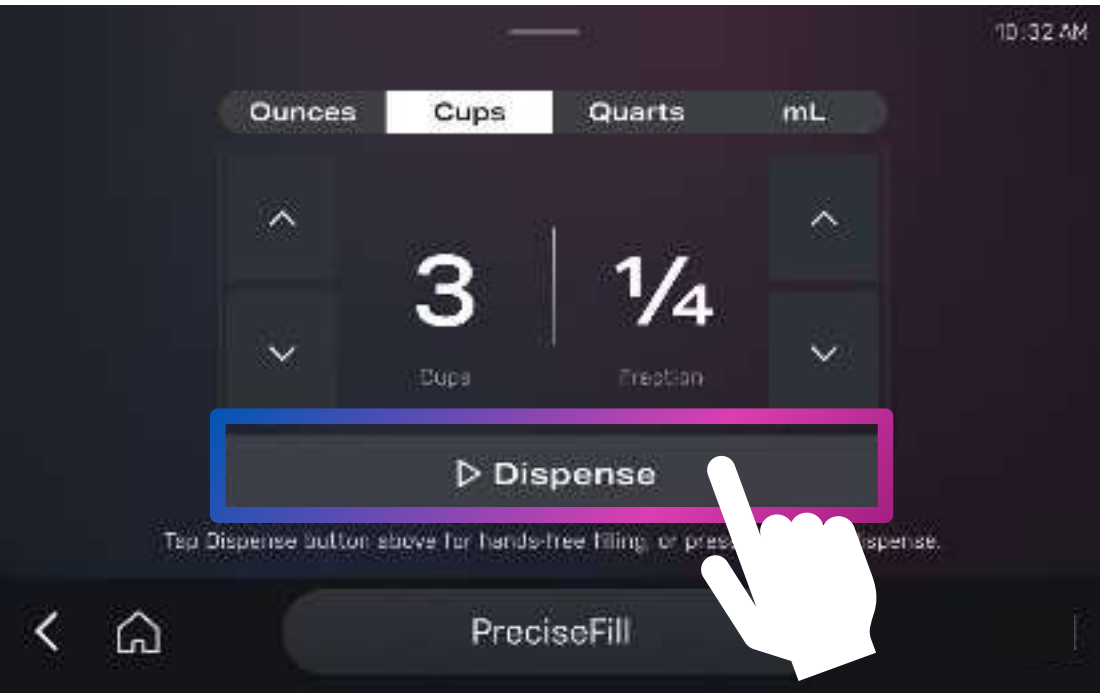

Press Dispense to use Hands-free Precise Fill when a container can stand in the dispenser area hands-free.

Push the paddle with larger containers such as mixing bowls. If you lift the container off the paddle before reaching your set amount, it will pause Precise Fill.

Water Center

Profile™

4-door fridge with Kitchen Assistant™

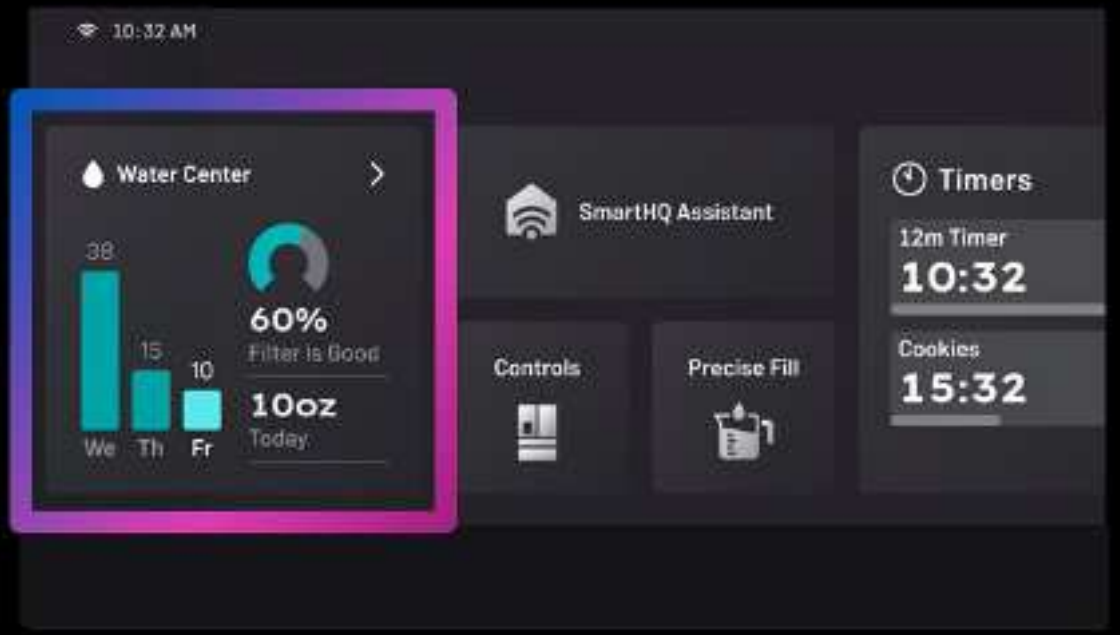

Water Center

Track your hydration.

Daily ounces dispensed

Daily average ounces dispensed

Number of plastic bottles saved from entering the environment by using a refillable water bottle

Water Center

Track your filter usage and prepare to buy a new filter

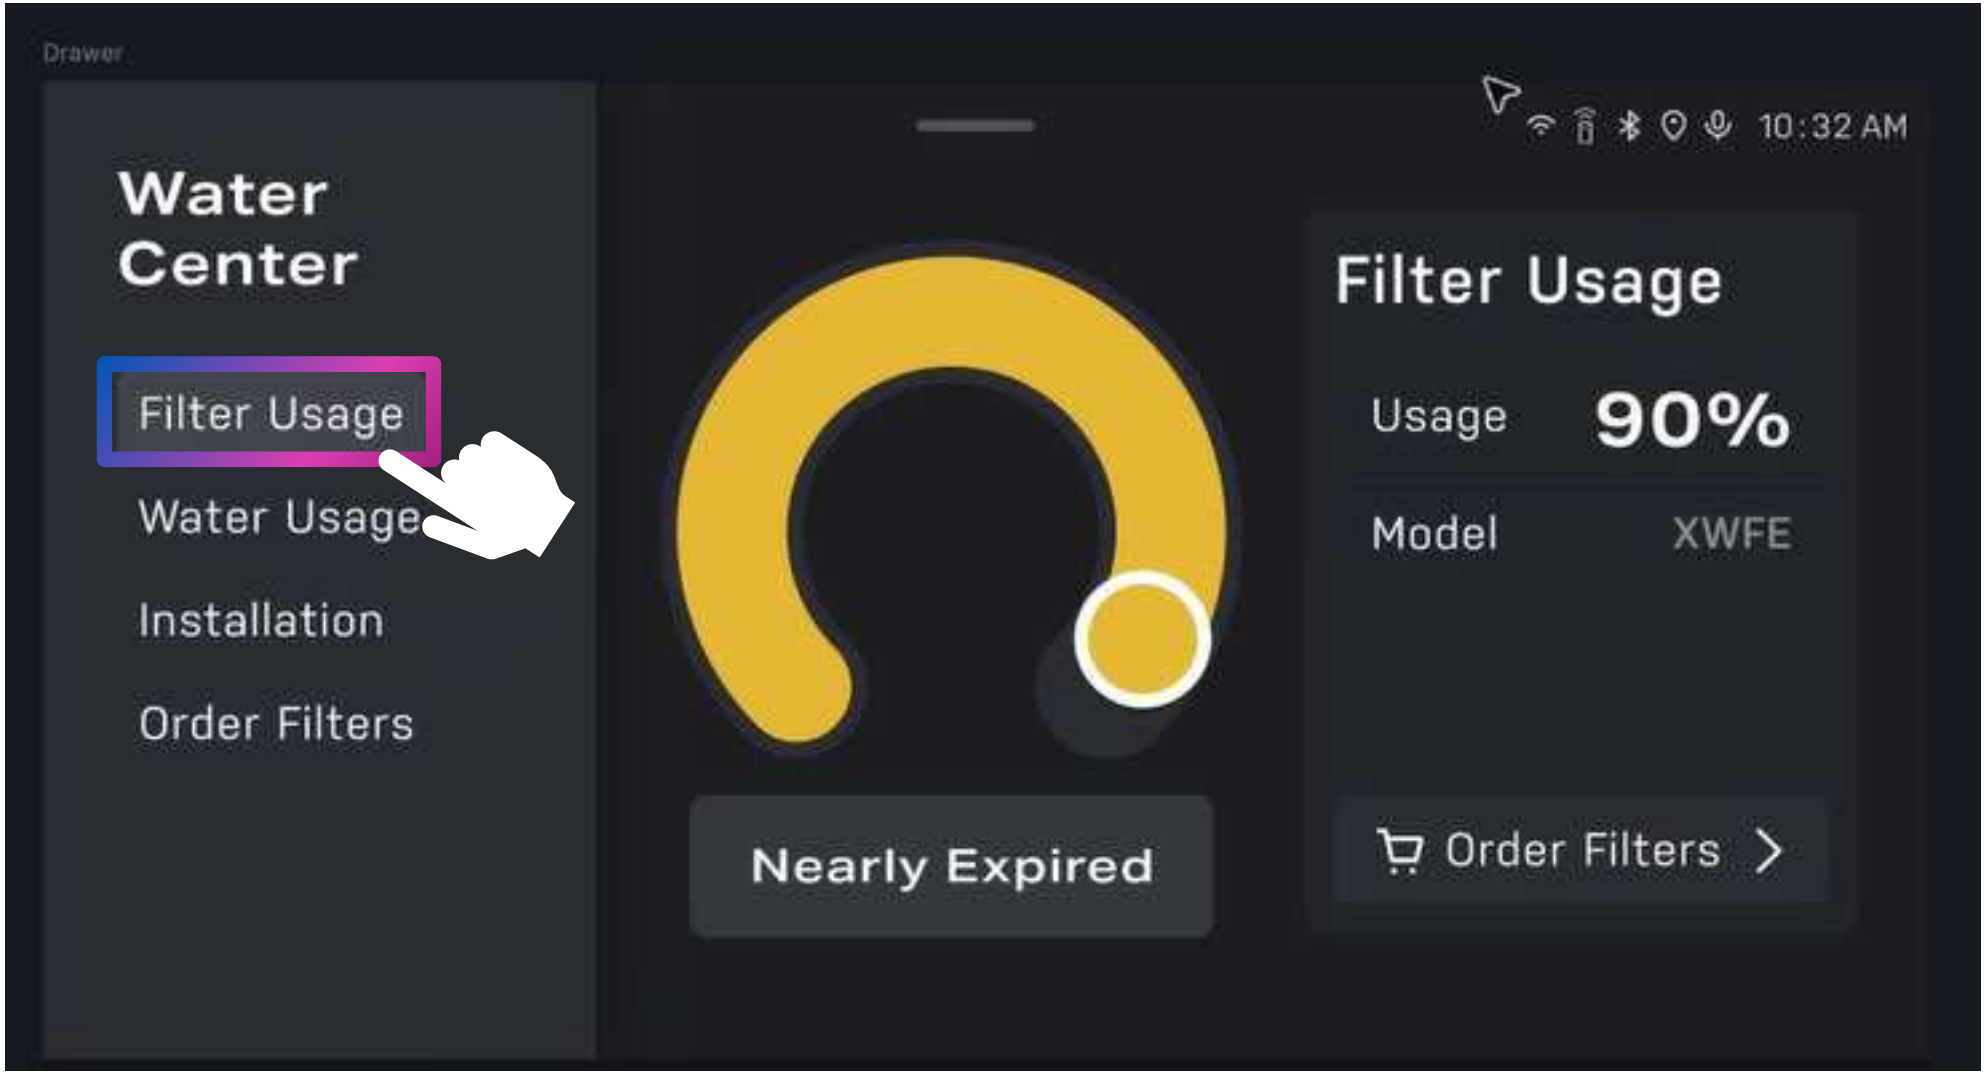

Water Center

You will get notified when your filter has expired.

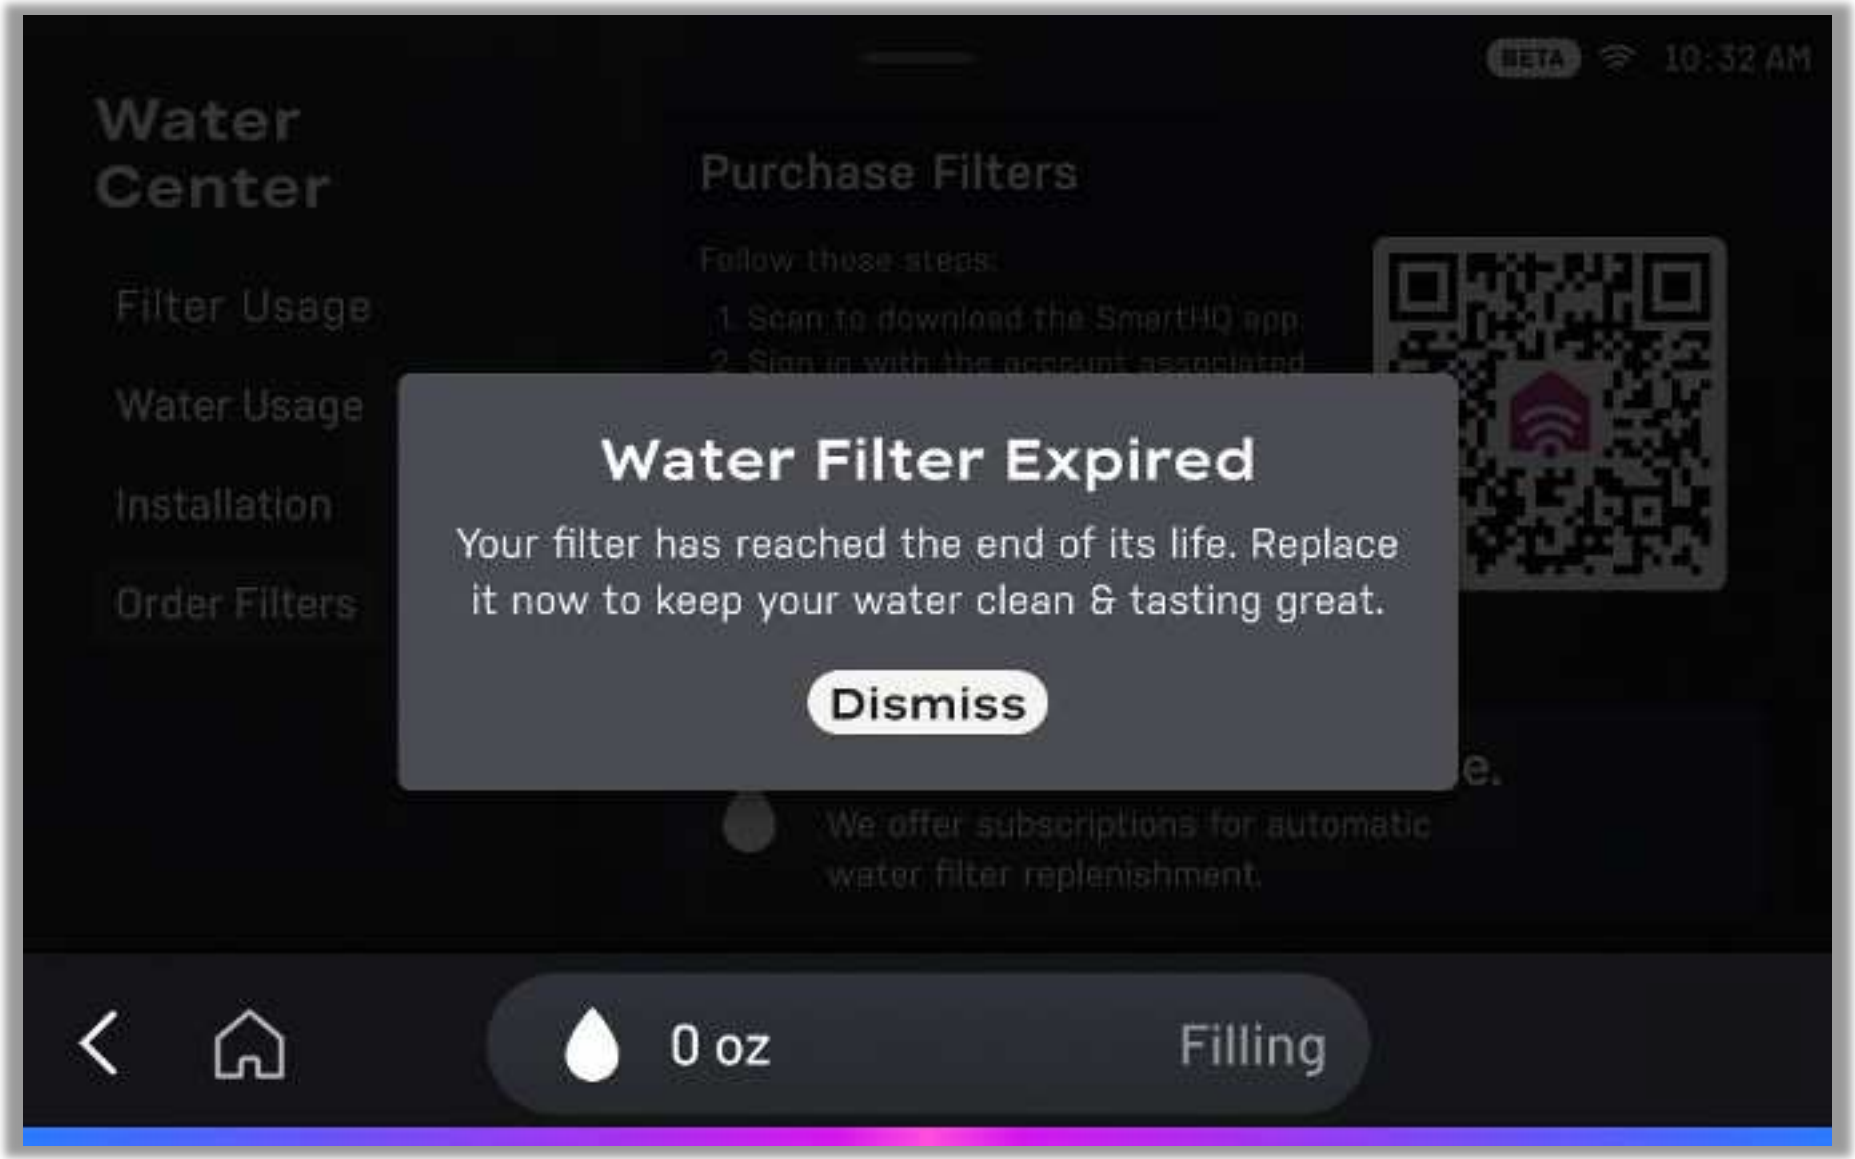

Water Center

Scan the QR code to purchase a new XWFE filter

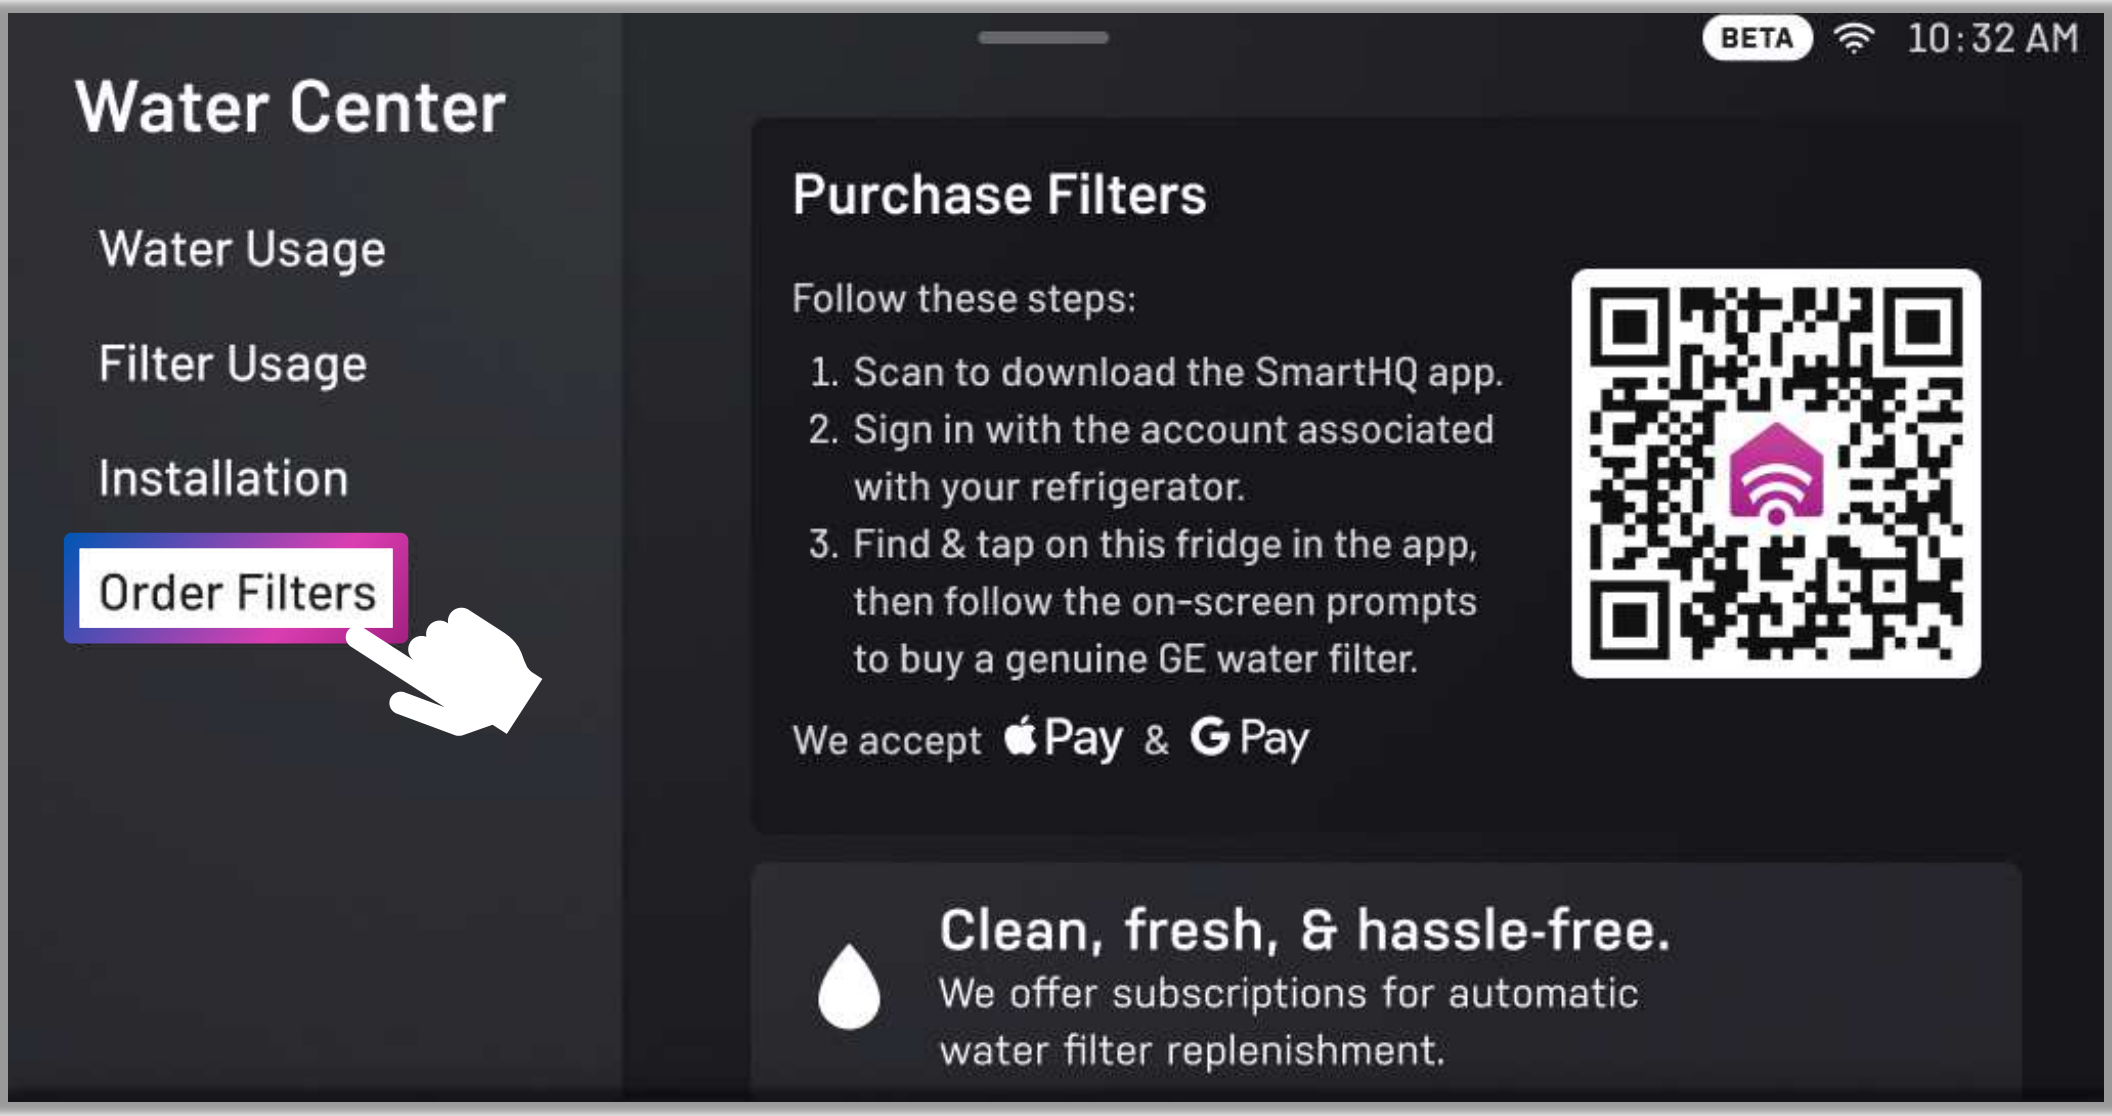

Kitchen Timers

Profile™

4-door fridge with Kitchen Assistant™

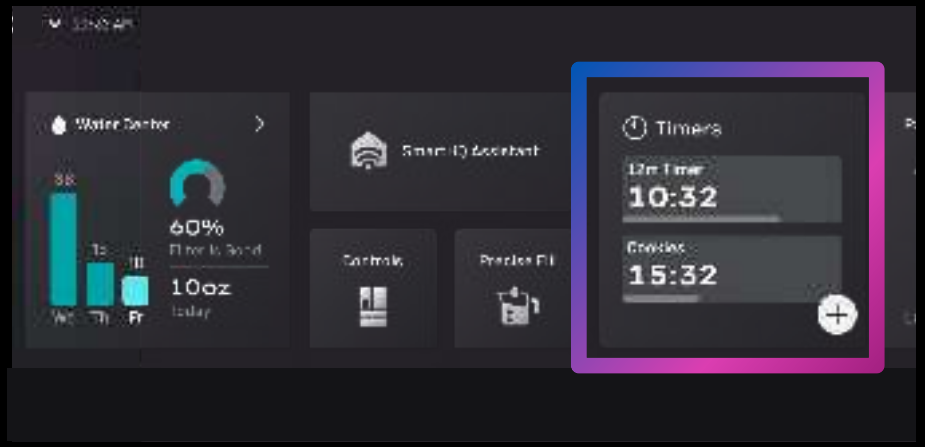

Kitchen Timers

Set Kitchen Timers from the widget on the home screen.

Click box to expand the timer box

Name the timer by clicking the pencil

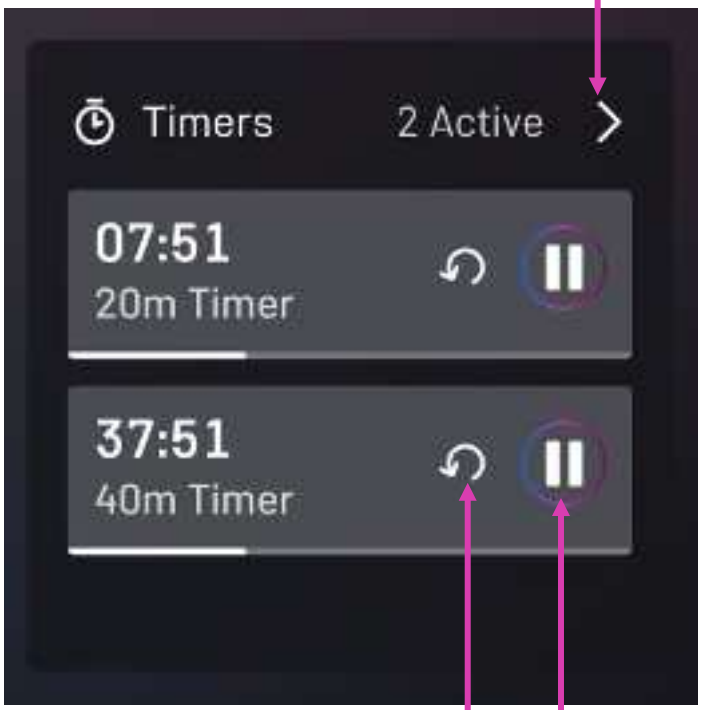

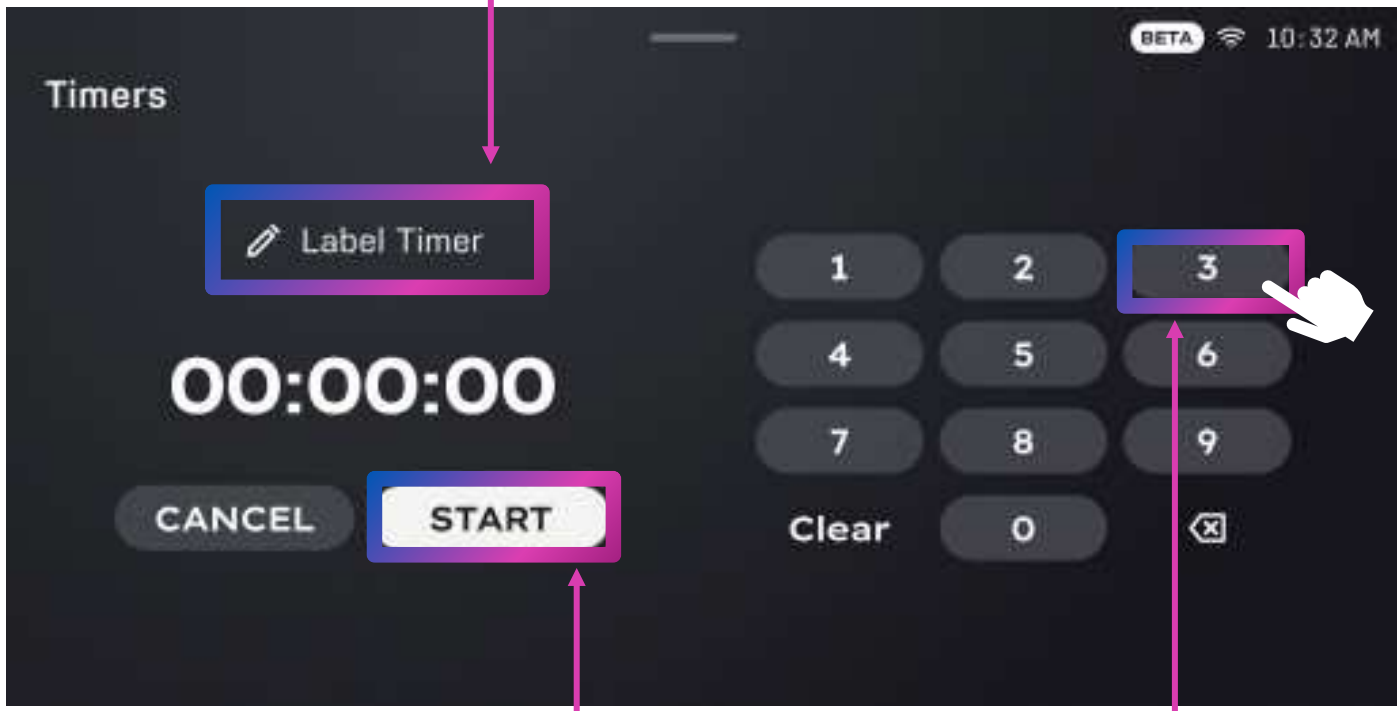

Pause the timer

Restart the timer

Click start after you type your desired timer

Type the timer you want to set

Bluetooth® Media Player

Profile™

4-door fridge with Kitchen Assistant™

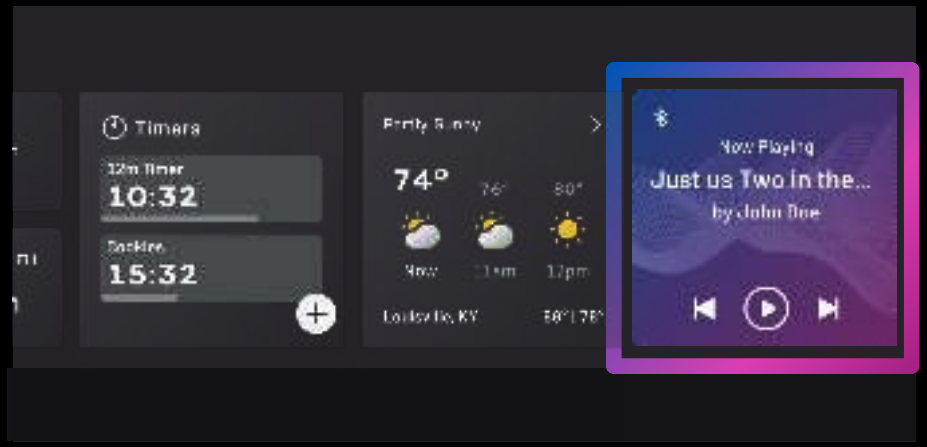

Bluetooth® Media Player

Use your fridge as a Bluetooth® speaker from any app on your phone.

1. Click "Connect Phone"

2. Toggle Bluetooth® On

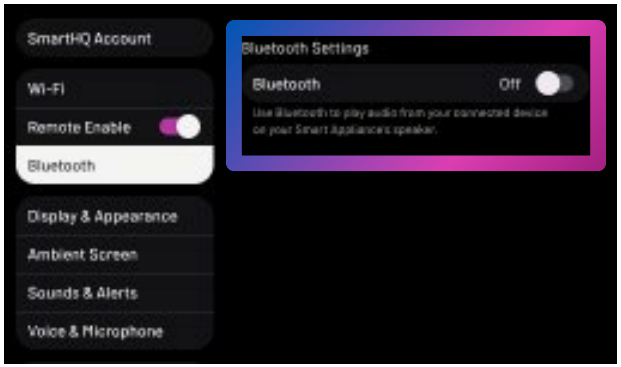

3. Click "Pair new device" and follow steps

4. Find "Refrigerator" on your phone's Bluetooth® settings to pair

Change Your Wi-Fi

Profile™

4-door fridge with Kitchen Assistant™

Change your Wi-Fi

Access the settings shade by holding your finger on the gray bar and swiping down.

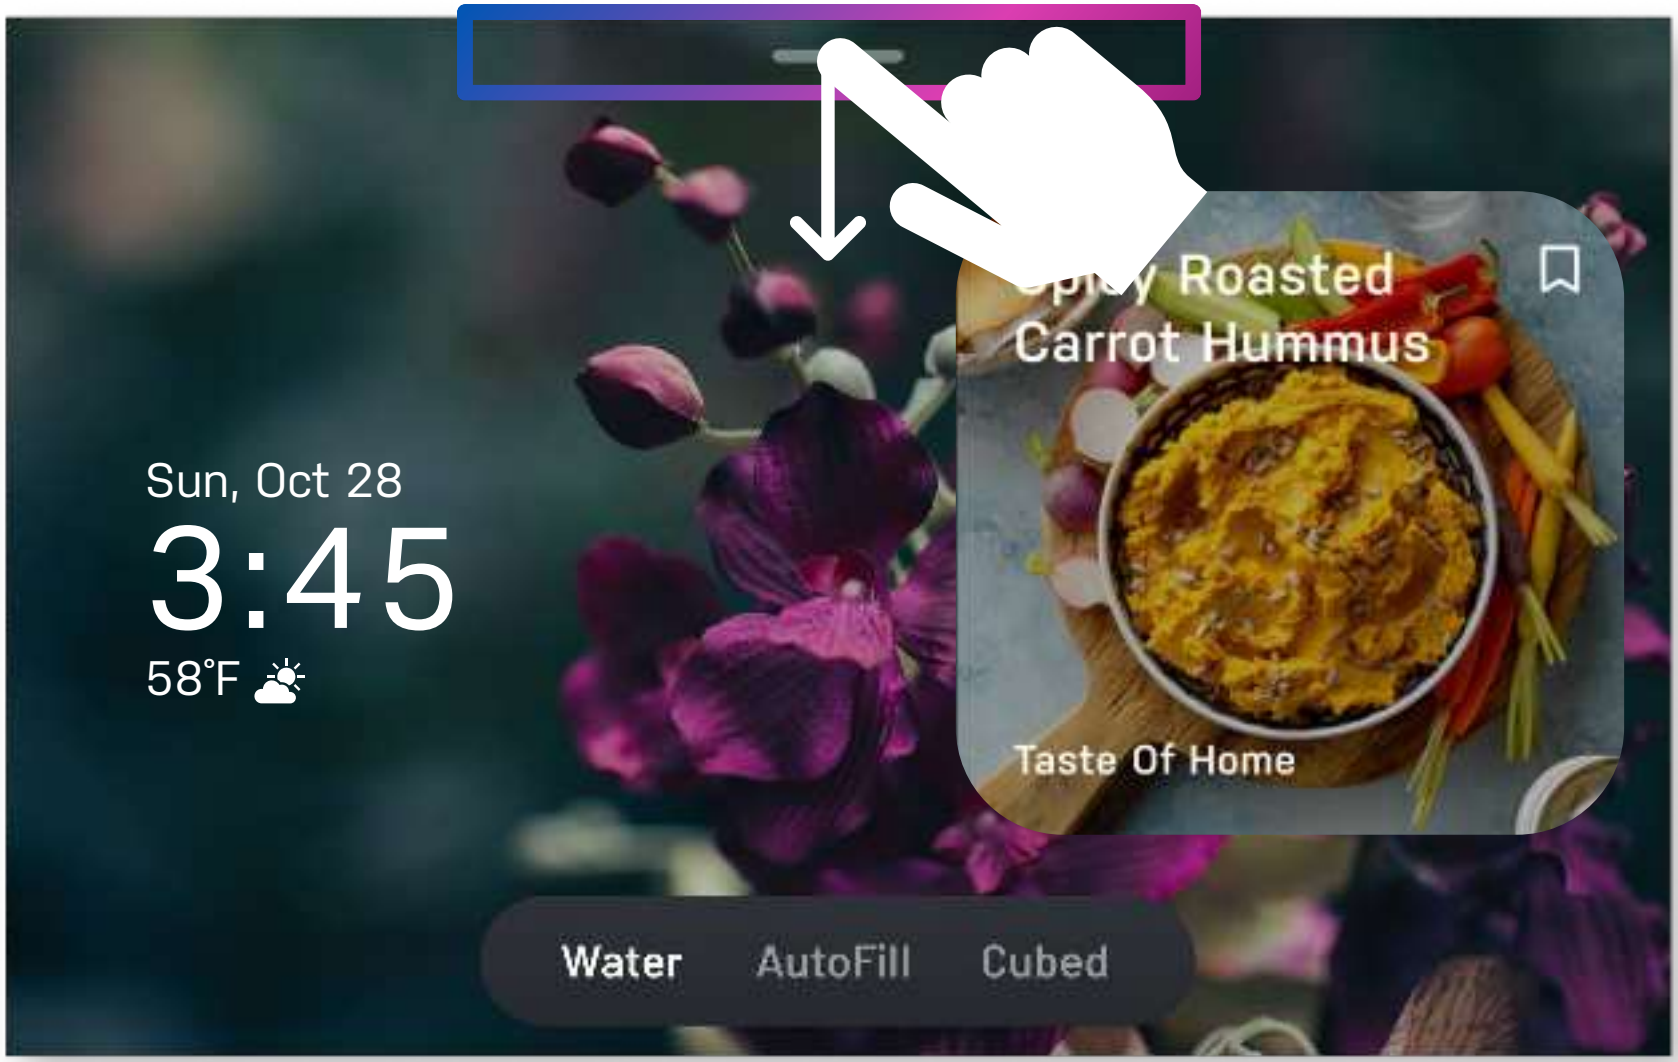

Change your Wi-Fi

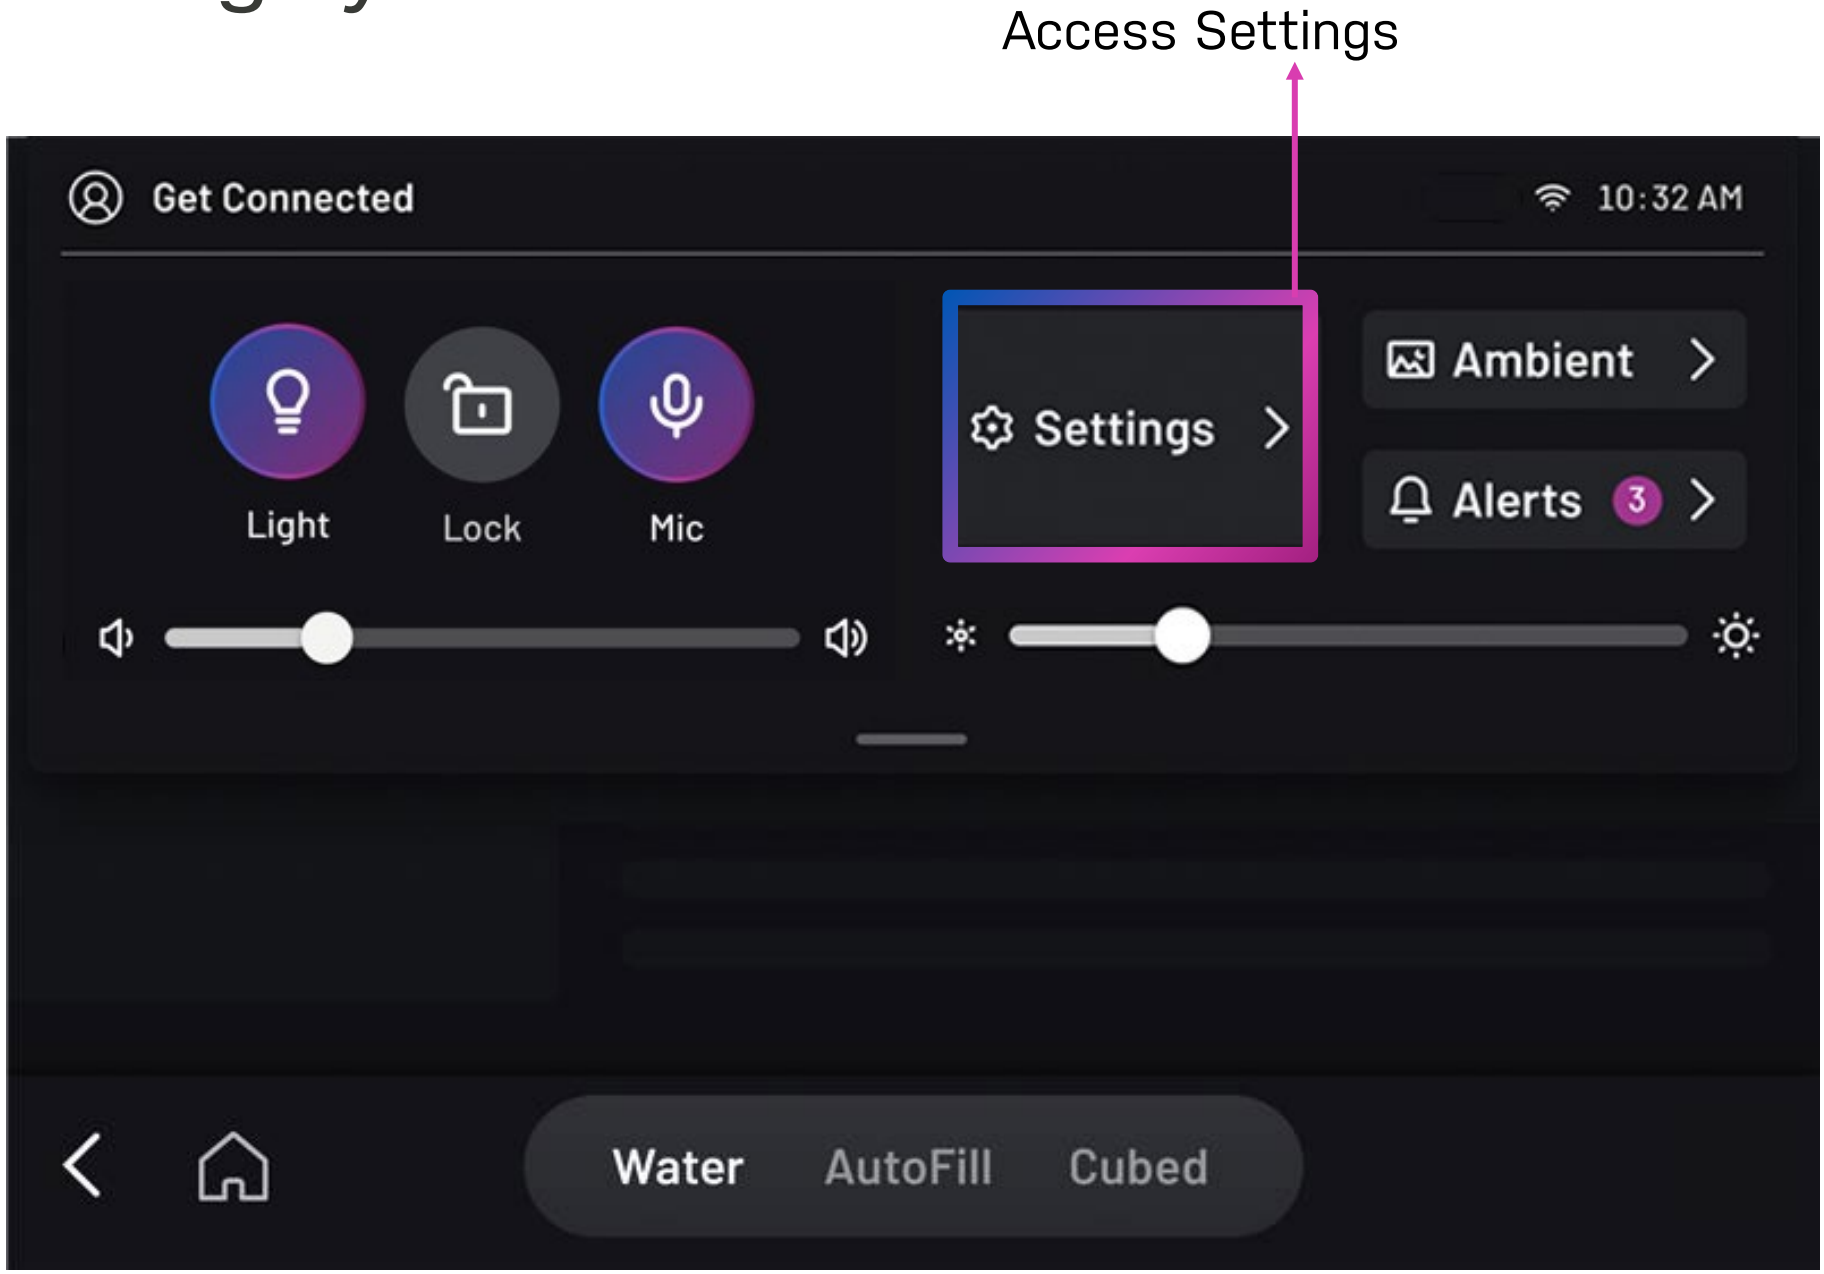

Change your Wi-Fi

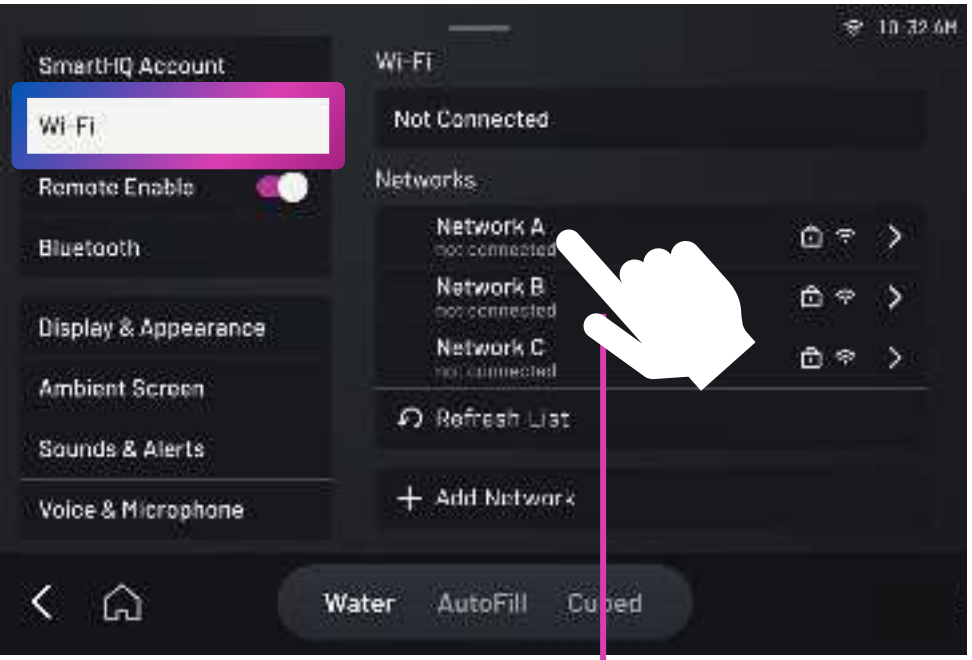

Select your home network

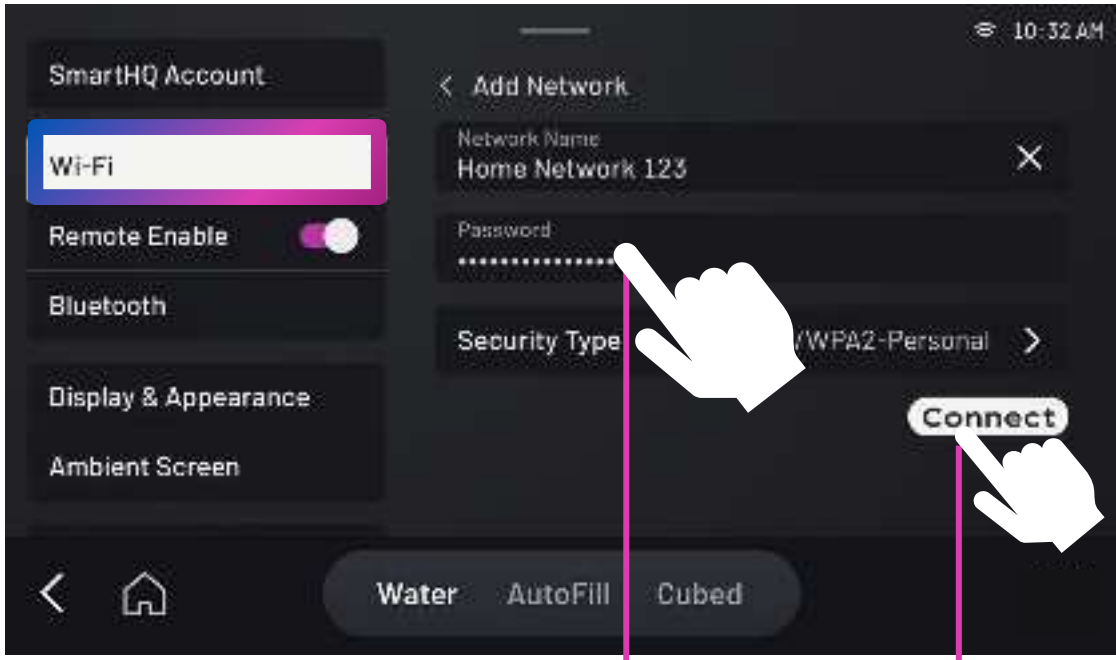

Enter your password

Click connect

Profile