

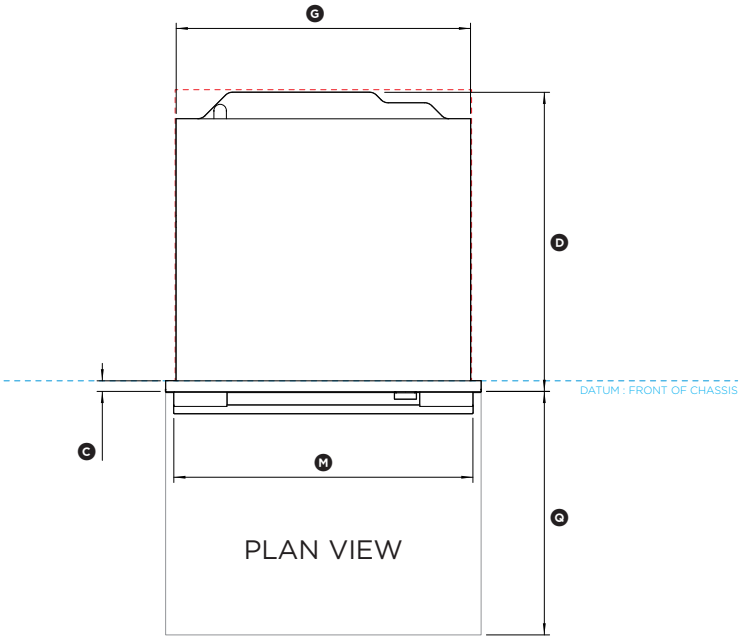



PLAN VIEW

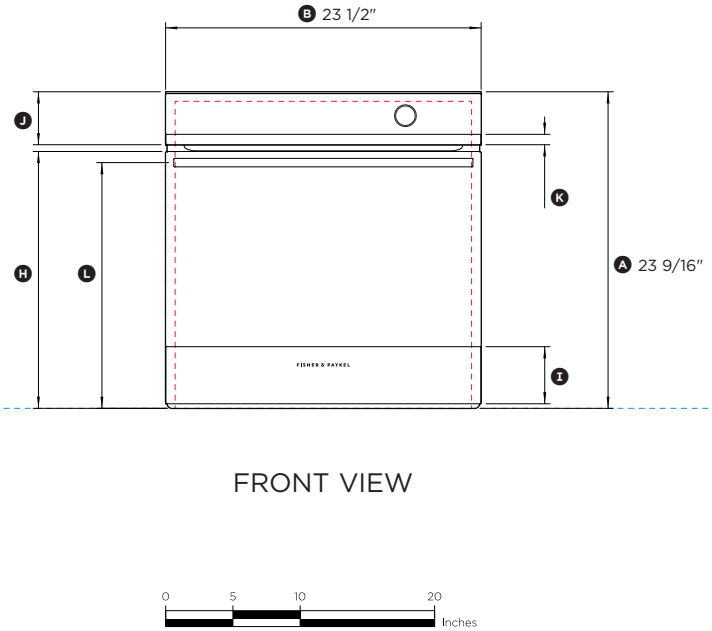


FRONT VIEW

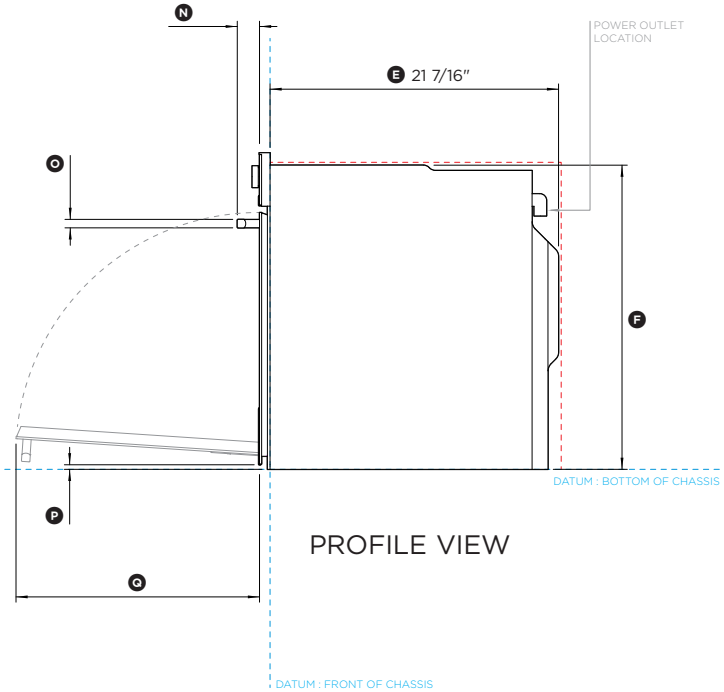


PROFILE VIEW




# FISHER & PAYKEL

**DATA SHEET**
**24" Oven**

Model no:
**OB24SDPTDX1**

(refer page 2 for metric measurements)

| **Product Dimensions** | **in** |
|---|---|
| Ⓐ Overall height of oven | 23 9/16" |
| Ⓑ Overall width of oven | 23 7/16" |
| Ⓒ Depth of front frame (excludes dial, handle and front stainless trim) | 13/16" |
| Ⓓ Depth of oven chassis and front frame (excludes dial, handle and front stainless trim) | 22 1/4" |
| Ⓔ Depth of chassis | 21 7/16" |
| Ⓕ Height of chassis | 22 5/8" |
| Ⓖ Width of chassis | 21 7/8" |
| Ⓗ Height from bottom datum to top of oven door | 19 1/8" |
| Ⓘ Height of stainless steel cap on oven door | 4 1/4" |
| Ⓙ Height of control panel | 3 15/16" |
| Ⓚ Height of stainless steel cap on control panel | 13/16" |
| Ⓛ Height from bottom datum to centerline of handle | 18 1/4" |
| Ⓜ Width of handle | 22 1/4" |
| Ⓝ Depth of handle (measured from front of door) | 1 5/8" |
| Ⓞ Thickness of handle | 5/8" |
| Ⓟ Height from bottom datum to bottom of door | 3/8" |
| Ⓠ Depth of door (open) (measured from front of door) | 18 1/8" |


| **Minimum Clearances** | **in** |
|---|---|
| Minimum inside height of cavity | 22 7/8" |
| Minimum inside width of cavity | 22 1/16" |
| Minimum inside depth of cavity | 21 11/16" |

IMPORTANT NOTE: For full installation and clearance details please refer to our Installation Manual.


INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **11.12.2019**


IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

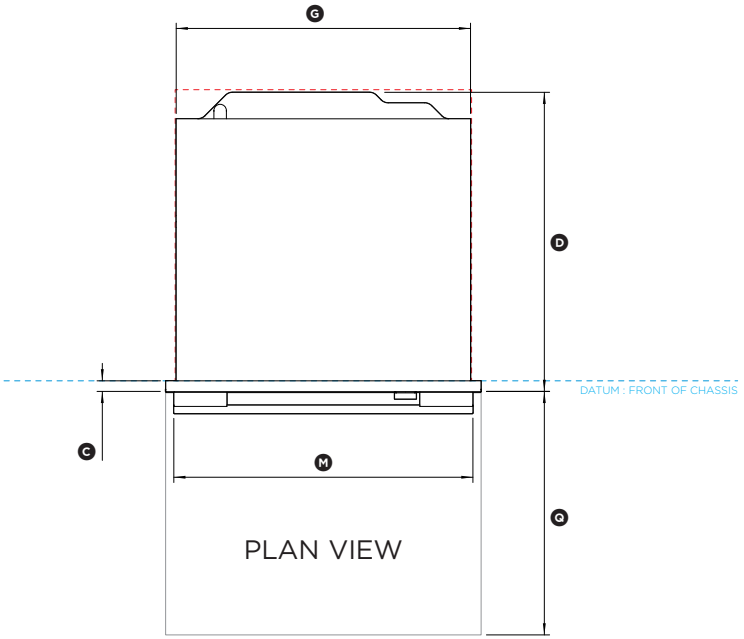


PLAN VIEW

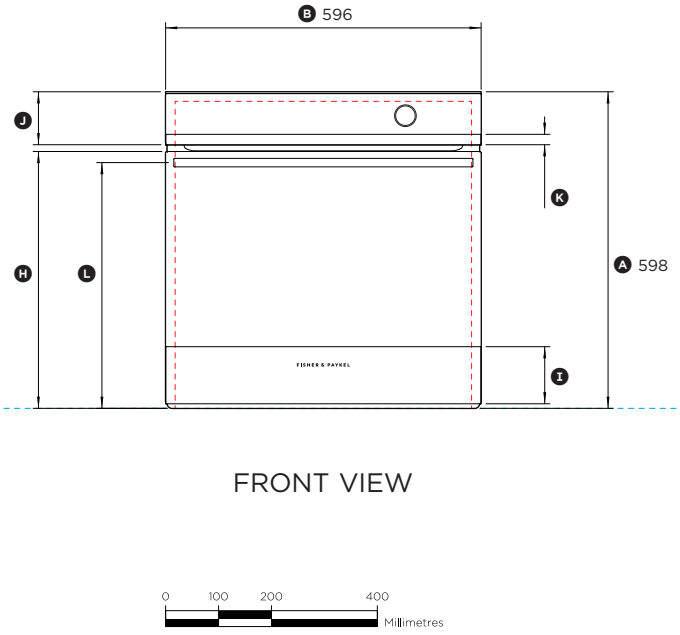


FRONT VIEW

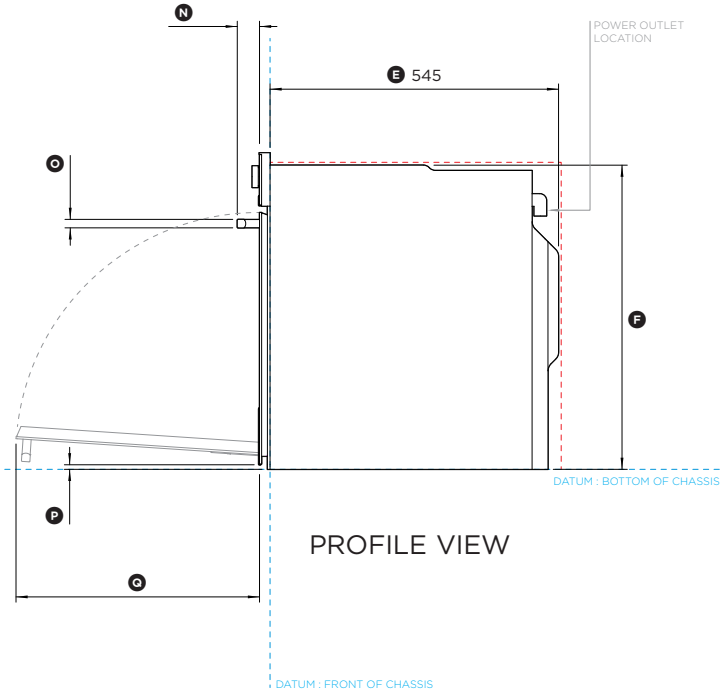


PROFILE VIEW




# FISHER & PAYKEL

**DATA SHEET**
**24" Oven**

Model no:
**OB24SDPTDX1**

(refer page 1 for imperial measurements)

| **Product Dimensions** | **mm** |
|---|---|
| Ⓐ Overall height of oven | 598 |
| Ⓑ Overall width of oven | 596 |
| Ⓒ Depth of front frame (excludes dial, handle and front stainless trim) | 20 |
| Ⓓ Depth of oven chassis and front frame (excludes dial, handle and front stainless trim) | 565 |
| Ⓔ Depth of chassis | 545 |
| Ⓕ Height of chassis | 575 |
| Ⓖ Width of chassis | 556 |
| Ⓗ Height from bottom datum to top of oven door | 485 |
| Ⓘ Height of stainless steel cap on oven door | 108 |
| Ⓙ Height of control panel | 100 |
| Ⓚ Height of stainless steel cap on control panel | 20 |
| Ⓛ Height from bottom datum to centerline of handle | 464 |
| Ⓜ Width of handle | 565 |
| Ⓝ Depth of handle (measured from front of door) | 42 |
| Ⓞ Thickness of handle | 16 |
| Ⓟ Height from bottom datum to bottom of door | 9 |
| Ⓠ Depth of door (open) (measured from front of door) | 460 |

| **Minimum Clearances** | **mm** |
|---|---|
| Minimum inside height of cavity | 580 |
| Minimum inside width of cavity | 560 |
| Minimum inside depth of cavity | 550 |

IMPORTANT NOTE: For full installation and clearance details please refer to our Installation Manual.

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **11.12.2019**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com