




PLAN VIEW

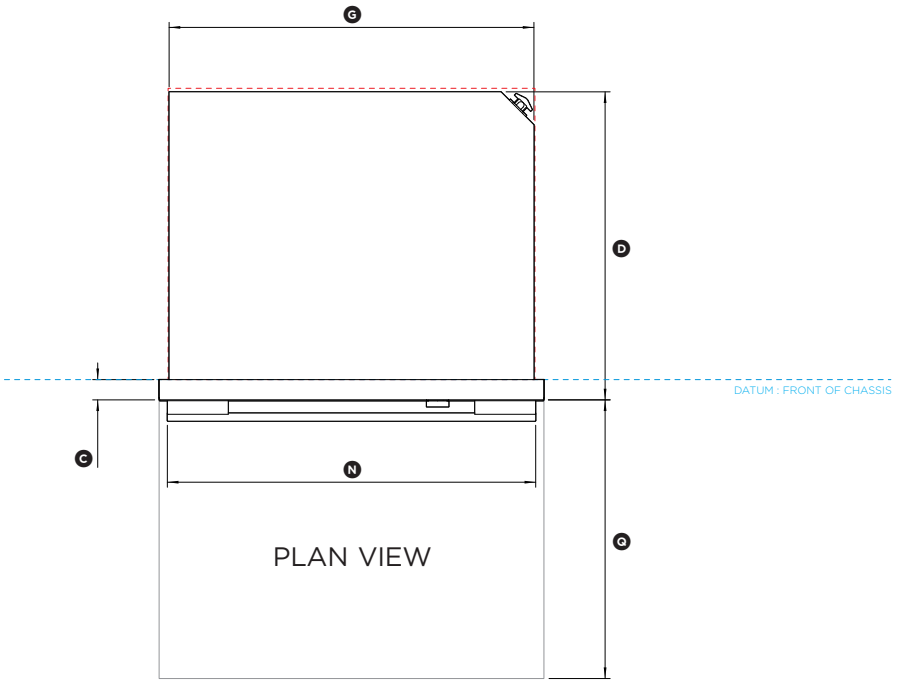

FRONT VIEW

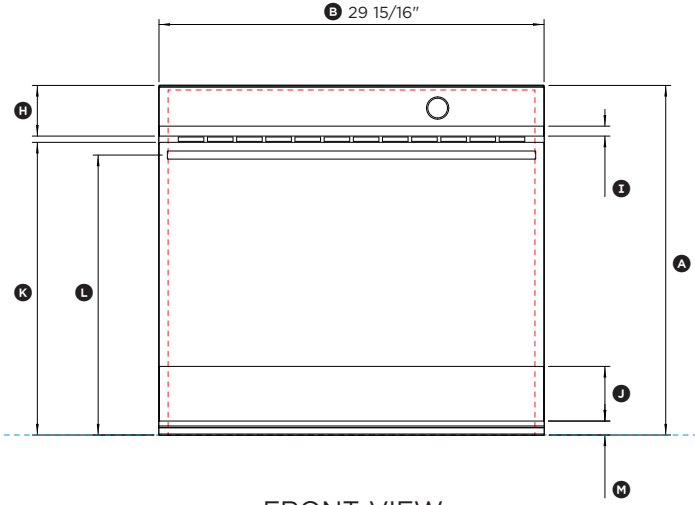

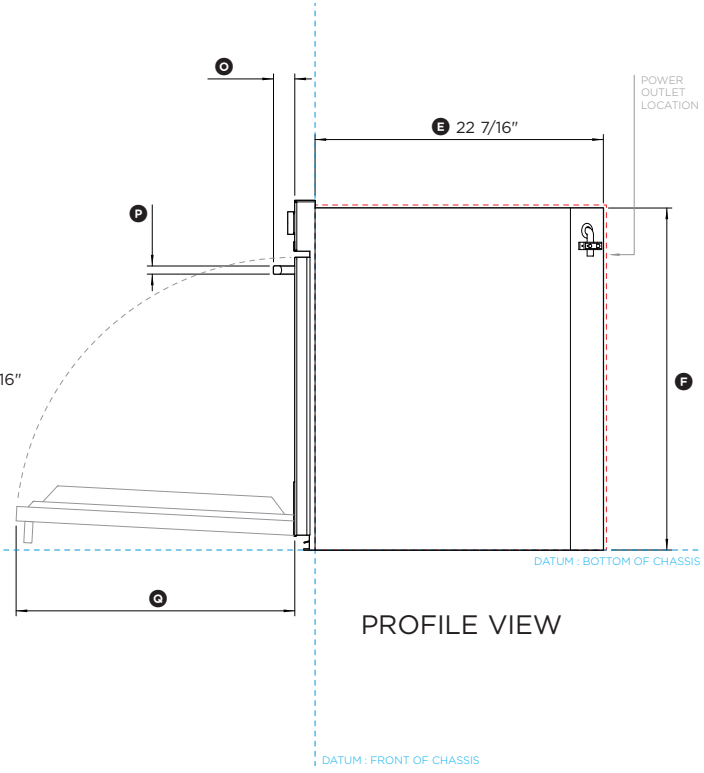

PROFILE VIEW

FISHER & PAYKEL

DATA SHEET
30" Oven

Model no:
OB30SDPTDX1

(refer page 2 for metric measurements)

Product Dimensions	**in**
Ⓐ Overall height of oven	27 3/16"
Ⓑ Overall width of oven	29 15/16"
Ⓒ Depth of front frame (excludes handle, front stainless steel trim and dial)	1 9/16"
Ⓓ Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)	24"
Ⓔ Depth of chassis	22 7/16"
Ⓕ Height of chassis	26 9/16"
Ⓖ Width of chassis	28 3/8"
Ⓗ Height of control panel	3 15/16"
Ⓘ Height of stainless steel trim on control panel	3/4"
Ⓙ Height of stainless steel trim on door	4 1/4"
Ⓚ Height from bottom datum to top of oven door	22 3/4"
Ⓛ Height from bottom datum to centerline of handle	21 3/4"
Ⓜ Height from bottom datum to bottom of door	1 1/8"
Ⓝ Width of handle	28 5/8"
Ⓞ Depth of handle	1 5/8"
Ⓟ Thickness of handle	5/8"
Ⓠ Depth of door (open) (measured from front of door)	21 11/16"

Minimum Clearances	**in**
Minimum inside height of cavity	26 13/16"
Minimum inside width of cavity	28 1/2"
Minimum inside depth of cavity (proud installation*)	22 5/8"


*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer Installation Manual.

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.


INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **31.10.2019**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

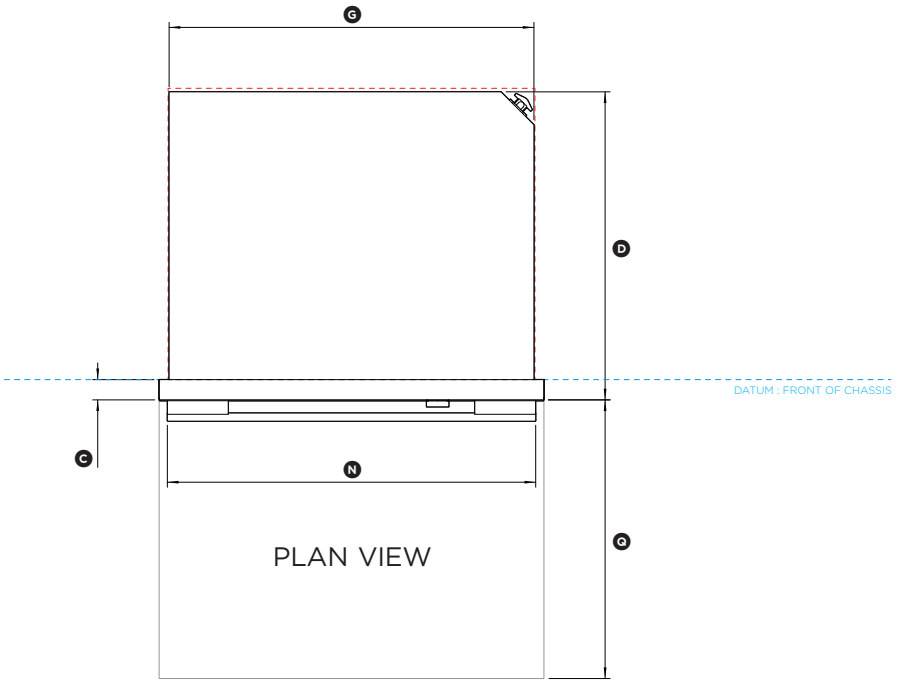


PLAN VIEW

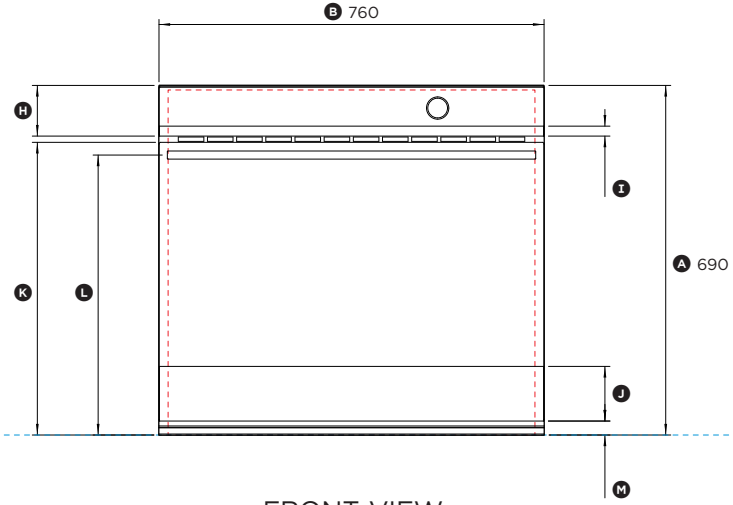

FRONT VIEW



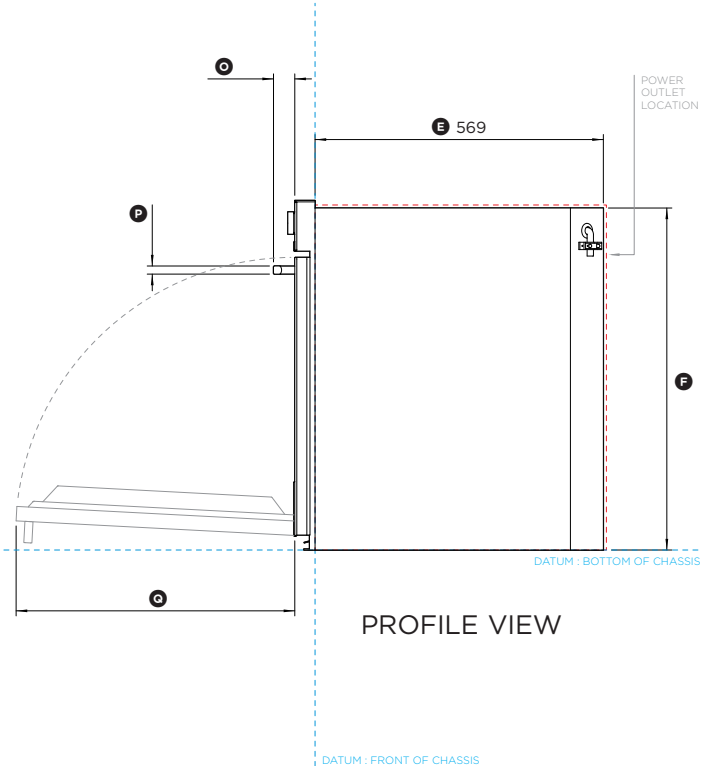

PROFILE VIEW

FISHER & PAYKEL

DATA SHEET
30" Oven

Model no:
OB30SDPTDX1

(refer page 1 for imperial measurements)

Product Dimensions	**mm**
Ⓐ Overall height of oven	690
Ⓑ Overall width of oven	760
Ⓒ Depth of front frame (excludes handle, front stainless steel trim and dial)	40
Ⓓ Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)	609
Ⓔ Depth of chassis	569
Ⓕ Height of chassis	675
Ⓖ Width of chassis	720
Ⓗ Height of control panel	100
Ⓘ Height of stainless steel trim on control panel	20
Ⓙ Height of stainless steel trim on door	108
Ⓚ Height from bottom datum to top of oven door	578
Ⓛ Height from bottom datum to centerline of handle	553
Ⓜ Height from bottom datum to bottom of door	28
Ⓝ Width of handle	727
Ⓞ Depth of handle	42
Ⓟ Thickness of handle	16
Ⓠ Depth of door (open) (measured from front of door)	550

Minimum Clearances	**mm**
Minimum inside height of cavity	681
Minimum inside width of cavity	724
Minimum inside depth of cavity (proud installation*)	575

*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer Installation Manual.

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **31.10.2019**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com