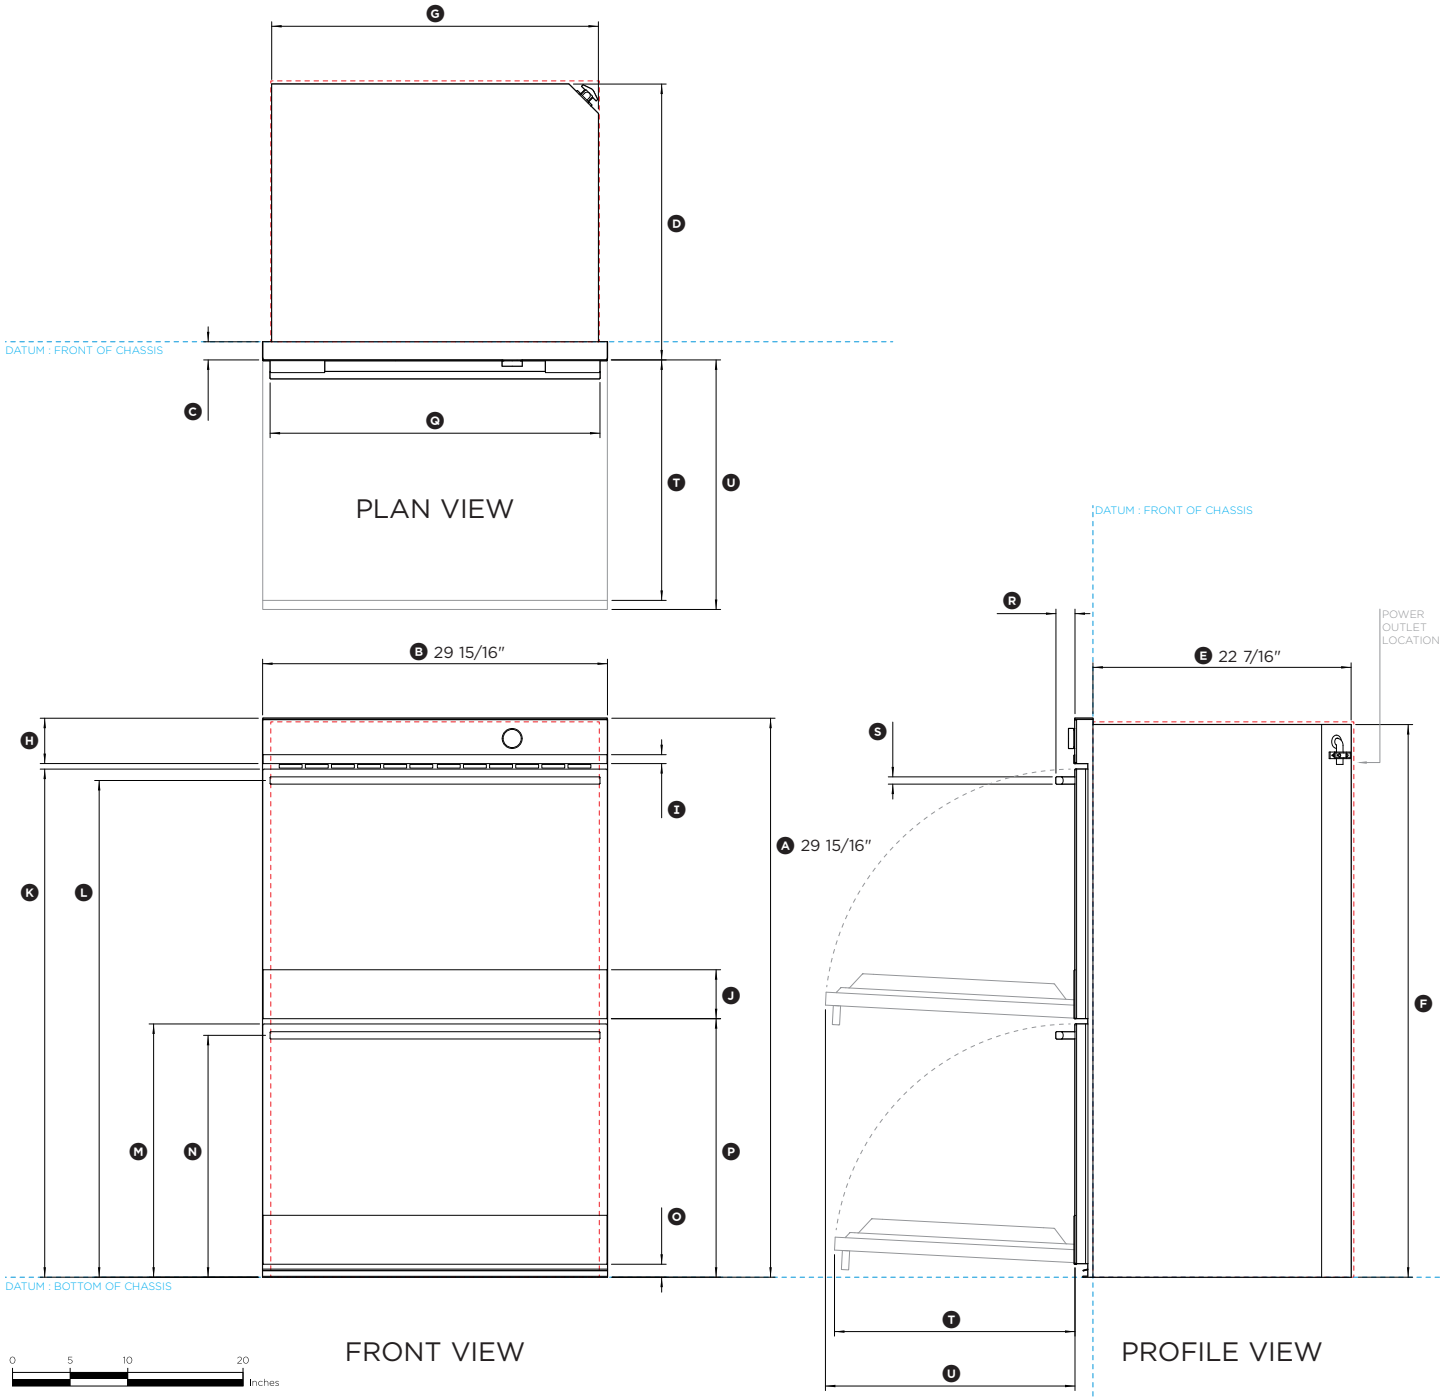


FISHER & PAYKEL

DATA SHEET
30" Oven

Model no:
OB30DDPTDX1

(refer page 2 for metric measurements)

Product Dimensions	**in**
Ⓐ Overall height of oven	48 1/2"
Ⓑ Overall width of oven	29 15/16"
Ⓒ Depth of front frame (excludes handle, front stainless steel trim and dial)	1 9/16"
Ⓓ Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)	24"
Ⓔ Depth of chassis	22 7/16"
Ⓕ Height of chassis	47 15/16"
Ⓖ Width of chassis	28 3/8"
Ⓗ Height of control panel	3 15/16"
Ⓘ Height of stainless steel trim on control panel	3/4"
Ⓙ Height of stainless steel trim on upper and lower door	4 1/4"
Ⓚ Height from bottom datum to top of upper oven door	44 1/8"
Ⓛ Height from bottom datum to centerline of upper handle	43 1/8"
Ⓜ Height from bottom datum to top of lower oven door	22"
Ⓝ Height from bottom datum to centerline of lower handle	21"
Ⓞ Height from bottom datum to bottom of lower door	1 1/8"
Ⓟ Height from bottom datum to bottom of upper door	22 7/16"
Ⓠ Width of handle	28 5/8"
Ⓡ Depth of handle	1 5/8"
Ⓢ Thickness of handle	5/8"
Ⓣ Depth of lower door (open) (measured from front of door)	20 7/8"
Ⓤ Depth of upper door (open) (measured from front of door)	21 11/16"

Minimum Clearances	**mm**
Minimum inside height of cavity	48 3/16"
Minimum inside width of cavity	28 1/2"
Minimum inside depth of cavity (proud installation*)	22 5/8"


*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer Installation Manual.

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **31.10.2019**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

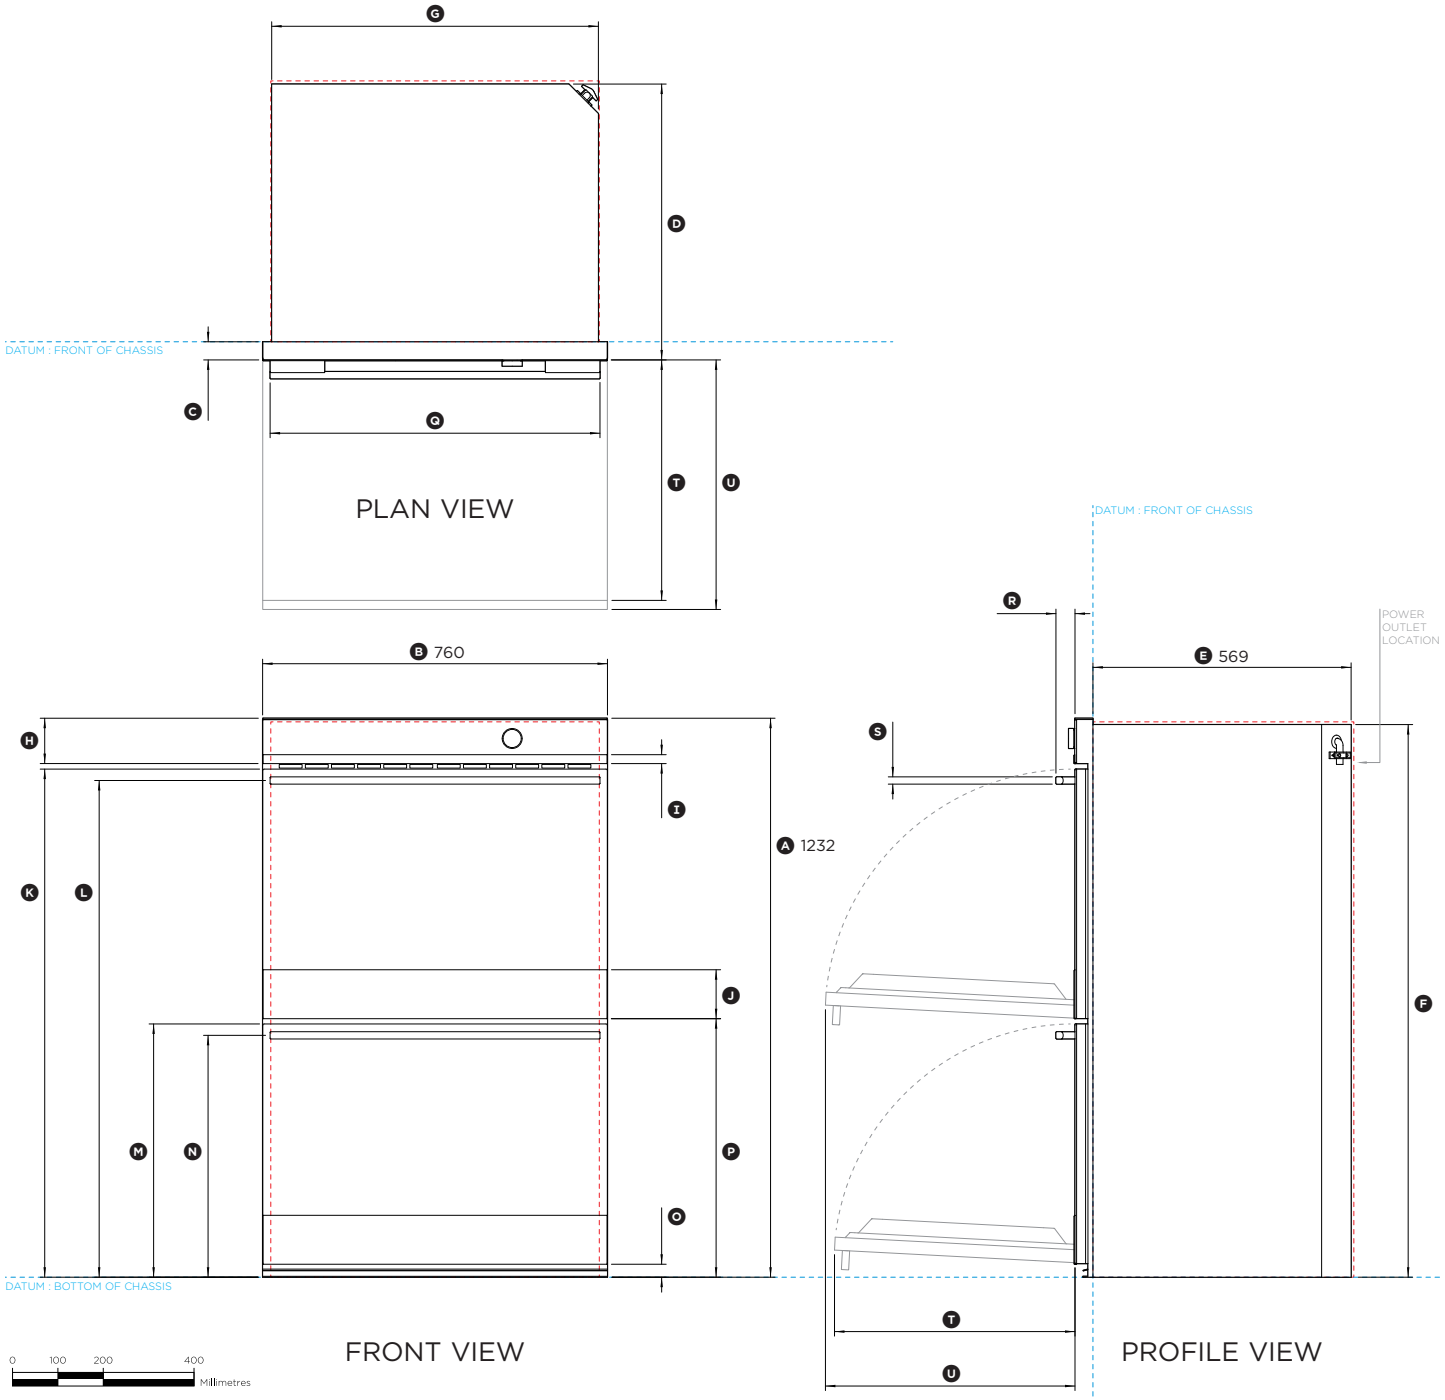

FISHER & PAYKEL

DATA SHEET
30" Oven

Model no:
OB30DDPTDX1

(refer page 1 for imperial measurements)

Product Dimensions	**mm**
Ⓐ Overall height of oven	1232
Ⓑ Overall width of oven	760
Ⓒ Depth of front frame (excludes handle, front stainless steel trim and dial)	40
Ⓓ Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)	609
Ⓔ Depth of chassis	569
Ⓕ Height of chassis	1218
Ⓖ Width of chassis	720
Ⓗ Height of control panel	100
Ⓘ Height of stainless steel trim on control panel	20
Ⓙ Height of stainless steel trim on upper and lower door	108
Ⓚ Height from bottom datum to top of upper oven door	1120
Ⓛ Height from bottom datum to centerline of upper handle	1095
Ⓜ Height from bottom datum to top of lower oven door	558
Ⓝ Height from bottom datum to centerline of lower handle	533
Ⓞ Height from bottom datum to bottom of lower door	29
Ⓟ Height from bottom datum to bottom of upper door	570
Ⓠ Width of handle	727
Ⓡ Depth of handle	42
Ⓢ Thickness of handle	16
Ⓣ Depth of lower door (open) (measured from front of door)	530
Ⓤ Depth of upper door (open) (measured from front of door)	550

Minimum Clearances	**mm**
Minimum inside height of cavity	1224
Minimum inside width of cavity	724
Minimum inside depth of cavity (proud installation*)	575

*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer Installation Manual.

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **31.10.2019**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com