KXX-200-XX, KXX-200-XX-RP & KXX-201-XX
Wall Mount Pot Filler
Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Recommended Supply Pressure:	20 to 70 psi †
Maximum Flow Rate:	4 gpm


† If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (RPV).

1 PREPARING WALL FOR FAUCET

IMPORTANT: It is the **RESPONSIBILITY** of the **INSTALLER** to provide a proper cross SUPPORT **(1)** and securely install supply PIPE **(2)** to provide adequate support for the Pot Filler Faucet.


Note: This Pot Filler Faucet is approved for installation over a stove top NOT kitchen or prep-sink.


- Securely mount a 2x4 cross SUPPORT **(1)** with front surface flush between studs in wall to provide proper support for pot filler faucet and PIPE **(2)**
- Cold water supply PIPE **(2)** shall be installed securely to 2x4 cross SUPPORT **(1)** as follows:
  - from top or bottom in vertical plain
    -OR-
  - from left or right in horizontal plain

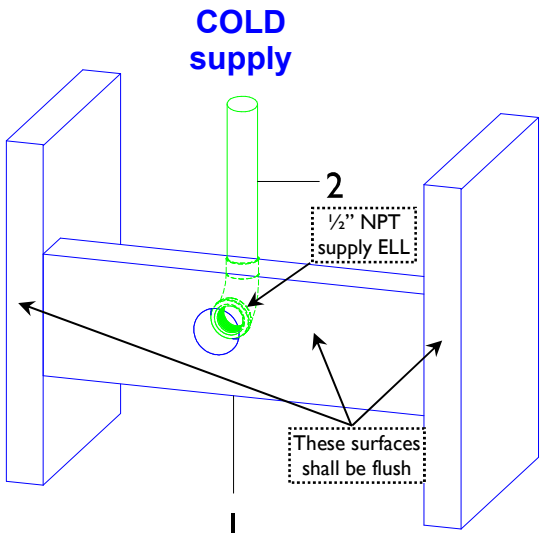

WARNING: It is important to have ALL supply PIPE **(2)** located in either a vertical or horizontal plain to prevent possible puncture of supply PIPE **(2)** by mounting SCREWS **(9)**. This should not occur providing that a 2x4 (1-1/2" x 3-1/2") cross SUPPORT **(1)** and the supplied SCREWS **(9)** are used. However, it is the **RESPONSIBILITY** of the **INSTALLER** to ensure that all precautions are taken to prevent accidental puncturing of supply PIPE **(2)** from occurring during installation

- When installing the quick CONNECT **(4)** in Section 2 the location of supply PIPE **(2)** is very important to prevent accidental puncture (e.g. leaks) in supply PIPE **(2)**

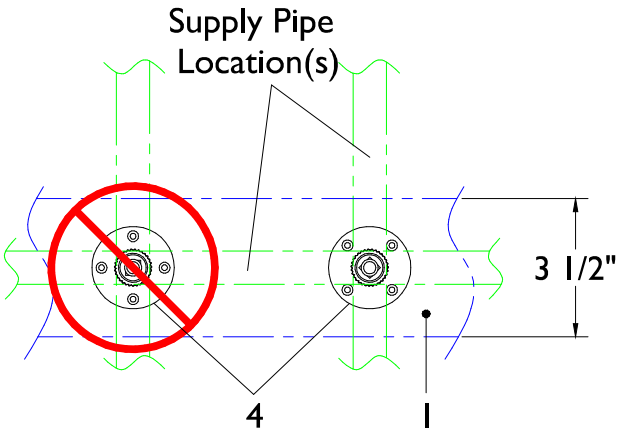

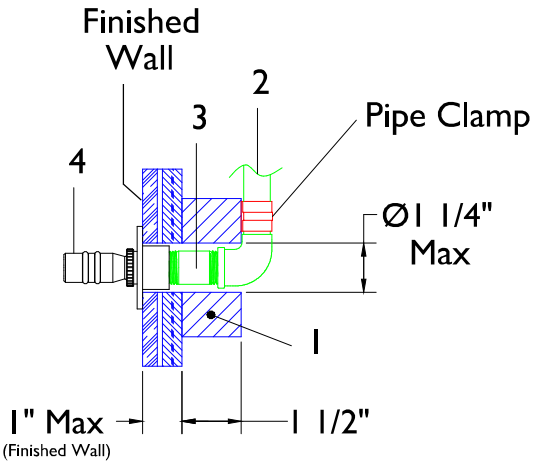


2 LEVELING POT FILLER FAUCET

Note: Following is to be done when finished wall is completed.

- Hand tighten appropriated length ½" NPT NIPPLE **(3)** and into quick CONNECT **(4)**; insert NIPPLE **(3)** & quick CONNECT **(4)** through finished wall OPENING **(5)** hand tighten only

IMPORTANT: Screw holes on quick CONNECT (4) must be in "X" not "+" pattern

- Place FAUCET **(6)** onto quick CONNECT **(4)**
- Using LEVEL **(7)** on horizontal tube of FAUCET **(6)**; move FAUCET **(6)** up or down until level (quick CONNECT **(4)** will rotate with faucet)
- Using a pencil to mark positions for screw holes
- Remove FAUCET **(6)** and quick CONNECT **(4)**

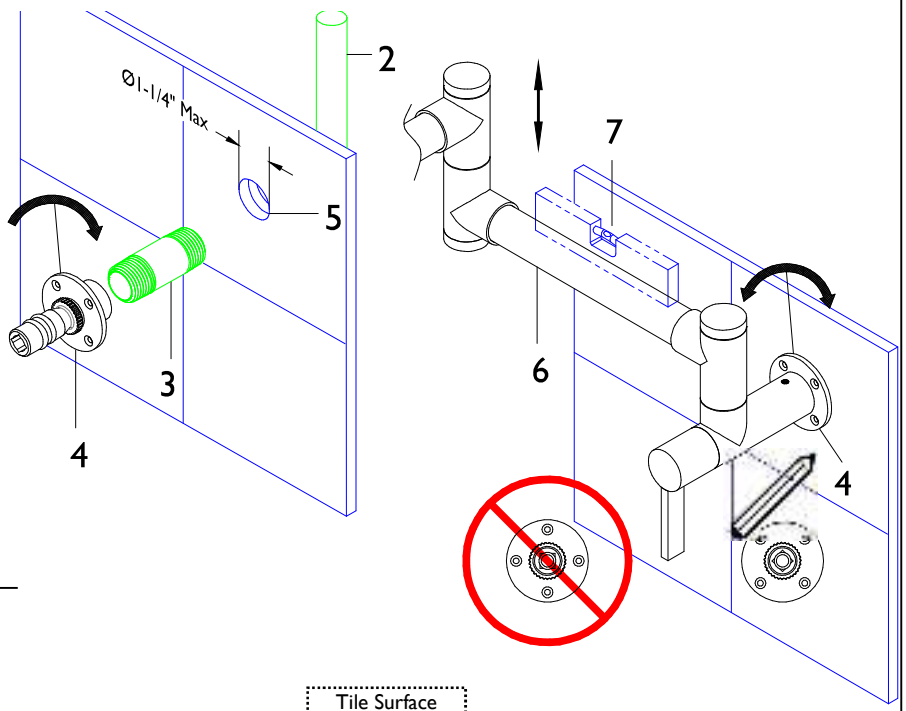

3 INSTALLING QUICK CONNECT

Note: Based on finished wall surface (e.g. tile or drywall) there are different options for attaching the quick CONNECT **(4)** to the wall.

Tile Surface (thickness 1" max)


- Using 3/16" drill bit, drill to depth of 1" and install ANCHOR **(8)**


Drywall Surface (thickness ½" max)


- Using 7/64" drill bit, drill to a depth of 1½" into drywall and wood cross SUPPORT **(1)**

WARNING: When using drill, it is the **RESPONSIBILITY** of the **INSTALLER** to ensure that all precautions are taken to prevent accidental puncturing of supply PIPE (2) from occurring during installation

- Apply 3 wraps of Teflon TAPE **(9)** ½" NPT NIPPLE **(3)** and thread into quick CONNECT **(4)**
- Apply 3 wraps of Teflon TAPE **(9)** to other end of ½" NIPPLE **(3)** and insert through finished wall OPENING **(5)**
- Insert 3/8" drive WRENCH **(10)** into end of quick CONNECT **(4)** and securely tighten into supply PIPE **(2)**
- Secure quick CONNECT **(4)** in place with all four SCREWS **(9)** provided

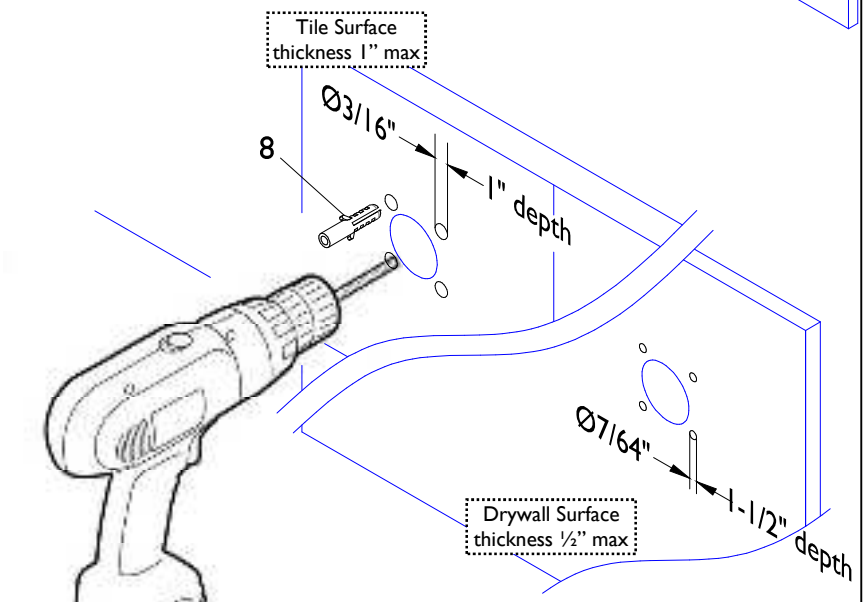


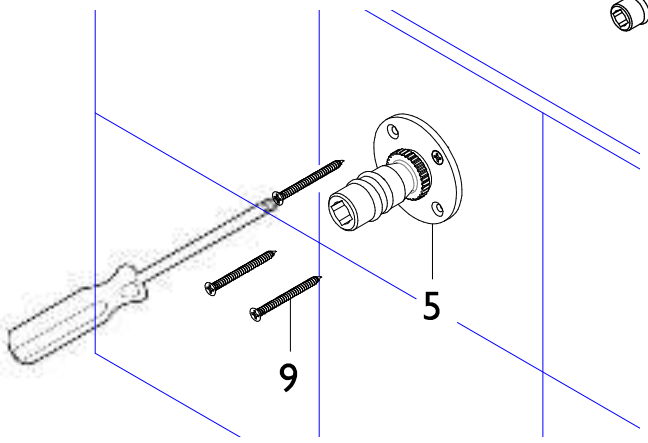

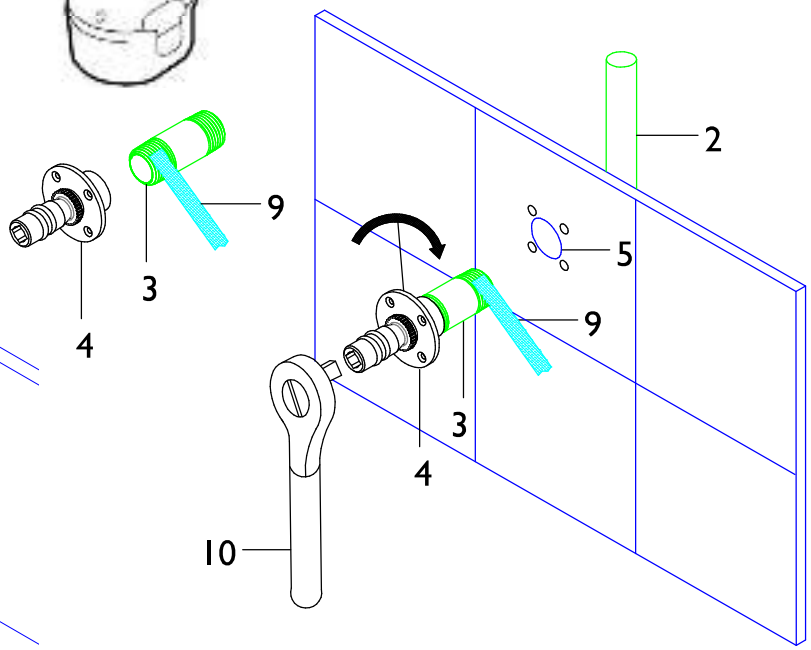

4 ATTACHING FAUCET TO WALL

- Slide base COVER **(11)** onto inlet of FAUCET **(6)**
- Place FAUCET **(6)** onto quick CONNECT **(4)**
- Secure FAUCET **(6)** in place by tightening top and bottom SETSCREW **(12)** with KEY **(13)**
- Slide base COVER **(11)** against finished wall

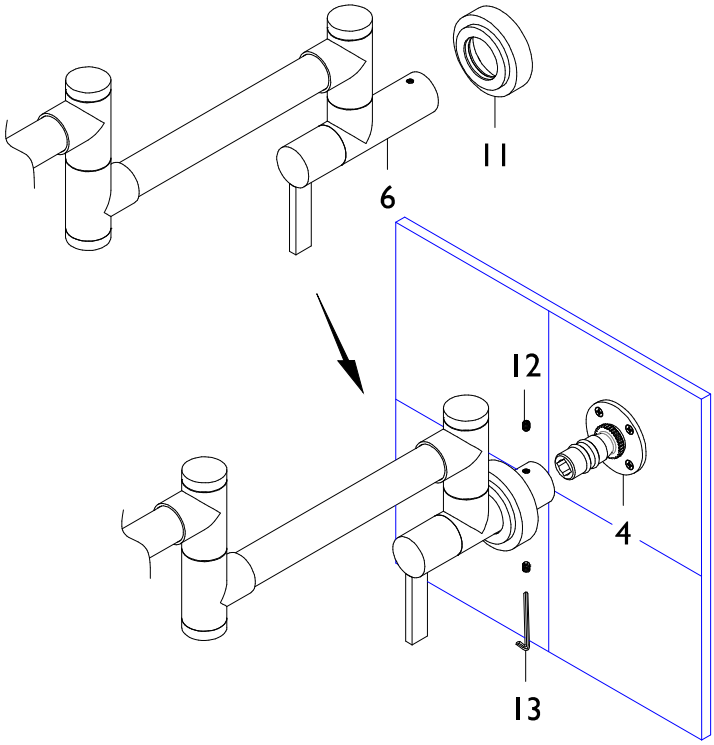



5 FLUSHING SYSTEM

- Remove AERATOR **(14)** using KEY **(15)**

Note: For reverse position pot fillers (K50-200-XX-RP & K51-200-XX-RP only) requires front HANDLE **(6)** installation to tighten SETSCREW **(12)** using KEY **(13)**

- Turn both faucet HANDLES **(6)** to full on and flush for 2 minutes; check for any leaks at all fittings
- Re-install AERATOR **(14)** using KEY **(15)**

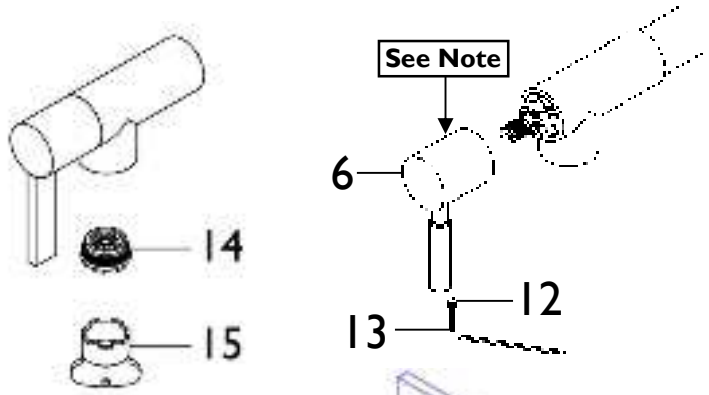

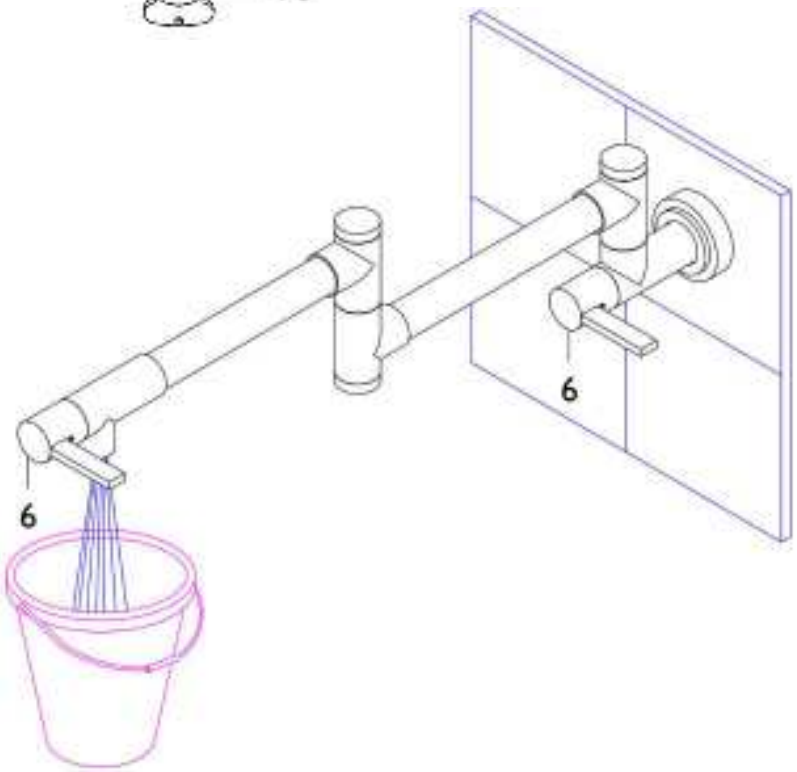

6 USER INSTRUCTIONS

- To fill pot first turn on rear handle
- Position pot filler over desired pot and fill pot by turning on forward handle
- When desired level water is in pot, turn off forward handle push pot filler out of way back against wall and turn off rear handle.

IMPORTANT: When pot filler is not in use turn off both rear and forward handles to full off to prevent addental flood

WARNING: The pot filler will become hot when the arm is above hot stove burner or cooking pot. **ALWAYS** push the pot filler away from burner or pot when not in use.

