

Installation Instructions

MONOGRAM PROFESSIONAL WALL HOOD DUCT COVER KITS

(ZX36DC6, ZX48DC6, ZX36DC12, ZX48DC12)

For Models ZV30/36/48RSF, ZV30/36/48SSF, ZV30/36/48TSF

Before mounting the hood, plan the duct cover installation: Make sure there is a space dimension between the top of the hood and the ceiling (at it's lowest point) that is divisible by six. **Tip:** Add duct covers before the blower is installed.

These instructions are applicable to F1 & F2 revisions of these models, at the time of this writing.

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** – Save these instructions for local inspector's use. Observe all governing codes and ordinances.
- **Note to Installer** – Be sure to leave these instructions with the Consumer.
- **Note to Consumer** – Keep these instructions for future reference.

TOOL AND MATERIALS REQUIRED

- #2 Hex Driver


STEP 1

Remove the duct covers from the carton. It is much easier to remove the film at this point given the rigidity provided by the cardboard insert. Be careful not to damage the stainless steel.

STEP 2

The top flange of the duct cover has small screw holes (bite holes) that are 13" apart. The bottom flange has bite holes that are 14-1/2" apart. Mark the duct cover so you will know the top from the bottom.

The 12 inch duct covers should be mounted at the bottom of the stack and the 6 inch duct covers should be mounted at the top of the stack. Determine how many duct covers you will need for your installation and lay them out on your working surface in appliance order.

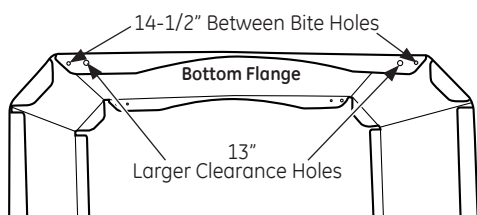

STEP 2 (Cont.)

- If you plan to use only one duct cover, position the bottom of the duct cover on top of the hood, aligning the front edge of the duct cover with the front edge of the hood. Locate the screws and go to step 4.
- If you plan to use multiple duct covers, select the duct cover you want on top of the hood (A). Turn it upside down such that you are looking at the bottom flange. Decide the duct cover you want to be next in the stack (B) and turn it upside down. Place duct cover A on top of duct cover B. Secure these with screws provided inside the duct cover. Drive 2 screws in the front flange and one in each of the rear flanges. Continue to build your stack by placing this assembly on top of the next upside down duct cover so A is always at the top of the stack.

STEP 3

After you have assembled the stack of duct covers, turn them right side up (so A is now on the bottom) and left them to place them on top of the hood.

STEP 4

Secure the stack of duct covers to the top of the hood: Take your screw driver and screws with you and position your body so your head and arms are inside the hood, facing forward. Secure the duct cover stack to the top of the hood by driving 2 screws through the top of the hood chassis and into the bottom flange of the duct cover. Drive two final screws, one in each of the rear flanges of the duct covers. There is no attachment to the wall with these duct covers.

