

TEMPLATE 1

17 5/16"

HOLE CENTER LINE

HOLE CENTER LINE

DETACH

DETACH

TEMPLATE 2 - THIS SIDE IS FOR INSIDE OF CABINET

IMPORTANT

Read the installation instructions for complete instructions before beginning installation.
Template must lie flat against the cabinet when locating the holes.

17 5/16"


MUST NOT HAVE OBSTRUCTIONS IN THIS AREA

MUST NOT HAVE OBSTRUCTIONS IN THIS AREA

5 7/8"

INSTRUCTIONS

(See installation instructions for complete instructions)

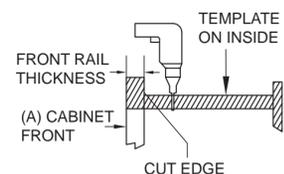

PCHK11 Series Models Only:
The front rail thickness cannot exceed 3/4".

IF YOU DRILL THE 4 MOUNTING HOLES FROM THE INSIDE SIDE OF THE CABINET, MEASURE THE THICKNESS OF THE FRONT RAIL AND CUT THAT AMOUNT OFF THE FRONT OF THE TEMPLATE. USE THE CUTTING LINES TO ENSURE A STRAIGHT CUT. PLACE THE CUT EDGE AGAINST THE BACK SIDE OF THE FRONT RAIL AND POSITION THE TEMPLATE FLAT AGAINST THE BOTTOM SIDE OF THE CABINET.

DRILL THE 1/4" DIA. AS DESCRIBED IN THE INSTALLATION INSTRUCTIONS.

IMPORTANT

MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE (MICROWAVE SIDE A AND B) AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVEN. DEPENDING ON WHETHER YOU CHOOSE TO DRILL FROM INSIDE THE CABINET (A) OR FROM THE BOTTOM SIDE OF THE CABINET (B), THE TEMPLATE SIDES MARKED "MICROWAVE SIDE A" OR "MICROWAVE SIDE B" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

5/8"

TEMPLATE CUT LINES

CABINET CORNER

TEMPLATE CUT LINES

MICROWAVE FRONT DOOR SIDE

MICROWAVE FRONT CONTROL PANEL SIDE

MICROWAVE SIDE A

MICROWAVE SIDE A

DETACH

DETACH

7 13/16"

HOLE CENTER LINE

HOLE CENTER LINE

TEMPLATE 1

17 5/16"

HOLE CENTER LINE

HOLE CENTER LINE

DETACH

DETACH

DETACH

DETACH

TEMPLATE 2 - THIS SIDE IS FOR BOTTOM OF CABINET

17 5/16"

IMPORTANT
Read the installation instructions for complete instructions before beginning installation.
Template must lie flat against the cabinet when locating the holes.


MUST NOT HAVE OBSTRUCTIONS IN THIS AREA

HOLE CENTER LINE

7 13/16"

INSTRUCTIONS

(See installation instructions for complete instructions)




PCHK11 Series Models Only:
The front rail thickness cannot exceed 3/4".

IF YOU DRILL THE 4 MOUNTING HOLES FROM THE BOTTOM SIDE OF THE CABINET, MEASURE THE THICKNESS OF THE FRONT RAIL AND CUT THAT AMOUNT OFF THE FRONT OF THE TEMPLATE. USE THE CUTTING LINES TO ENSURE A STRAIGHT CUT. PLACE THE CUT EDGE AGAINST THE BACK SIDE OF THE FRONT RAIL AND POSITION THE TEMPLATE FLAT AGAINST THE BOTTOM SIDE OF THE CABINET.

DRILL THE 1/4" DIA. AS DESCRIBED IN THE INSTALLATION INSTRUCTIONS.

IMPORTANT
MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE (MICROWAVE SIDE A AND B) AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVEN. DEPENDING ON WHETHER YOU CHOOSE TO DRILL FROM INSIDE THE CABINET (A) OR FROM THE BOTTOM SIDE OF THE CABINET (B), THE TEMPLATE SIDES MARKED "MICROWAVE SIDE A" OR "MICROWAVE SIDE B" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

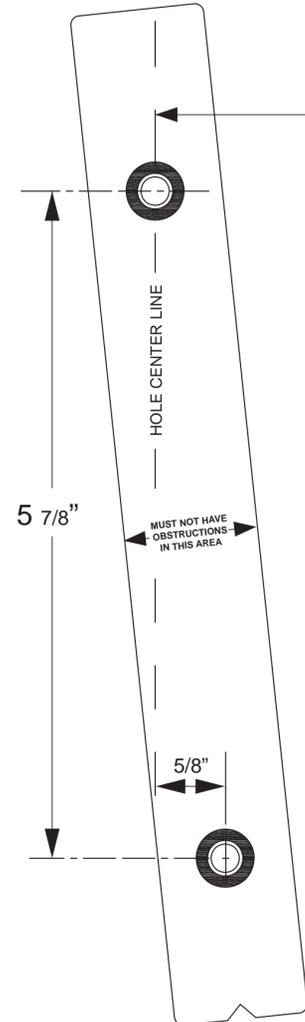

TEMPLATE CUT LINES

CABINET CORNER

TEMPLATE CUT LINES

MICROWAVE FRONT CONTROL PANEL SIDE

MICROWAVE FRONT DOOR SIDE

MICROWAVE SIDE B

MICROWAVE SIDE B