


TEMPLATE 1

TEMPLATE 2 ON TOP SIDE

IMPORTANT
Read the installation instructions for complete instructions before beginning installation.
Template must lie flat against the cabinet when locating the holes.

INSTRUCTIONS

(See installation instructions for complete instructions)

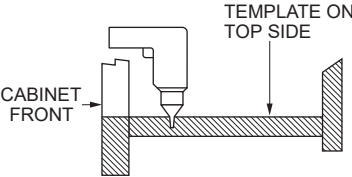

If you drill the 4 mounting holes from the inside of the cabinet, place the front edge of the template at the front edge of the cabinet. Drill the 4 holes 1/4" dia. as described in the installation instructions.

If you drill the 4 mounting holes from the bottom side of the cabinet, measure the thickness of the front rail and cut that amount off the front of the template. Use the cutting lines to ensure a straight cut. Place the cut edge against the back side of the front rail and position the template flat against the bottom side of the cabinet. Drill the 1/4" dia. as described in the installation instructions.

IMPORTANT
MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE (MICROWAVE SIDE A AND B) AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVEN. THE TEMPLATE SIDES MARKED "MICROWAVE SIDE A" OR "MICROWAVE SIDE B" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

TEMPLATE CUT LINES

CABINET CORNER

TEMPLATE CUT LINES

1 1/4 INCH

1 INCH

3/4 INCH

1/2 INCH

FRONT

FRONT

FRONT

FRONT

1/4 INCH

HOLE CENTER LINE

HOLE CENTER LINE

MUST NOT HAVE
OBSTRUCTIONS
IN THIS AREA

MUST NOT HAVE
OBSTRUCTIONS
IN THIS AREA

HOLE CENTER LINE

HOLE CENTER LINE

4-28/32"

11 5/8"

DETACH


DETACH

DETACH

DETACH

MICROWAVE SIDE B

MICROWAVE SIDE A

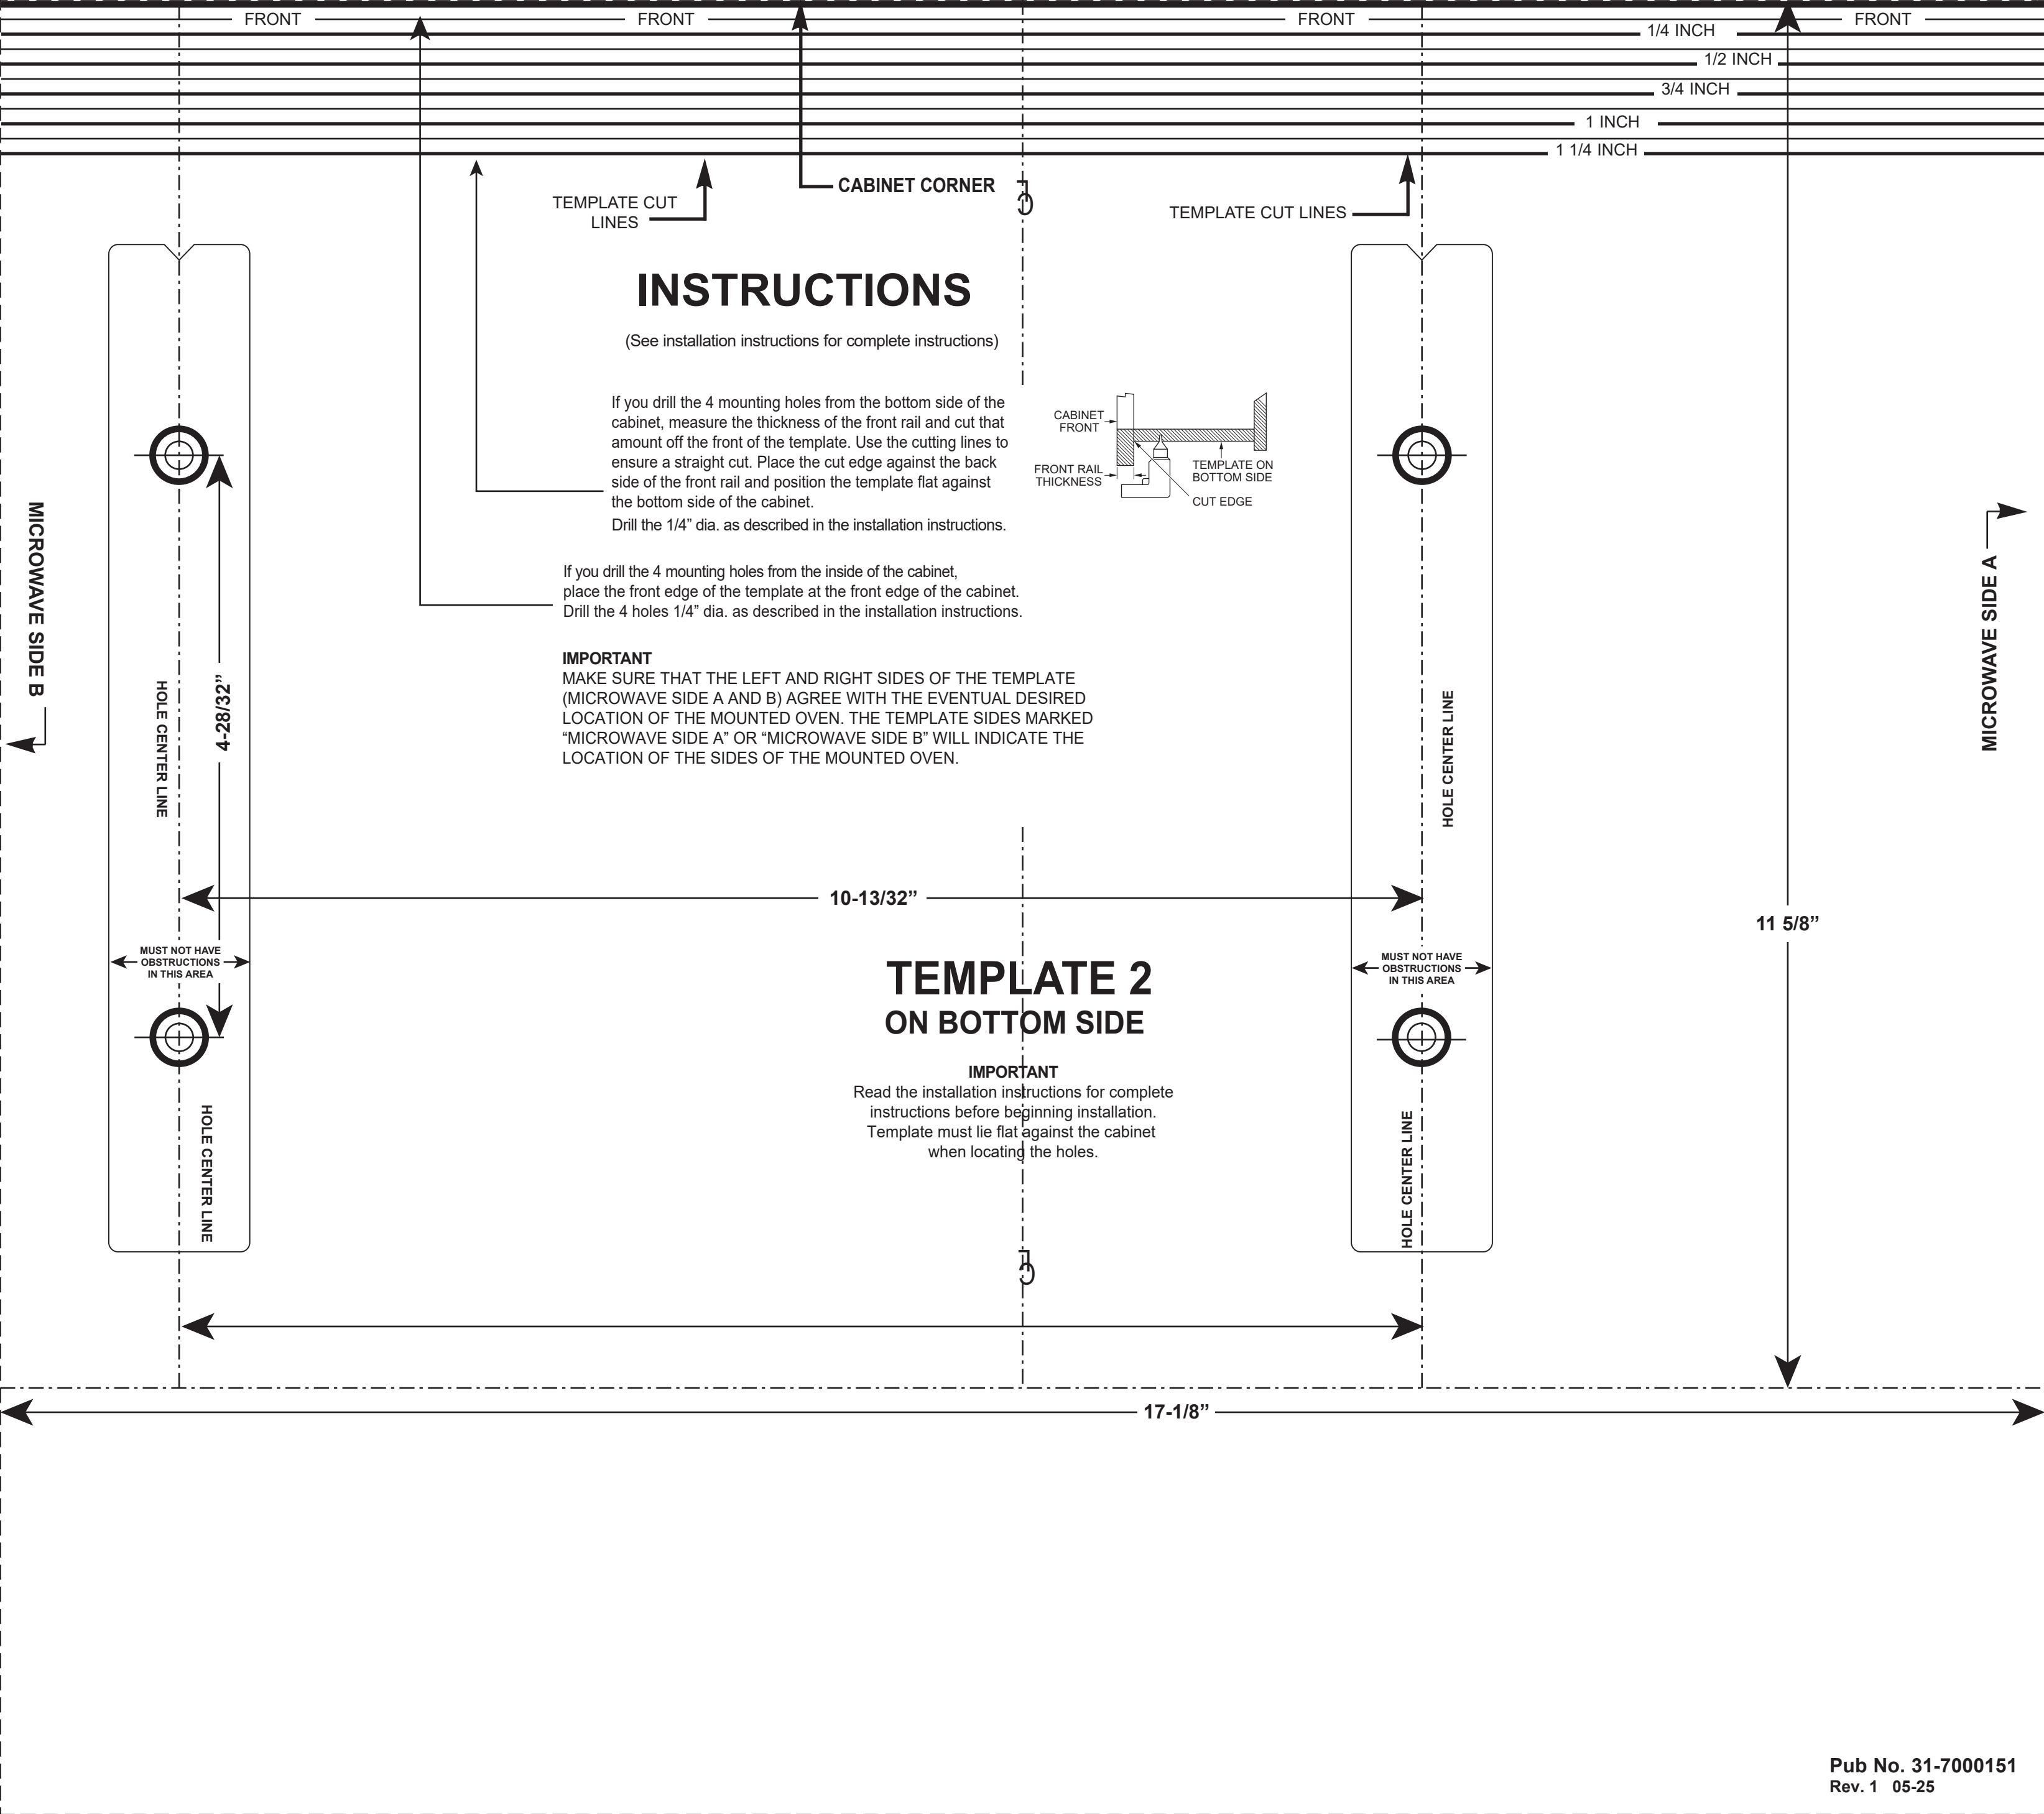

FRONT

FRONT

FRONT

1/4 INCH

FRONT

1/2 INCH

3/4 INCH

1 INCH

1 1/4 INCH

TEMPLATE CUT
LINES

CABINET CORNER


TEMPLATE CUT LINES

INSTRUCTIONS

(See installation instructions for complete instructions)

If you drill the 4 mounting holes from the bottom side of the cabinet, measure the thickness of the front rail and cut that amount off the front of the template. Use the cutting lines to ensure a straight cut. Place the cut edge against the back side of the front rail and position the template flat against the bottom side of the cabinet.

Drill the 1/4" dia. as described in the installation instructions.

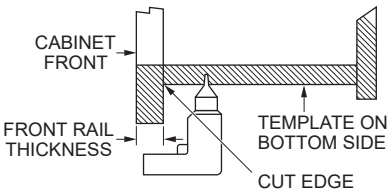

If you drill the 4 mounting holes from the inside of the cabinet, place the front edge of the template at the front edge of the cabinet. Drill the 4 holes 1/4" dia. as described in the installation instructions.

IMPORTANT

MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE (MICROWAVE SIDE A AND B) AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVEN. THE TEMPLATE SIDES MARKED "MICROWAVE SIDE A" OR "MICROWAVE SIDE B" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

TEMPLATE 2 ON BOTTOM SIDE

IMPORTANT

Read the installation instructions for complete instructions before beginning installation. Template must lie flat against the cabinet when locating the holes.

MICROWAVE SIDE B

MICROWAVE SIDE A

HOLE CENTER LINE

4-28/32"

MUST NOT HAVE
OBSTRUCTIONS
IN THIS AREA

HOLE CENTER LINE

10-13/32"

HOLE CENTER LINE

MUST NOT HAVE
OBSTRUCTIONS
IN THIS AREA

HOLE CENTER LINE

11 5/8"

17-1/8"