3004-I, 3304-I, 3504-I, 4804-I, 5204-I, 5504-I, 6104-I, 6204-I, 6404-I, 6804-I, 7704-I, E304-I, E404-I, & E504-I

Single Hole Bidet with Pop-Up Drain

Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.
Operating Specifications:
Recommended Supply Pressure: 20 to 70 psi *


* If water pressure exceeds 70 psi install a Pressure-Reducing Valve (PRV).


I INSTALLING TRIM TO BIDET

- Insert O-RING **(2)** into bottom of BASE RING **(1)** and center over bidet THROUGH-HOLE **(3)**


Note: Recommended bidet THROUGH-HOLE is Ø1-3/8"

- Insert FLEX HOSE **(5)** (one at a time) and THREADED ROD **(6)** though BASE RING **(1)** and bidet THROUGH-HOLE **(3)**
- Place BODY **(4)** on top of BASE RING **(1)**
- From underside of sink/deck THROUGH-HOLE **(3)**, place MOUNTING BRACKET **(7)** and NUT **(8)** onto THREADED ROD **(6)**
- Tighten NUT **(8)** until BODY **(4)** and BASE RING **(1)** is secure to bidet

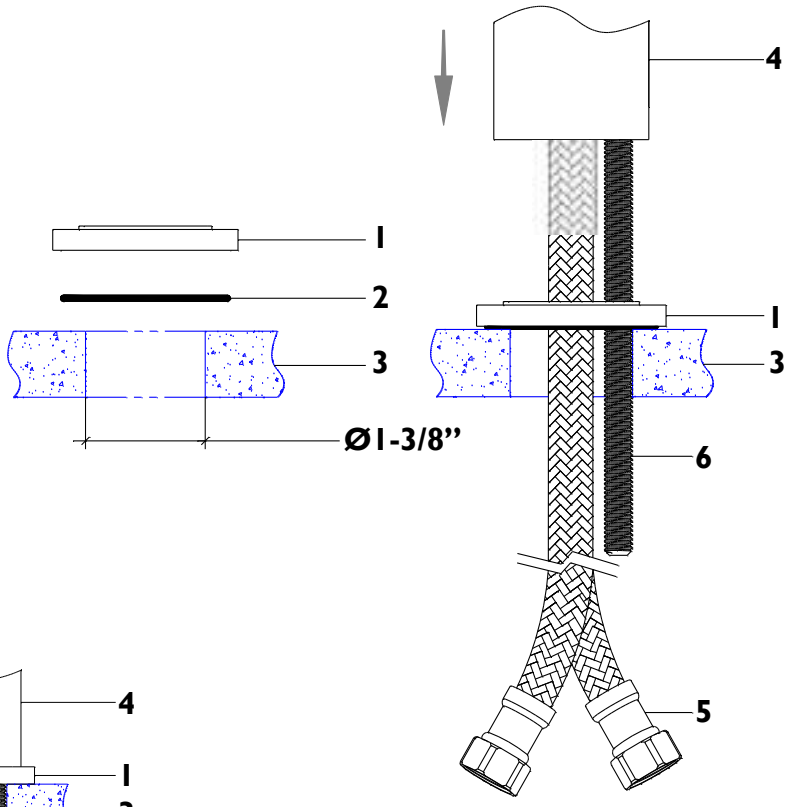

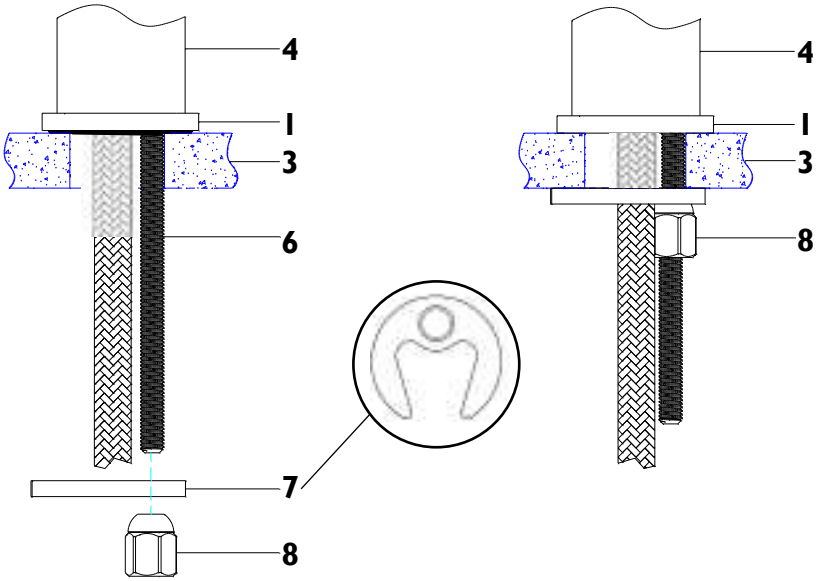

NOTE: Bidet set may use NUT (8) and BRACKET (7) shown below

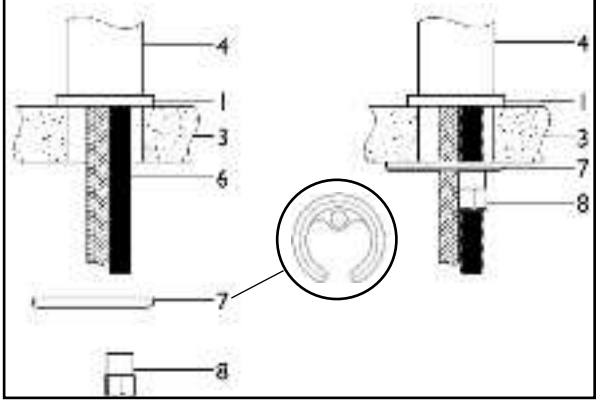


2 INSTALLING POP-UP DRAIN

- Slide white foam WASHER **(14)** up under flange of BODY **(9)**

- or -

- Apply thin film of Silicon® sealant (or equivalent – DO NOT use petroleum-based sealant as this WILL void finish warranty) to underside of flange on BODY **(9)**
- Insert BODY **(9)** down through bidet drain HOLE **(15)**
- From underside, slide MACH-WASHER **(10)** and FRICTION-WASHER **(10a)** up onto BODY **(9)**
- Secure BODY **(9)** into place with flange NUT **(11)**
- Apply Teflon® tape **(13)** (not supplied) to threaded portion of TAILPIECE **(12)** & tighten onto BODY **(9)**

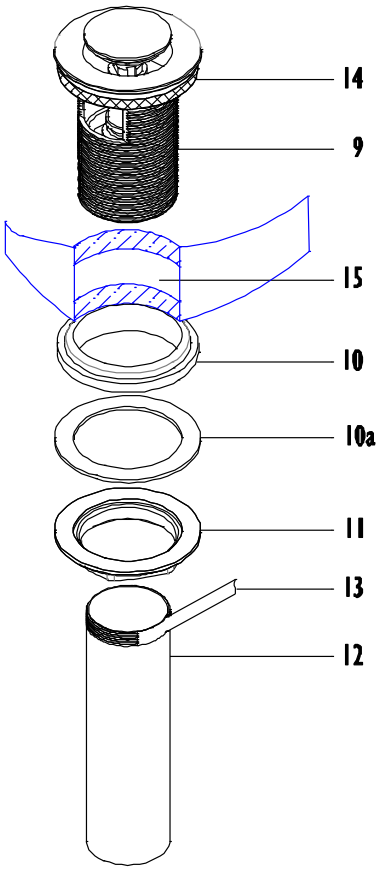


3 SUPPLY & WASTE CONNECTIONS

- Connect blue colored FLEX HOSE **(5)** to cold SUPPLY VALVE **(17)** and red colored FLEX HOSE **(5)** to hot SUPPLY VALVE **(17)**

Important: Flush supply lines and valves prior to installation to prevent damage and malfunction of cartridge

- Connect waste P-TRAP **(16)** to drain TAILPIECE **(12)**
- Turn on cold and hot SUPPLY VALVES **(17)**
- Slowly open faucet lever by lifting lever and rotate to left and right
- Check all connections for leaks and repair as necessary
- Give these instructions to consumer for safe keeping

Note: Occasionally, due to water conditions it may be necessary to remove aerator and clean debris off with soft bristle toothbrush

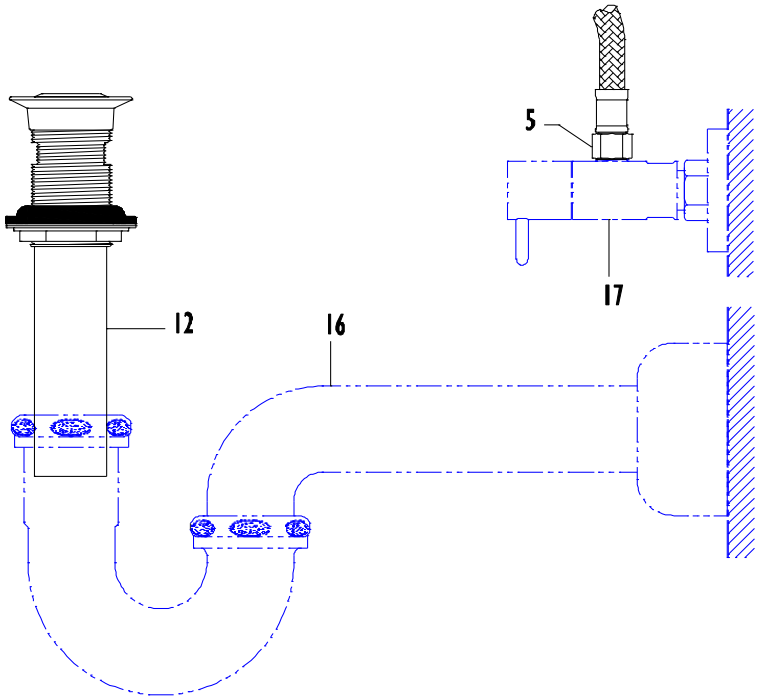

I am approving this document