

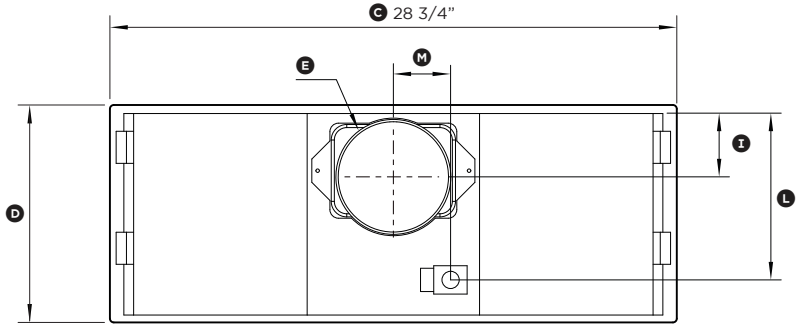



PLAN VIEW

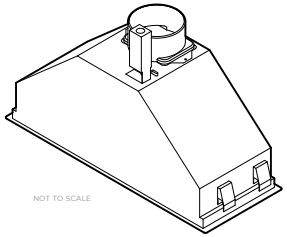

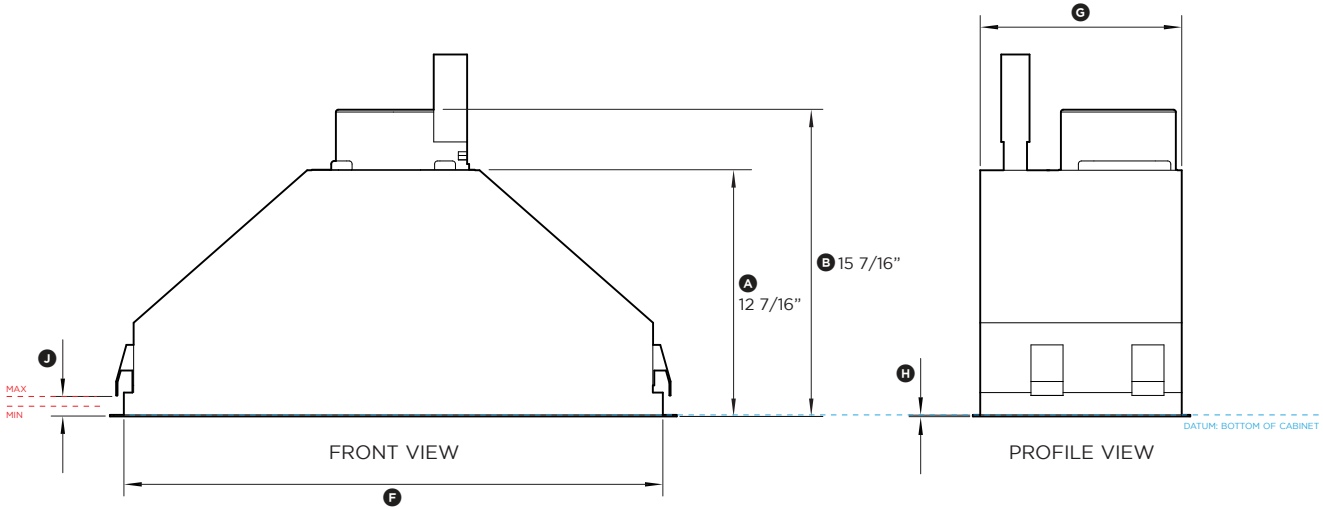


FRONT VIEW

PROFILE VIEW

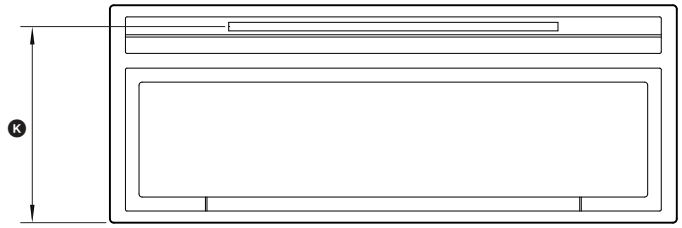

BOTTOM VIEW



FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30"

Model nos:
HP30IDCHX4
(refer page 2 for metrical measurements)

Product Dimensions	**in**
Ⓐ Overall height of range hood without ducting adapter	12 7/16"
Ⓑ Overall height of range hood with ducting adapter	15 7/16"
Ⓒ Overall width of range hood	28 3/4"
Ⓓ Overall depth of range hood (excl. cabinetry front panel)	11"
Ⓔ Diameter of ducting adaptor	6"
Ⓕ Width of range hood chassis	27 5/16"
Ⓖ Depth of range hood chassis	10 3/16"
Ⓗ Thickness of flange	1/16"
Ⓘ Distance from ducting outlet center to rear of chassis	3 1/4"
Ⓙ Height adjustability of clip that secures cooker hood (cabinet base panel thickness)	min 9/16" max 1 9/16"
Ⓚ Distance from rear to center of light	9 15/16"
Ⓛ Distance from back of chassis to hard wiring box	8 5/16"
Ⓜ Distance from center of product to hard wiring box	2 7/8"

Cavity Dimensions Standard Installation	**in**
Width of cutout	27 9/16"
Depth of cutout	10 1/4"

Minimum distance above cooktops	**in**
Minimum height from top of cooktop to base of product	24"


Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.

Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.


INDICATES CUTOUT ----------
INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------


DATE: 23.08.2023 90003054A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

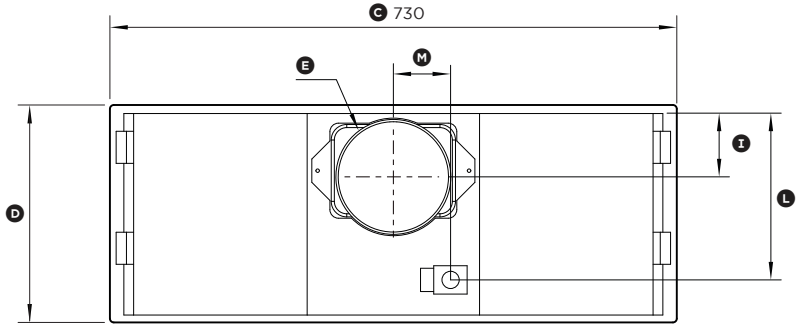


PLAN VIEW

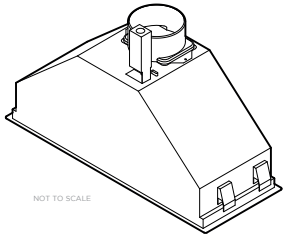


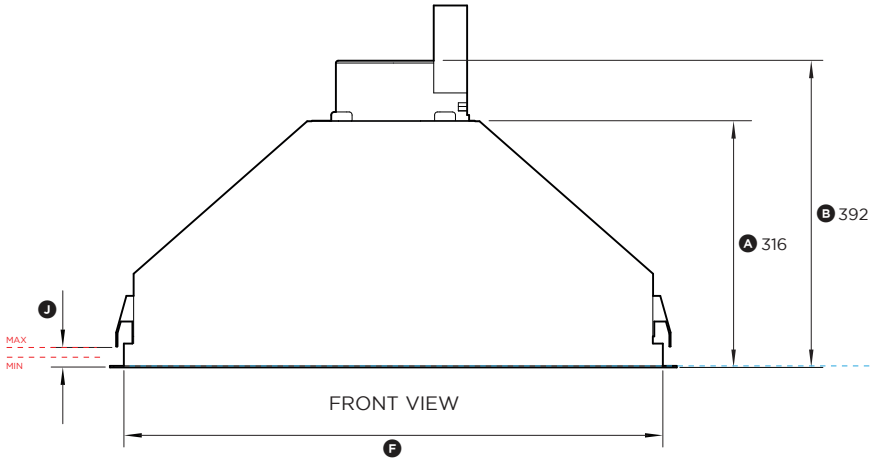

FRONT VIEW

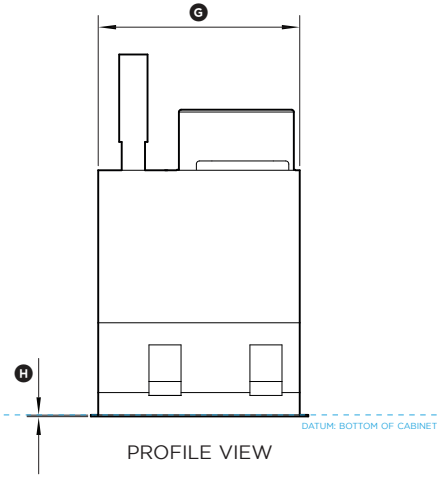

PROFILE VIEW

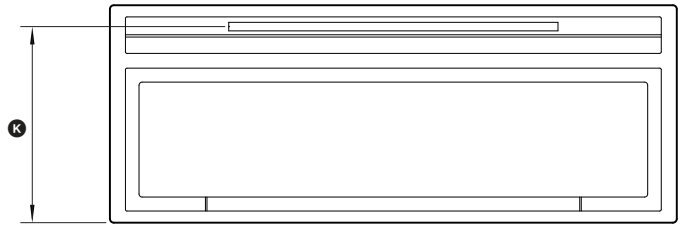

BOTTOM VIEW



FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30″

Model nos:
HP30IDCHX4
(refer page 1 for imperial measurements)

Product Dimensions	**mm**
Ⓐ Overall height of range hood without ducting adapter	316
Ⓑ Overall height of range hood with ducting adapter	392
Ⓒ Overall width of range hood	730
Ⓓ Overall depth of range hood (excl. cabinetry front panel)	280
Ⓔ Diameter of ducting adaptor	150
Ⓕ Width of range hood chassis	694
Ⓖ Depth of range hood chassis	258
Ⓗ Thickness of flange	2
Ⓘ Distance from ducting outlet center to rear of chassis	82
Ⓙ Height adjustability of clip that secures cooker hood (cabinet base panel thickness)	min 15 max 40
Ⓚ Distance from rear to center of light	253
Ⓛ Distance from back of chassis to hard wiring box	211
Ⓜ Distance from center of product to hard wiring box	73

Cavity Dimensions Standard Installation	**mm**
Width of cutout	700
Depth of cutout	260

Minimum distance above cooktops	**mm**
Minimum height from top of cooktop to base of product	610

Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.

Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.

INDICATES CUTOUT ----------
INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: 23.08.2023 90003054A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16″). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com