

# LG Product Installation



TWIN WASH™  
SYSTEM

Washer

Pedestal Washer



# LG Product Installation

## - Twin Wash (Pedestal Washer)

**DON'T** place product upside down



**DON'T** lay down on side wall

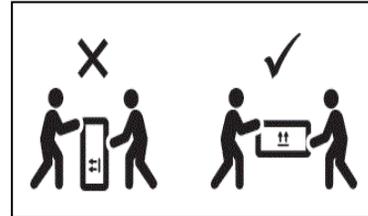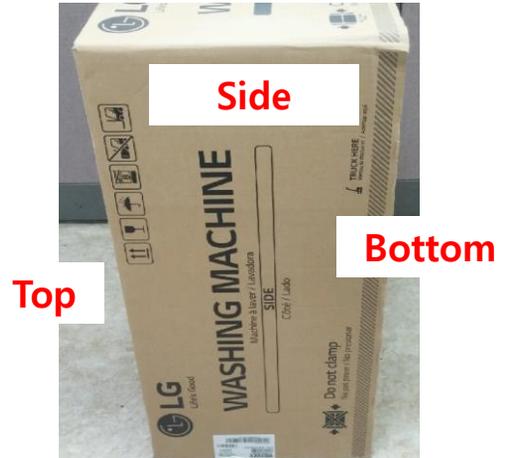


- Sliding door damage (some models)
- Inner Tub assembly damage



- Drawer damage
- Control panel damage

# LG Product Installation

## - Twin Wash (Pedestal Washer)

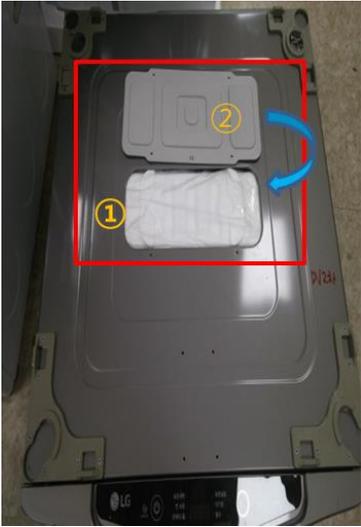


- ① Remove packing material (foam)
- ② Rotate cover 180° and secure with provided screws

→ Remove blue inner packing from Tub and discard

## To prevent scratches, PRIOR to installing the FLW:



→ Remove blue tape

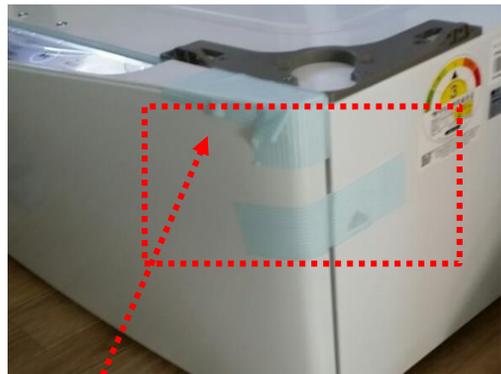

→ Adhere tape to the edges and drawer to prevent scratches or the drawer opening.

# LG Product Installation


## - Twin Wash (Pedestal Washer)- Installing the Front Load Washer




→ Using the wrench provided make sure the legs of the FLW are fully retracted and level prior to mounting



→ Align and set down the main washer to the holes at each corner of the unit.  
→ Make sure actuator of washer sits on correct position, depressing the contact on the Sidekick

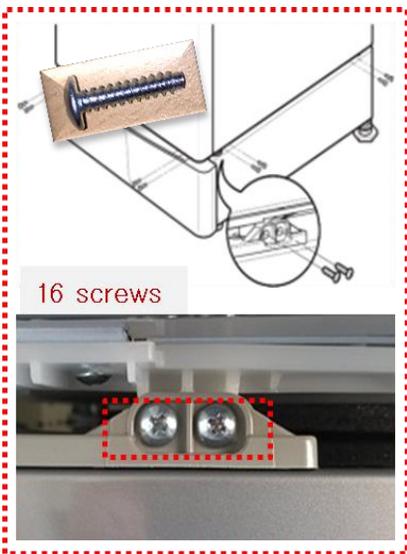

→ Secure FLW to Sidekick with 16 screws provided. Not using all screws can cause noise and vibration issues.

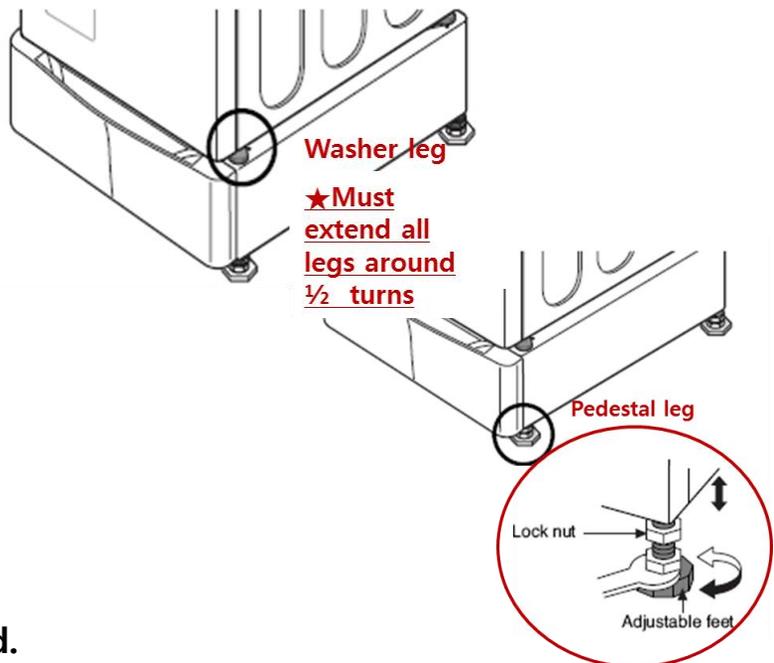

→ Adjust the legs of the flw and Sidekick.  
→ Then adjust the lock nuts toward the washer and pedestal

# LG Product Installation


## - Twin Wash (Pedestal Washer) – Water Hook Up



→ Remove film from lid



→ Attach 2 short hoses included in the Installation kit to the faucets.  
**Red** for Hot / **Blue** for Cold

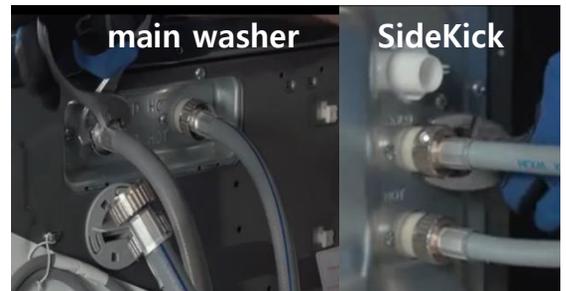


→ Connect the long hoses to the back of the main washer  
→ Then connect the other 2 hoses to the back of the SideKick



→ Connect main wash hoses to Y connector.  
→ Connect SideKick hoses to the other side of the Y connectors.  
→ Once all hoses connected make sure they are all tighten

# LG Product Installation

## - Twin Wash (Pedestal Washer)

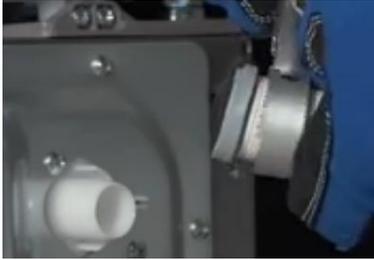

- Place wide clamp supplied with installation kit around end of Drain Hose.
- Connect drain hose to SideKick making sure it points up

- Connect drain hoses to Y drain hose connector. Use clamps provided to secure them.
- The end of the Y drain hose connector is then inserted in the stand pipe




- Secure hoses together with supplied tie straps



Failure to use the clamps could result in flooding in the hoses come loose from the Y-connector.

- Turn water on and check all connections.
- Place unit in final position.
- Level units

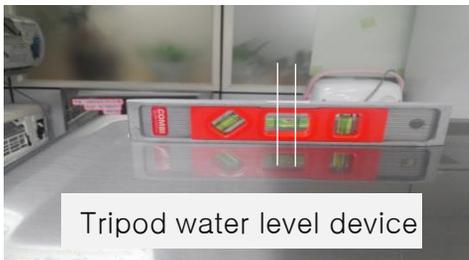

Tripod water level device

