



PLAN VIEW

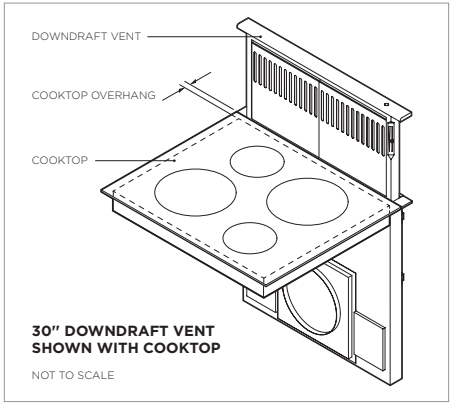

30″ DOWNDRAFT VENT SHOWN WITH COOKTOP

NOT TO SCALE

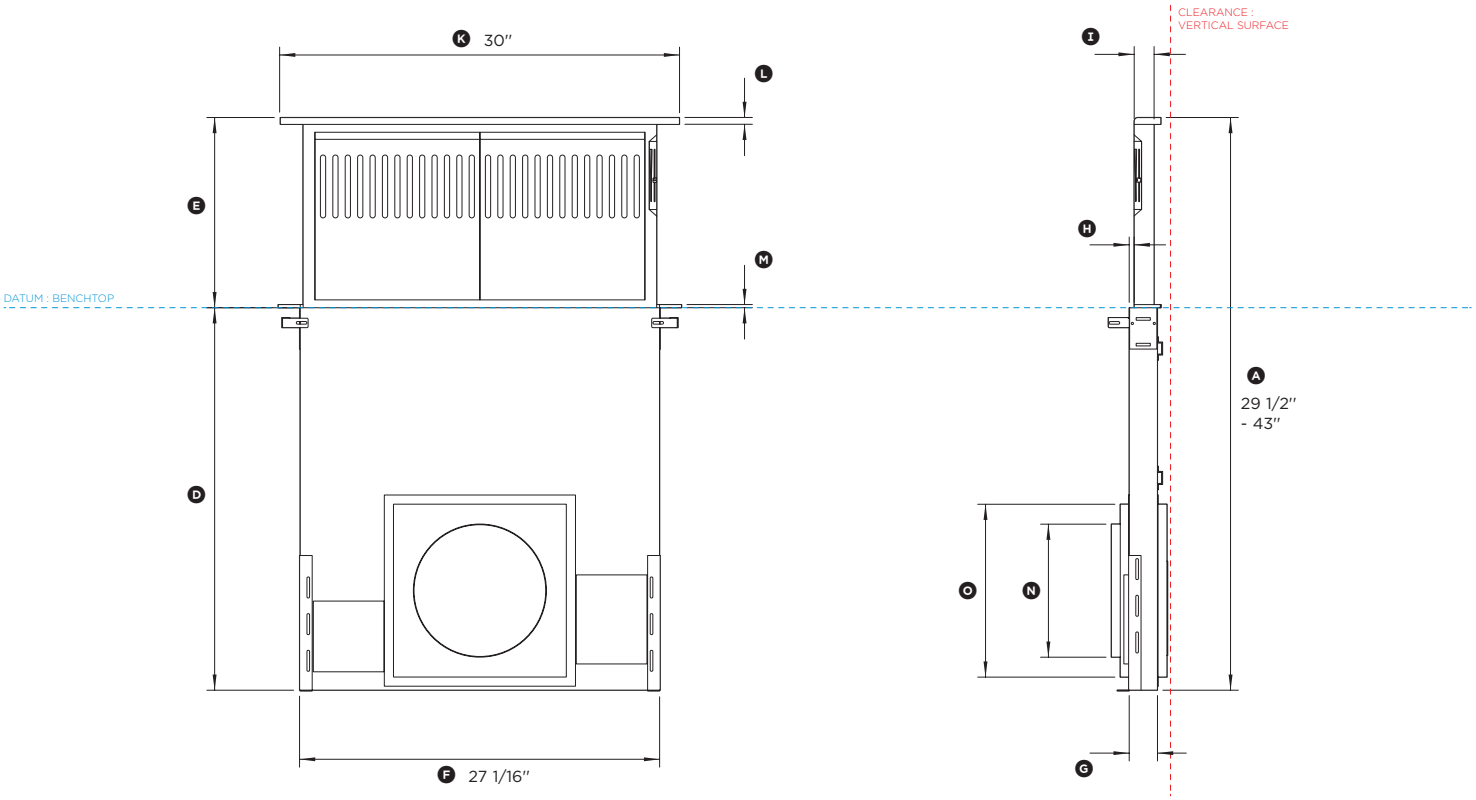

FRONT VIEW

PROFILE VIEW

0 5 10 20 inches

30″ DOWNDRAFT VENT SYSTEM

Model no:
HD30

(refer page 2 for metric measurements)

Dimensions	**in**
(A) Overall height of Downdraft (excluding mounting brackets)	29 1/2″ - 43″
(B) Overall width of Downdraft	30 3/8″
(C) Overall depth of Downdraft (excluding mounting brackets)	4 1/4″
(D) Height of chassis below benchtop (excluding mounting brackets)	28 3/4″
(E) Height above benchtop	3/4″ - 14 5/16″
(F) Width of chassis	27 1/16″
(G) Depth of chassis	2 1/8″
(H) Depth of ledge for cooktop overhang	3/8″
(I) Depth of projecting vent body	1 1/2″
(J) Depth of top trim	2″
(K) Width of top trim	30″
(L) Height of top trim	1/2″
(M) Height of end cap	1/4″
(N) Diameter of remote blower connection plate outlet	10″
(O) Height and width of blower connection plate box	13″

Cutout Dimensions	**in**
Width of cutout	27 1/2″
Depth of cutout from rear of cooktop overhang*	1 13/16″

* Please refer to cooktop installation manual for cooktop dimensions and cutout specifications.

Minimum Clearances	**in**
Minimum clearance to rear of cabinet or wall from cutout	min 1″

NOTE: Downdrafts require either an internal or external blower. Please refer to installation instructions for the blower options and their dimensions.


INDICATES CUTOUT
INDICATES CABINETRY DATUM
INDICATES CLEARANCES

DATE: **22.09.2016**


IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16″). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com


Fisher&Paykel

DATA SHEET

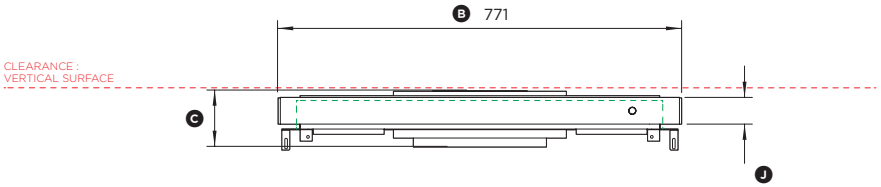


PLAN VIEW

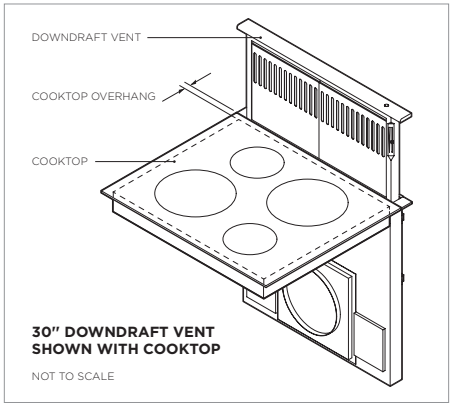

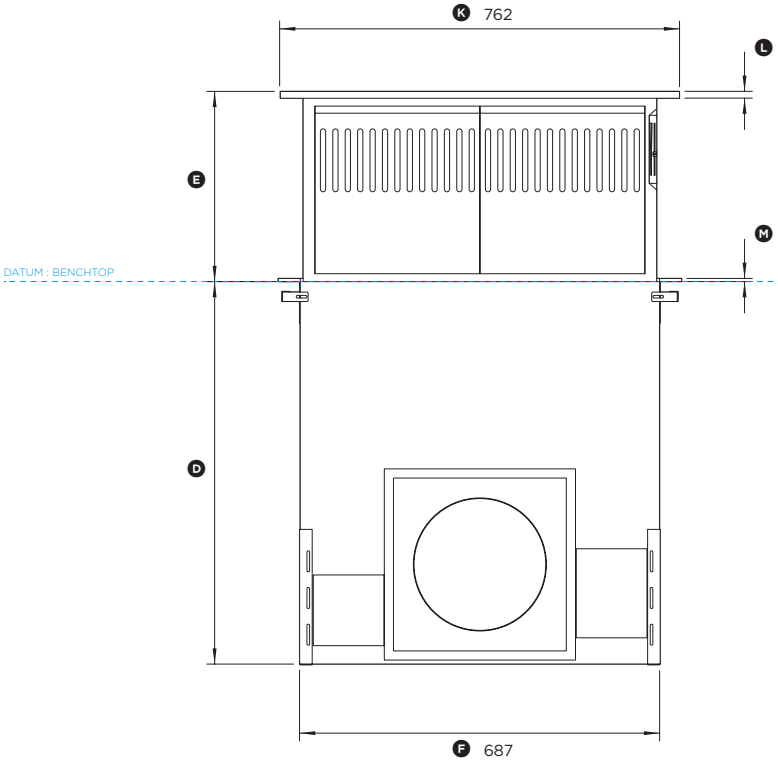

FRONT VIEW

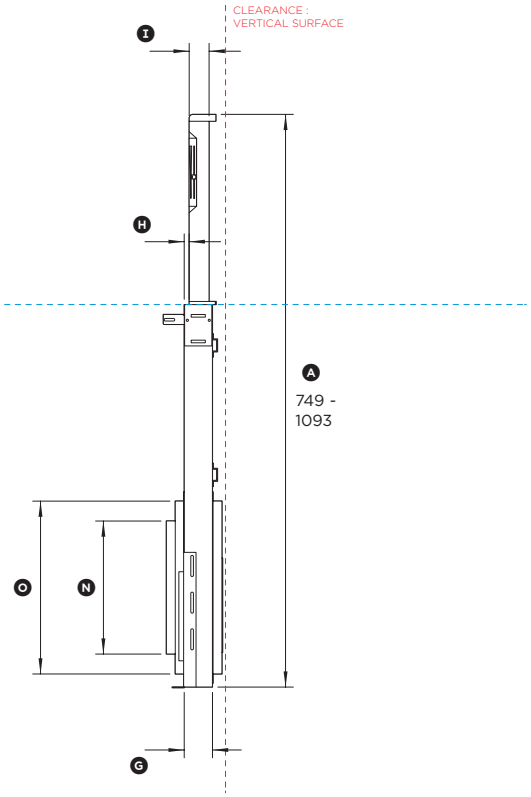

PROFILE VIEW

0 100 200 400
millimetres

30" DOWNDRAFT VENT SYSTEM

Model no:
HD30

(refer page 1 for imperial measurements)

Dimensions	**mm**
(A) Overall height of Downdraft (excluding mounting brackets)	749 - 1093
(B) Overall width of Downdraft	771
(C) Overall depth of Downdraft (excluding mounting brackets)	108
(D) Height of chassis below benchtop (excluding mounting brackets)	730
(E) Height above benchtop	19 - 363
(F) Width of chassis	687
(G) Depth of chassis	54
(H) Depth of ledge for cooktop overhang	9.5
(I) Depth of projecting vent body	38
(J) Depth of top trim	51
(K) Width of top trim	762
(L) Height of top trim	13
(M) Height of end cap	6
(N) Diameter of remote blower connection plate outlet	254
(O) Height and width of blower connection plate box	330

Cutout Dimensions	**mm**
Width of cutout	699
Depth of cutout from rear of cooktop overhang*	46

* Please refer to cooktop installation manual for cooktop dimensions and cutout specifications.

Minimum Clearances	**mm**
Minimum clearance to rear of cabinet or wall from cutout	min 25

NOTE: Downdrafts require either an internal or external blower. Please refer to installation instructions for the blower options and their dimensions.

INDICATES CUTOUT ----------
INDICATES CABINETRY DATUM ----------
INDICATES CLEARANCES ----------

DATE: **22.09.2016**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

Fisher&Paykel