

FISHER & PAYKEL

DATA SHEET
Warmer Drawer, 24" - Contemporary style


Model no:
WB24SDEX2
(refer page 2 for metric measurements)

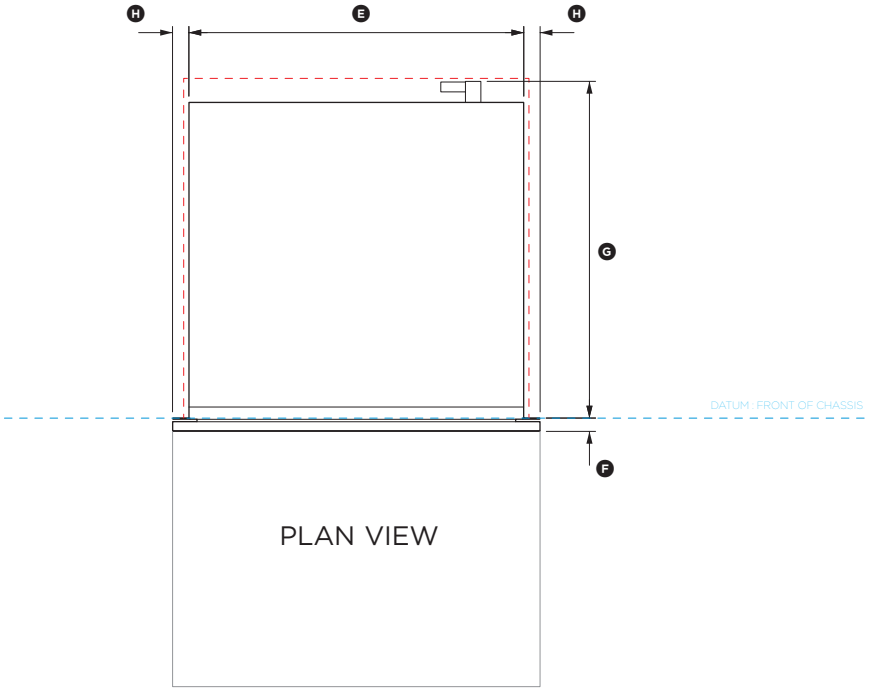

PLAN VIEW

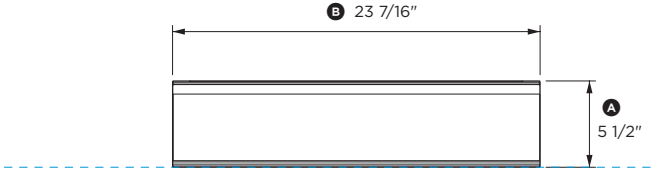


FRONT VIEW

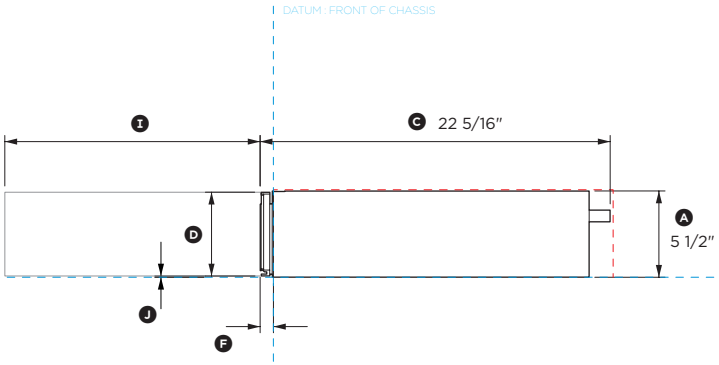

PROFILE VIEW

Product Dimensions	in
Ⓐ Overall height of warmer drawer	5 1/2"
Ⓑ Overall width of warmer drawer	23 7/16"
Ⓒ Overall depth of drawer (includes front panel & power plug, excludes stainless cap)	22 5/16"
Ⓓ Height of drawer front panel	5 3/8"
Ⓔ Width of chassis	21 3/8"
Ⓕ Depth of drawer front panel and flange (excludes stainless cap)	13/16"
Ⓖ Depth of chassis (includes power plug, excludes flange)	21 9/16"
Ⓗ Distance from side of chassis to side of drawer front	1 1/16"
Ⓘ Depth of open drawer (measured from front of drawer panel)	16 5/16"
Ⓙ Height from bottom of chassis to bottom of front panel	1/16"

Clearance Dimensions	in
Minimum inside height of cavity	5 9/16"
Minimum inside width of cavity	22 1/16"
Minimum inside depth of cavity	21 5/8"
Overall width of cabinetry	23 5/8"
Minimum clearance between top of front panel and upper cabinetry panel	1/8"
Minimum clearance between bottom of front panel and lower cabinetry panel	1/16"



INDICATES CABINETRY / PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------


DATE: **06.04.2021**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com


FISHER & PAYKEL

DATA SHEET
Warmer Drawer, 24" - Contemporary style


Model no:
WB24SDEX2
(refer page 1 for imperial measurements)

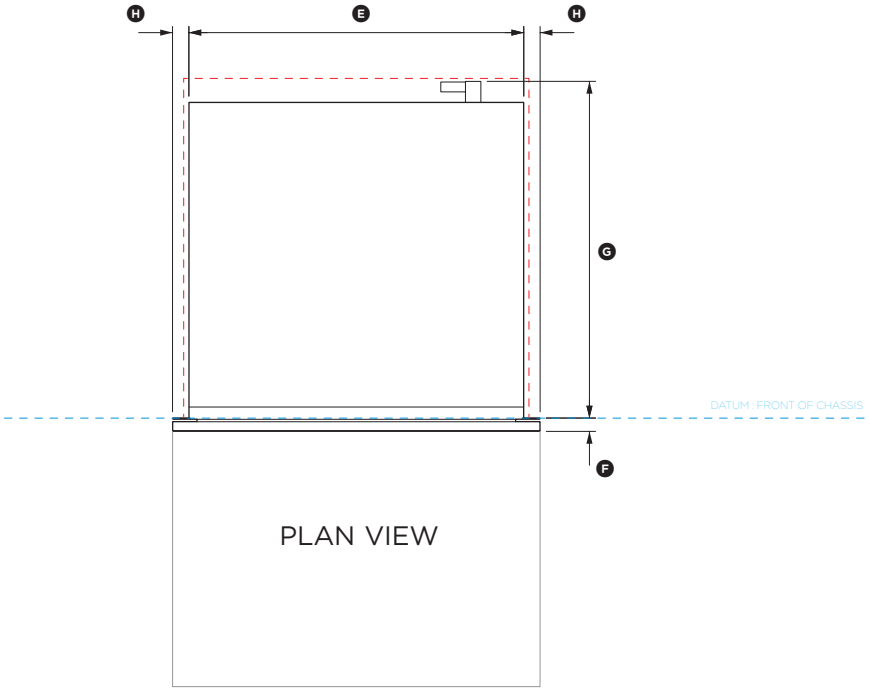

PLAN VIEW

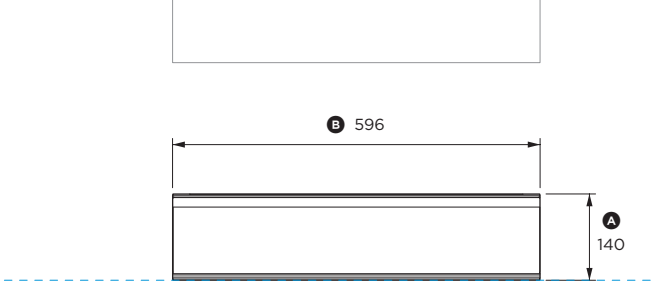


FRONT VIEW

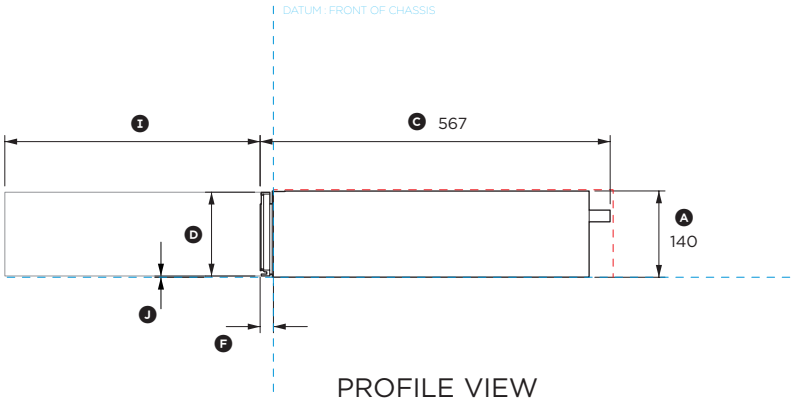

PROFILE VIEW

Product Dimensions	**mm**
Ⓐ Overall height of warmer drawer	140
Ⓑ Overall width of warmer drawer	596
Ⓒ Overall depth of drawer (incl. front panel & power plug, excludes stainless cap)	567
Ⓓ Height of drawer front panel	136
Ⓔ Width of chassis	543
Ⓕ Depth of drawer front panel and flange (excludes stainless cap)	20
Ⓖ Depth of chassis (incl. power plug)	547
Ⓗ Distance from side of chassis to side of drawer front	26.5
Ⓘ Depth of open drawer (measured from front of drawer panel)	414
Ⓙ Height from bottom of chassis to bottom of front panel	2

Clearance Dimensions	**mm**
Minimum inside height of cavity	142
Minimum inside width of cavity	560
Minimum inside depth of cavity	550
Overall width of cabinetry	600
Minimum clearance between top of front panel and upper cabinetry panel	3
Minimum clearance between bottom of front panel and lower cabinetry panel	2



INDICATES CABINETRY / PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: **06.04.2021**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com