

LF26WCH5HS

26 cu. ft. Counter Depth MAX™ Refrigerator with Craft Ice™

- 26 cu. ft. Large Capacity
- Craft Ice™
- External Ice & Water Dispenser
- New Hybrid Handle Design
- Ice Plus
- Fresh Air Filter
- Smart Inverter Compressor
- ThinQ®

AVAILABLE COLORS



PRINTPROOF™ STAINLESS STEEL





Proactive Smart Alerts to Keep Your Appliances Running Smoothly

- Preventative Alerts help you stay a step ahead of potential issues to find proactive solutions before problems arise.
- Avoid preventable repairs and service calls with real-time diagnostics for a hassle-free experience.
- Integrated within LG's ThinQ app—a smart home hub for managing your smart devices and appliances.

ThinQ Care



SUMMARY		REFRIGERATOR DOOR		DIMENSIONS/CLEARANCES/WEIGHTS	
Refrigerator (cu.ft.)	16.9	No. of Door Bins	4 Left, 4 Right	Total (WxHxD)	35 3/4" x 70 1/4" x 31 5/8"
Freezer (cu.ft.)	8.6	Door Shape	Flat	Width	35 3/4"
Total Capacity (cu.ft.)	25.5	Handle Type	Bar	Height (Top of Hinge or Door cap Décor)	70 1/4"
ENERGY		COOLING		Depth (with Handle)	31 5/8"
ENERGY STAR® Certified	Yes	Compressor Type	Smart Inverter Compressor	Width (Door Open 90° without Handle)	40"
Energy Consumption (kWh/Year)	699	Refrigerant	R600a / 78g / 2.75oz	Case Edge Clearance (Door Fully Open)	21" (R) 9 5/8" (L) 11 3/8"
Evaporator	1	Multi Air Flow Cooling	Yes	Width (Door Open 90° with Handle)	44 7/8"
ICE & WATER SYSTEM		Door Cooling	Yes	Width (Door Fully Open without Handle)	56 3/4"
Dispenser	N/A	Temperature Sensors	2	Door Edge Clearance with Handle	4 1/4"
No. In-door Ice Maker	1	FREEZER		Door Edge Clearance without Handle	2 1/4"
In-door Ice Maker Ice Type	Cubed/ Crushed	Door Type	Pull Drawer	Height to Top of Case	68 7/8"
In-door Ice Maker Daily Ice Production	3.0 / 3.3 (Ice Plus) lbs.	Handle Type	Pocket Handle	Height (Floor to Top of Freezer Door)	27 7/8"
In-door Ice Maker Storage Capacity	3.0 lbs	Drawers / Shelves	2-Tier Organization	Depth without Door	24 3/4"
No. Freezer Ice Maker	1	Drawer Divider	No	Depth without Handles	29 1/8"
Freezer Ice Maker Ice Type	Craft Ice	Freezer Light	LED Lighting	Depth (to Hinge Cover)	18 1/4"
Freezer Ice Maker Daily Production	0.7 lbs	DISPLAY		Depth (Total with Door Open)	43 5/8"
Freezer Ice Maker Storage Capacity	4.0 lbs	Display Type	Smooth Touch Control/ White LED	Depth (Draw Open Fully without Handle)	48 7/8"
Ice Plus	Yes	Temperature Control	Electronic/ Digital	Installation Clearance	Sides 1/8", Top 1", Back 2"
Filtration System	1 Stage	Door Alarm	Yes	Carton Dimensions (WxHxD)	38" x 72" x 31"
Filter	LT1000P	Child Lock	Yes	Weight (Unit/Carton)	291 lb / 313 lb
REFRIGERATOR		Smart Diagnosis	Yes	LIMITED WARRANTY	
No. of Shelves	4 Split (4 Fixed)	Auto Closing Door Hinge	No	Parts & Labor	1 Year
Shelf Construction	Spill Protector Tempered Glass	Wi-Fi Enabled	Yes	Sealed System (Parts & Labor)	5 Years
Shelf Trim	White décor	ThinQ®	Yes	Compressor (Parts & Labor)	5 Years
No. of Crisper Bins	2	ThinQ® Care (Proactive Customer Care)	Yes	Inverter Compressor (Parts only)	6-10 Years
Pantry (Glide N Serve)	Yes (Normal)	MATERIALS & FINISH		UPC CODES	
Cool Guard	No	Hidden Hinges	Yes	LF26WCH5HS	048231350679
Duct (Air Filter)		Toe Grill	No		
[Fresh Air Filter, Multi Air Flow]	Fresh Air Flow	All Available Colors	PrintProof™ Stainless Steel		
Light	Yes	Insulation	Low GWP and Zero ODP Blowing Agent		
Light (Back Lit Lighting)	No				
Backwall [Metallic Décor, White Decor, LED Backwall]	Metallic Décor				

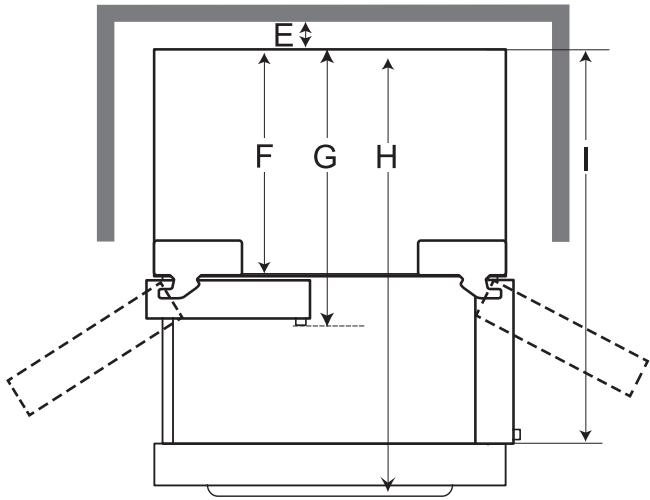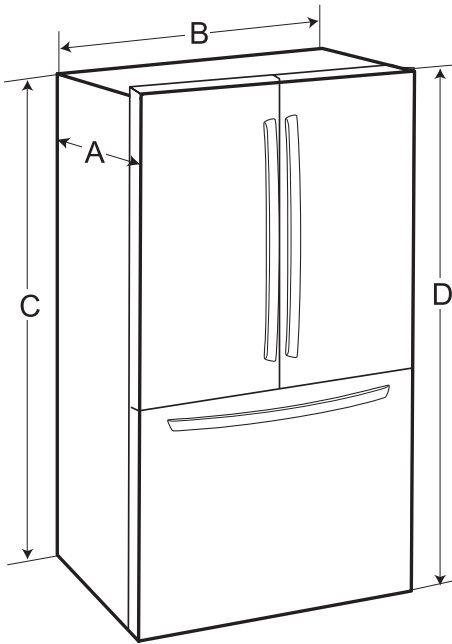

DIMENSION / CLEARANCES

- Check the dimensions of the appliance and the installation path to ensure there is sufficient room to move the refrigerator through doors or narrow openings.
- If an opening is too narrow to fit the refrigerator through, remove the refrigerator doors. See Removing/ Assembling the Doors and Drawers in this manual.
- The installation location chosen for the refrigerator should allow space behind the unit for connections and airflow and space in front to open the doors and drawers.
- Too small of a distance from adjacent items may result in lowered freezing capability and increased electricity consumption charges. Allow at least 24 inches (610 mm) in front of the refrigerator to open the doors, and at least 2 inches (50.8 mm) between the back of the refrigerator and the wall.

DIMENSIONS		
A	Depth without Handle	29 1/8" (739 mm)
B	Width	35 3/4" (908 mm)
C	Height to Top of Case	68 7/8" (1750 mm)
D	Height to Top of Hinge	70 1/4" (1785 mm)
E	Back Clearance	2" (50 mm)
F	Depth without Door	24 3/4" (628 mm)
G	Depth with Handle	31 5/8" (802 mm)
H	Depth (Total with Freezer Drawer Open)	48 7/8" (1239 mm)
I	Depth (Total with Door Open 90°)	43 5/8" (1106 mm)

LEVELING THE REFRIGERATOR

The refrigerator has two front leveling legs. Adjust the legs to alter the tilt from front-to-back or side to side. If the refrigerator seems unsteady or the doors do not close easily, adjust the refrigerator's tilt, using the instructions below:

1. Turn the leveling leg to the left to raise that side of the refrigerator or to the right to lower it. It may take several turns of the leveling leg to adjust the tilt of the refrigerator.
2. Open both doors, and check to make sure that they close easily. If the doors do not close easily, tilt the refrigerator slightly more to the rear by turning both leveling legs to the left. It may take several more turns, and be sure to turn both leveling legs the same amount.

NOTE

- A flare nut wrench works best, but an open-end wrench will suffice. Do not over-tighten.

