FISHER & PAYKEL

DATA SHEET
Combination Steam Oven, 24", 23 Function

Model no:
OS24SDTDX2
(refer page 2 for metric measurements)

Product Dimensions	in
Ⓐ Overall height of oven	23 9/16"
Ⓑ Overall width of oven	23 7/16"
Ⓒ Depth of front frame (excludes dial, handle and front stainless trim)	13/16"
Ⓓ Depth of oven chassis and front frame (excludes dial, handle and front stainless trim)	22 1/4"
Ⓔ Depth of chassis	21 7/16"
Ⓕ Height of chassis	22 5/8"
Ⓖ Width of chassis	21 7/8"
Ⓗ Height from bottom datum to top of oven door	19 13/16"
Ⓘ Height from bottom datum to bottom of door	1/2"
Ⓙ Height of control panel	3 15/16"
Ⓚ Height of stainless steel cap on control panel	13/16"
Ⓛ Height from bottom datum to centerline of handle	18 1/4"
Ⓜ Width of handle	22 1/4"
Ⓝ Depth of handle (measured from front of door)	1 5/8"
Ⓞ Thickness of handle	5/8"
Ⓟ Depth of door when open (measured from front of door)	18 1/8"
Ⓠ Control panel fully open (measured from front of door)	6 11/16"
Ⓡ Control panel half open (measured from front of chassis)	3 5/16"
Ⓢ Water tank carriage fully open	5 1/4"


Minimum Clearances	in
Minimum inside height of cavity	22 13/16"
Minimum inside width of cavity	22 1/6"
Minimum inside depth of cavity	21 5/8"

IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.


INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------


DATE: 22.01.2024 90002716A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

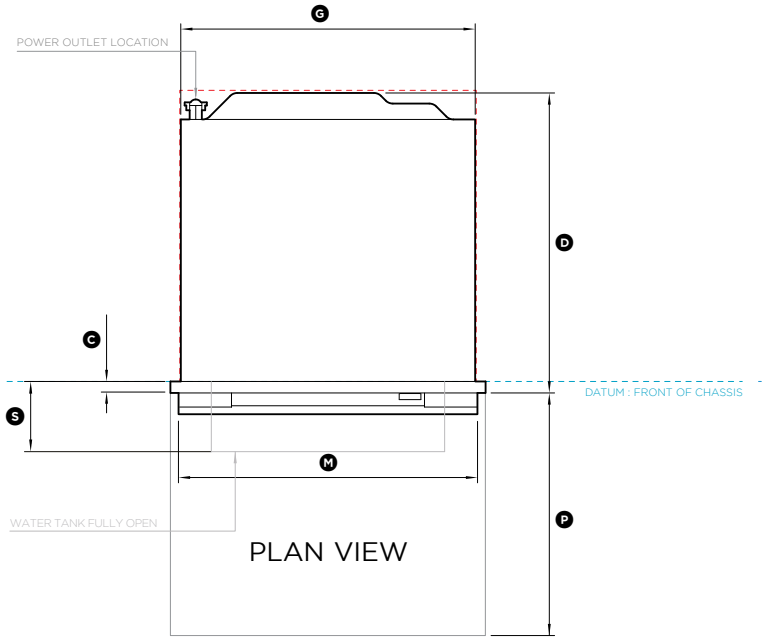


PLAN VIEW

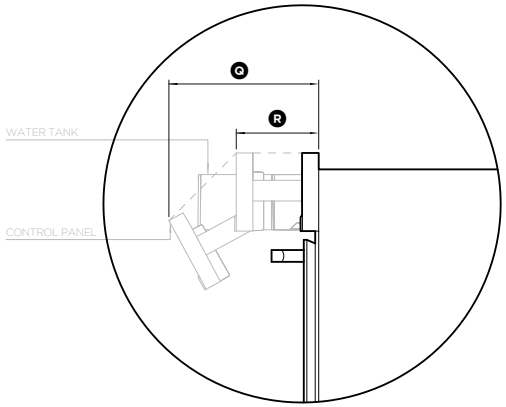


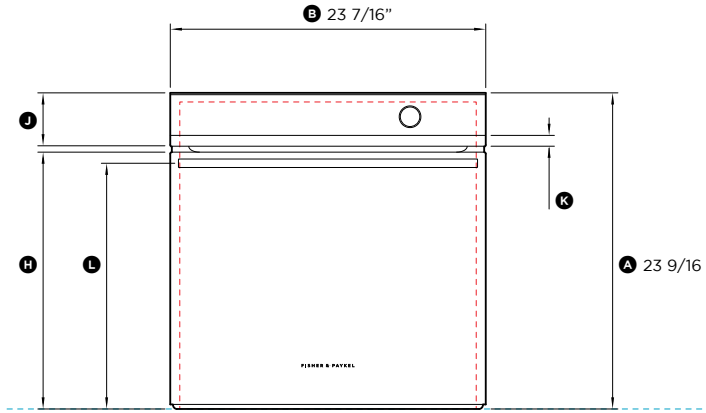


FRONT VIEW

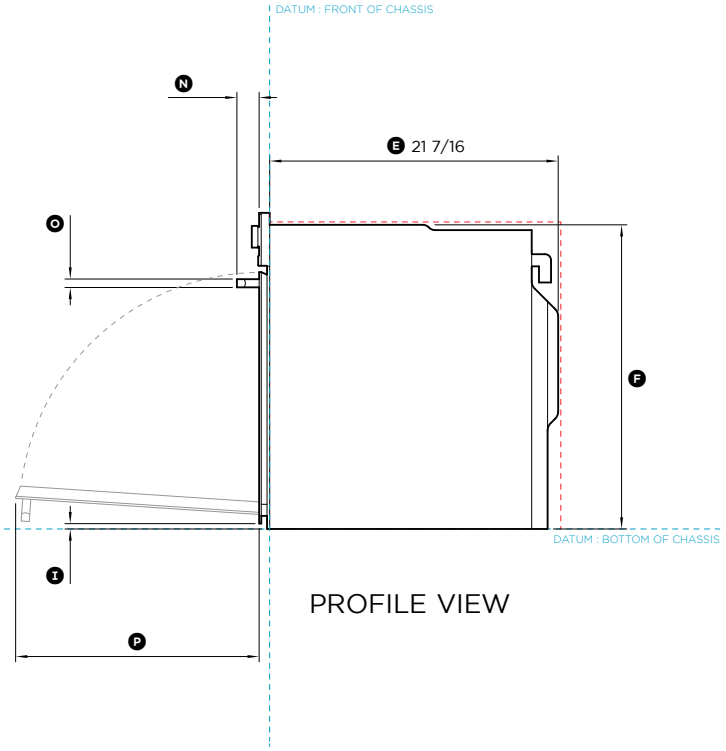



PROFILE VIEW



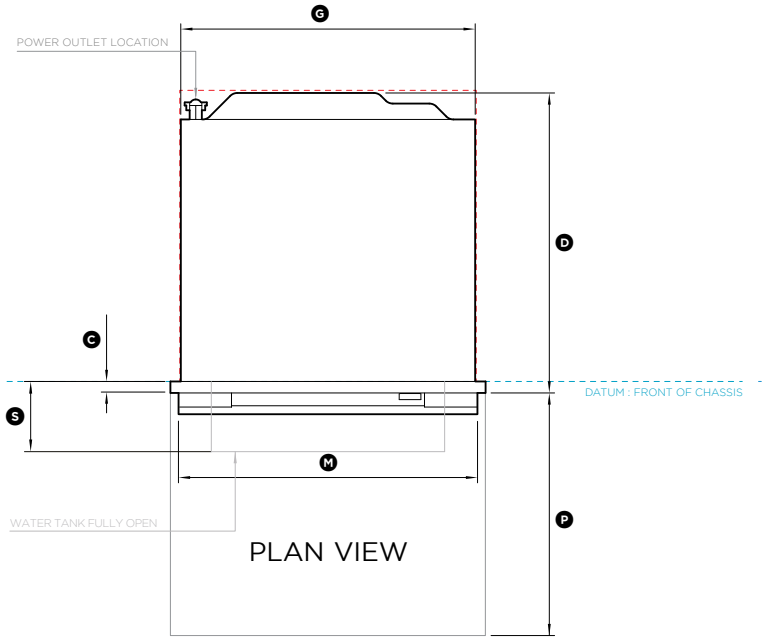


PLAN VIEW

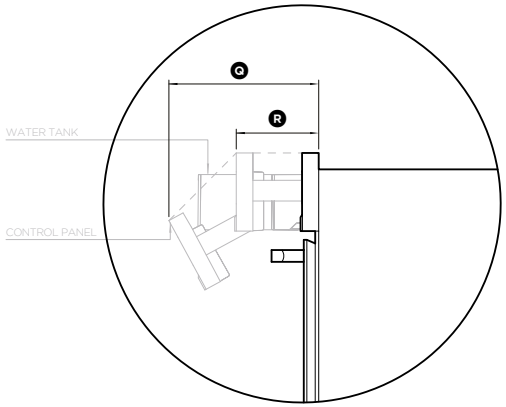


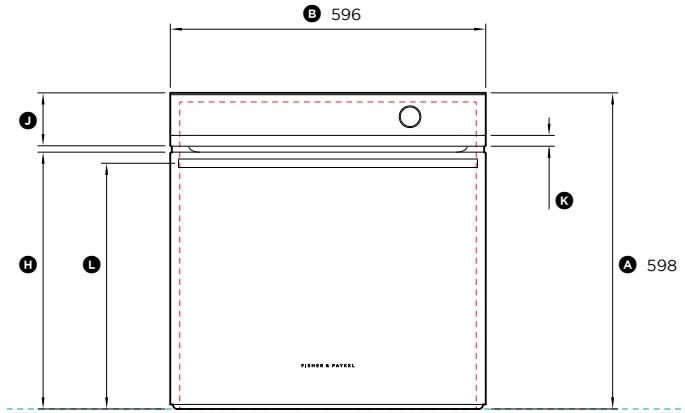

FRONT VIEW

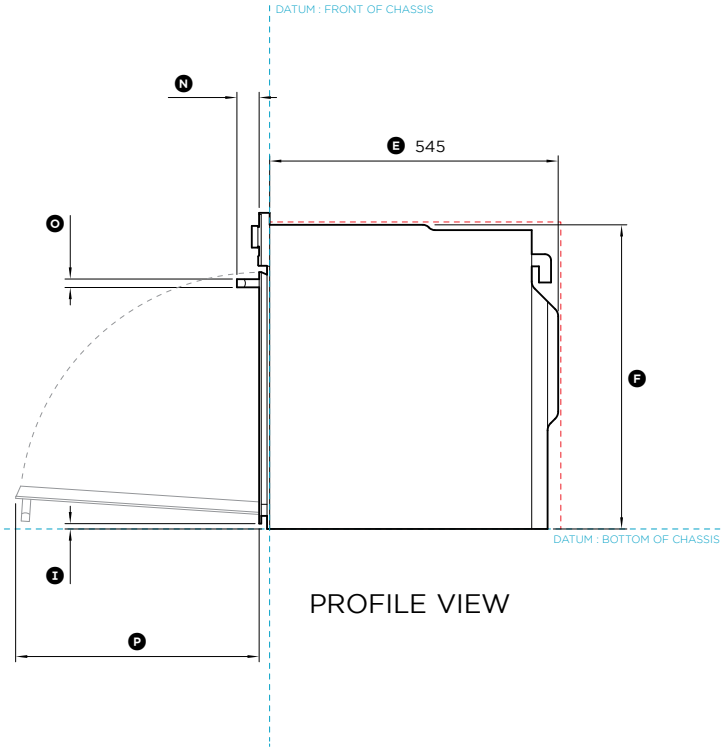

PROFILE VIEW



FISHER & PAYKEL

DATA SHEET
Combination Steam Oven, 24", 23 Function

Model no:
OS24SDTDX2
(refer page 1 for imperial measurements)

Product Dimensions	**mm**
(A) Overall height of oven	598
(B) Overall width of oven	596
(C) Depth of front frame (excludes dial, handle and front stainless trim)	20
(D) Depth of oven chassis and front frame (excludes dial, handle and front stainless trim)	565
(E) Depth of chassis	545
(F) Height of chassis	575
(G) Width of chassis	556
(H) Height from bottom datum to top of oven door	487
(I) Height from bottom datum to bottom of door	12
(J) Height of control panel	100
(K) Height of stainless steel cap on control panel	20
(L) Height from bottom datum to centerline of handle	464
(M) Width of handle	565
(N) Depth of handle (measured from front of door)	42
(O) Thickness of handle	16
(P) Depth of door when open (measured from front of door)	460
(Q) Control panel fully open (measured from front of door)	170
(R) Control panel half open (measured from front of chassis)	84
(S) Water tank carriage fully open	133

Minimum Clearances	**mm**
Minimum inside height of cavity	580
Minimum inside width of cavity	560
Minimum inside depth of cavity	550

IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.

INDICATES PRODUCT DATUM ----------
INDICATES CABINETRY CLEARANCES ----------

DATE: 22.01.2024 90002716A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com