



Installation Guide

Quality, Design and Innovation





home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Cor	ntents	
1	General safety instructions	2
2 2.1 2.2	Setup conditions	3 3 4
3	Appliance dimensions	4
4	Recess dimensions	4
5 5.1 5.2 5.3 5.4 5.5	Cabinet front	5 5 5 5 6
6	Transporting the appliance	6
7	Unpacking the appliance	6
8	After setup	6
9	Disposal of packaging	7
10	Changing the door hinge with bearing bracket hinge	7
10.1 10.2 10.3 10.4 10.5 10.6 10.7 10.8 10.9 10.10 10.11 10.12 10.13 10.14	Safety instructions	7 7 7 8 8 9 10 10 11 11 12 12 13
11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11	hinge (suitable for decoration) Safety instructions	13 13 14 14 15 15 16 16 17 17 18
	bracket hinge	18
13 14	Aligning the door hinge with multi-joint hinge (not suitable for decoration) Recessed installation	19 19
14.1	Tool	19

16	Connecting the appliance to the power supply	24
15	Installing the unit door	22
	Fastening the appliance in the recess	
14.5 14.6	Leveling out the applianceInstalling the base	21
14.4		
	Fastening the appliance to the ceiling	
	Preparing the appliance	

The manufacturer is constantly working to improve all types and models. Therefore, please be aware that we reserve the right to make changes to the shape, equipment and technology.

ment and technology.				
Symbol	Explanation			
	Read instructions Please read the information in these instructions carefully to understand all of the benefits of your new appliance.			
	Additional information online The digital manual with supplemental information can be found online by scanning the QR code on the front page of this manual or by entering the service number at home.liebherr.com/fridge-manuals.			
	Check appliance Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.			
*	Differences These instructions apply to a range of models, so there may be differences. Sections that apply to certain models only are indicated by an asterisk (*).			
	Instructions and results Instructions are marked with a ▶. Results are marked with a ▷.			
	Videos Videos about the appliances are available on the YouTube channel of Liebherr-Hausg-			

Open-source licenses:


eräte.

The appliance includes software components that make use of open-source licenses. You can find information on the open-source licenses to be used here: home.liebherr.com/open-source-licenses

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.

- If you pass the appliance on, please hand this assembly manual to the new owner.
- Read this assembly manual before installation and use in order to use the appliance safely and correctly. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the operating instructions, which accompany these installation instructions, and follow them. If you cannot find the operating instructions, you can download the operating instructions from the internet by entering the service number at home.liebherr.com/fridge-manuals. The service number can be found on the serial

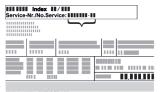

tag:

 Observe the warning messages and other detailed information in the other sections when installing the appliance:

\triangle	DANGER	indicates a hazardous situation, which if not avoided, will result in death or serious injury.
\triangle	WARNING	indicates a hazardous situation, which if not avoided, could result in death or serious injury.
<u> </u>	CAUTION	indicates a hazardous situation, which if not avoided, will result in minor or moderate injury.
	NOTICE	indicates a hazardous situation, which if not avoided, could result in damage to property.
	Note	indicates useful advice and tips.

2 Setup conditions



WARNING

Risk of fire due to moisture!

If live parts or the power cord get wet, this can cause a short circuit.

► The appliance is designed for use in enclosed spaces. Do not operate the appliance in open space or in damp areas or where there is spray.

2.1 Setup location



WARNING

Leaking refrigerant and oil!

Fire. The refrigerant contained within the appliance is environmentally friendly, but flammable. The oil contained within the appliance is flammable. Escaping refrigerant and oil can ignite if they are of high enough concentration and are exposed to an external heat source.

- ▶ Do not damage the pipelines of the coolant circuit and the compressor.
- Do not setup the appliance in direct sunlight, next to an oven, radiator or similar.
- The best place to set up the appliance is a dry and well ventilated room.
- If the appliance is set up in a very humid environment, condensation can form on the outside of the appliance.
 - Always ensure sufficient airflow and ventilation in the setup location.
- The more refrigerant there is in the appliance, the larger the space it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g (0.28 oz) of refrigerant, the installation space must be at least 1 m³ (35.5 ft³). Specifications on the refrigerant in the appliance can be found on the serial tag plate inside the appliance.
- The floor of the setup location must be horizontal and even.
- The setup location must be able to withstand the weight of the appliance plus the weight when stocked to maximum capacity.
- Use in hazardous areas is not permitted.
- If the appliance is installed in a cooking island, appliances with an integrated exhaust air system can damage the appliance. Make sure you either have a separate air duct or otherwise install a partition wall between the appliances.

Appliance dimensions

2.2 Electrical connection



WARNING

Danger of fire due to incorrect positioning!

- ► Make sure the power supply cable is not trapped under the appliance when you position the appliance.
- ► Position the appliance so that it does not touch the plug or power supply cable.
- ▶ Do not connect any appliances to sockets in the area to the back of the appliance.
- ▶ Do **not** place and operate power strips/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

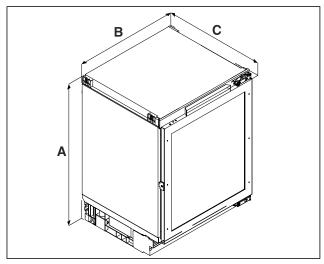


Fig. 1 Example illustration

- (A) Appliance height including feet
- (C) Appliance depth
- (B) Appliance width

	UW36 ^{A)}	UW37 ^{A]}		
Α	819 mm (32 1/4 in)	859 mm (33 7/8 in)		
В	597 mm (23 1/2 in)			
С	564 mm (22 3/16 in)		

A) Appliance type designation

4 Recess dimensions

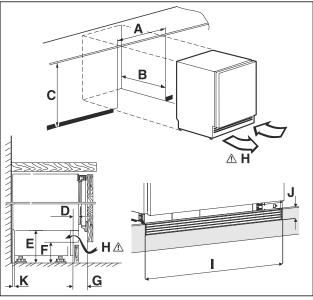


Fig. 2 Example illustration: UW..pr

- (A) Recess width
- (B) Recess depth
- (C) Recess height
- (H) Ventilation crosssection

A	600 mm (23 1/2 in)				
В	at least 565 mm (22 1/4 in)			
С	UW 36: ^{A)} UW 37: ^{A)}				
	820 mm (32 5/16 in) to 860 mm (33 7/8 in) to 880 mm (34 5/8 in) 920 mm (36 1/4 in)				
D	11 mm (7/16 in) to 66 mm (2 5/8 in)				
Ε	100 mm (3 15/16 in) to 160 mm (6 5/16 in)				
F	60 mm (2 3/8 in) to 120 mm (4 3/4 in)				
G	45 mm (1 6/8 in) to 100 mm (3 15/16 in)				
Н	150 cm² (24 in²)				
I	600 mm (23 1/2 in)				
J	40 mm (1 9/16 in)				
K	35 mm (1 3/8 in)				

A) Appliance type designation

5 Cabinet front

5.1 Weight of cabinet front

NOTICE

Risk of damage from a heavy unit door!

If the cabinet door is too heavy, damage to the hinges cannot be ruled out with functionality impairments as a result.

▶ Before installing the cabinet door, ensure that the cabinet door does not exceed the permissible weight.

Recess height	Maximum weight of unit door			
36 ^{A)}	10 kg (22.05 lb)			
37 ^{A)}	10 kg (22.05 lb)			

A) Appliance type designation

5.2 Cabinet door

- A door is needed for the kitchen cabinets.
- The door must have a minimum thickness of 16 mm (5/8 in) and a maximum thickness of 19 mm (3/4 in).
- There must be a minimum gap of 3 mm (1/8 in) between the door and the cabinet door above the appliance (if available).
- The width of the cabinet door depends on the style of the kitchen and the size of the gap between the cabinet's door panels. Generally, there should be a vertical gap between the cabinet doors of 3 mm (1/8 in).
- If there are other cabinets, the upper edge of the cabinet door should be at the same height as the doors of the adjacent cabinets.
- The cabinet door must be flush and mounted with no tension.

NOTICE

Risk of damage from a heavy cabinet door!

If the cabinet door is too heavy, damage to the hinges cannot be ruled out with functionality impairments as a result.

▶ Before installing the cabinet door, ensure that the cabinet door does not exceed the permissible weight.

5.3 Cabinet front dimensions

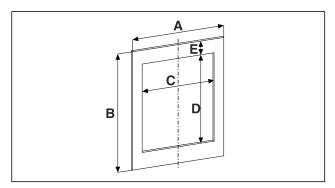


Fig. 3

Recess height	36	37		
A	595 mm (23 7/16 in)			
В	717 mm (28 1/4 in) 776 mm (30 9/16 in)			
С	458 mm (18 in)			
D	524 mm (20 5/8 in)	568.5 mm (22 3/8 in)		
E	96.5 mm (3 13/16 in)			

For appliances without a glass door, values C, D, and E do not apply.

5.4 Profile frame dimensions

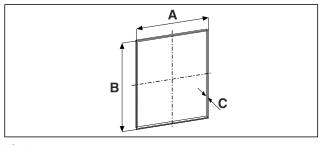


Fig. 4

Recess height	36	37		
Α	458 mm (18 in)			
В	524 mm (20 5/8 in) 568.5 mm (22 3/8 in			
С	For a panel thickness of 19 mm (3/4 in):			
	21 mm (13/16 in)			

A) Appliance type designation

A = internal dimension for cutout in cabinet front profile frame installation

B = internal dimension for cutout in cabinet front profile frame installation

C = profile frame thickness

A) Appliance type designation

Transporting the appliance

5.5 Adjusting the gap dimension without collision

After you have installed the cabinet front(s), you must check to ensure that the cabinet fronts cannot collide.

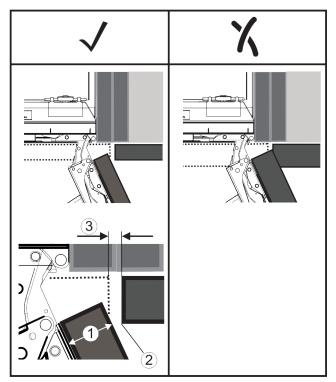


Fig. 5

- (1) Front thickness (FD)
- (3) Gap dimension (S)
- (2) Edge radius (R)

	R (2)	= 0 in	R = 1	R = 1/16 in R =		R = 5/64 in		l/8 in
FD (1) (in)	Gmin	Gmax	Gmin	Gmax	Gmin	Gmax	Gmin	Gmax
5/8	0	1/16	0	0	0	0	0	0
3/4	0	1/8	0	1/16	0	1/8	0	1/16
13/16	1/8	3/16	1/16	1/8	1/16	1/8	1/16	1/8
7/8	1/8	1/4	1/8	1/4	1/8	3/16	1/16	3/16
15/16	1/4	5/16	3/16	5/16	3/16	5/16	3/16	1/4
1	5/16	7/16	1/4	3/8	1/8	3/8	1/4	3/8

Fig. 6 Table gap dimension threshold

 G_{min} = lower threshold of the gap dimension in inches G_{max} = upper threshold of the gap dimension in inches

Note

When making corrections, make sure that the cabinet front matches the general appearance of the front.

Check the collision properties and correct accordingly:

- ▶ Determine the front thickness and edge radius.
- ▶ In the table Fig. 6 (), read the threshold for the gap dimension.
- ► Compare the gap dimension with the values in the table
- ▶ Perform one of the following action steps depending on the calculated gap dimension.

Gap dimen- sion	Description
S > G _{max}	If the gap dimension is larger than the two thresholds, no correction is necessary.
S < G _{min}	If the gap dimension is below than the thresholds, you must increase the gap dimension. Another option is to increase the edge radius.
$G_{\min} \le S \le G_{\max}$	If the gap dimension is between the two thresholds, ensure that your work is accurate. Collisions can quickly occur in such cases.

6 Transporting the appliance

Observe the following when transporting the appliance:

- Transport the appliance upright.
- ▶ Use two people when transporting the appliance.

During the first use:

► Transport the appliance packaged.

During appliance transport or at first use (e.g. when moving or cleaning):

- ► Empty the appliance.
- Secure the door against undesired opening.

7 Unpacking the appliance

NOTICE

Risk of damage for the finished floor surface!

► Protect the finished floor surface before you uncrate the unit.

If the appliance is damaged check with the supplier immediately before connecting it.

- ► Check the appliance and packaging for damage during transport. If you suspect any damage, please contact your supplier immediately.
- ► Remove all materials that could prevent it from being installed properly or prevent proper ventilation from the back or the side panels of the appliance.
- ► Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

8 After setup

- ▶ Peel off the protective films. *
- ► Clean the appliance.
- ► If necessary: Disinfect the appliance.
- ► Keep the invoice so you have the appliance and dealer information available if needed.

9 Disposal of packaging



WARNING

Danger of suffocation from packaging materials and films!

Do not allow children to play with packaging materials.

The packaging is made from recyclable materials:

- Corrugated card/cardboard
- Parts made of foamed polystyrene
- Films and bags from polyethylene
- Packing bands from polypropylene
- Wood frame nailed together with a polyethylene window*
- ► Take the packaging material to an official collection point.

10 Changing the door hinge with bearing bracket hinge

10.1 Safety instructions



WARNING

Risk of injury if the door is not reversed correctly!

Have a specialist change the door hinge.



WARNING

Risk of injury and material damage from the door weight!

- Only replace the door hinge if you are able to carry a weight of 15 kg (33.07 lb).
- ► Have two people replace the door hinge.

NOTICE

Live parts!

Damage to electrical components.

▶ Pull the power plug before changing the door hinges.

10.2 Tool











10.3 Removing the covers

▶ Open the door.


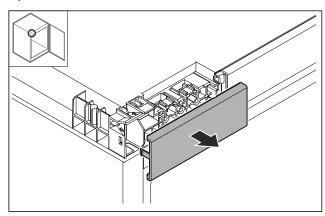


Fig. 7

► Remove the cover.

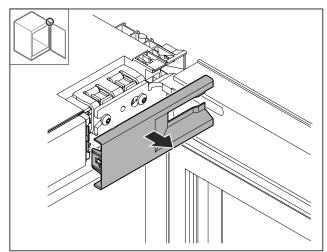

Fia 8

Remove the cover.

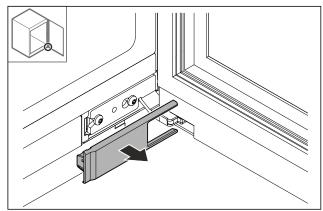


Fig. 9

► Remove the cover.

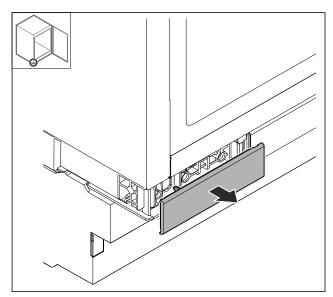


Fig. 10


► Remove the cover.

10.4 Removing the door

NOTICE

Risk of injury if the door tips out!

► Hold the door.

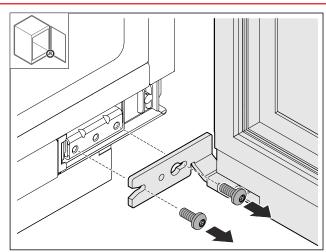

Fia 11

► Release the screws at the bottom.

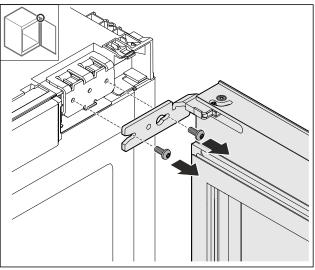


Fig. 12

- ► Release the screws at the top.
- ► Remove the door.
- ► Place the door on a soft support.

10.5 Removing the hinge

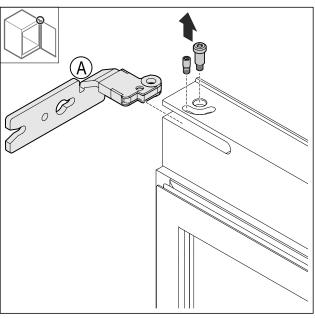


Fig. 13

▶ Unscrew the bolt.

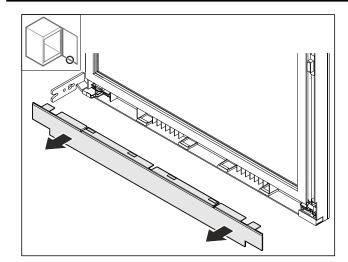


Fig. 14 ▶ Remove the cover.

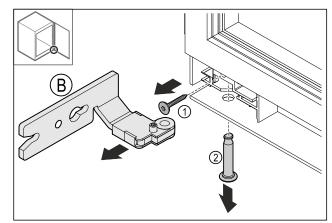


Fig. 15

- Remove the screw Fig. 15 (1).
 Remove the pin Fig. 15 (2).
 Remove the hinge Fig. 15 (B).

10.6 Reconfiguring the hinge


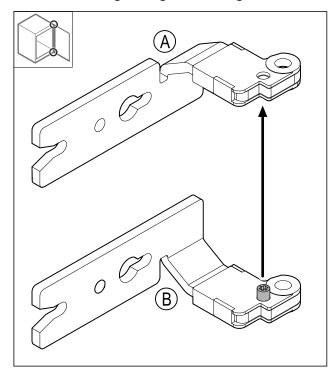


Fig. 16 ► Reposition the screw.

10.7 Moving the top cover

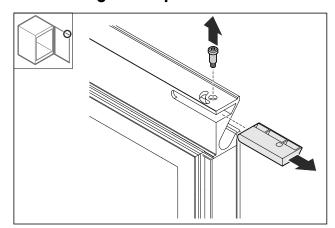

- Fig. 17
 ► Remove the pin.
- ► Remove the cover.
- ▶ Liebherr recommends: Store the cover for later use.

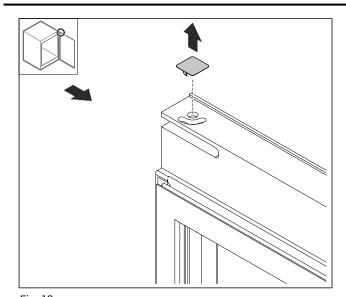


Fig. 18
► Remove the cover.

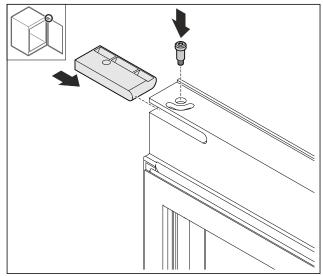


Fig. 19

- ▶ Use the cover from the enclosed package.
- Screw the pin tight.


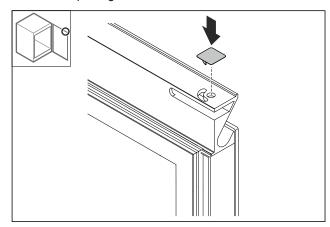


Fig. 20
▶ Insert the cover.

10.8 Moving the bottom cover

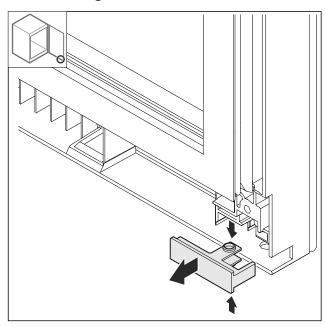

► Gently press the top and bottom of the cover together and pull it out towards the front.

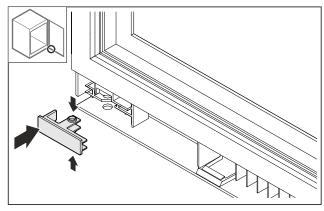


Fig. 22

▶ Insert the cover turned 180° on the opposite side.

10.9 Moving the door stopper*

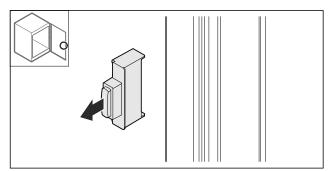


Fig. 23

▶ Pull out the door stopper.

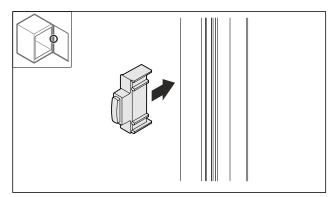


Fig. 24

▶ Insert the door stopper turned 180° on the opposite side.

10.10 Attaching the hinges

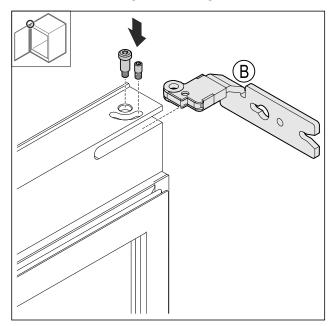


Fig. 25

► Attach the top hinge.

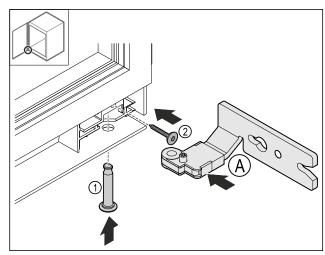


Fig. 26

- ► Insert the bottom hinge Fig. 26 (A).
- ▶ Insert the pin *Fig. 26 (1)* and hold it.
- ► Tighten the screw Fig. 26 (2).

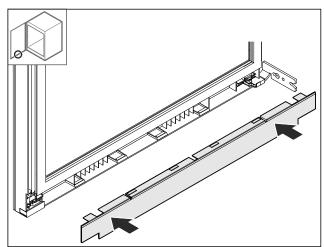


Fig. 27
▶ Put on the cover.

10.11 Moving the top bracket

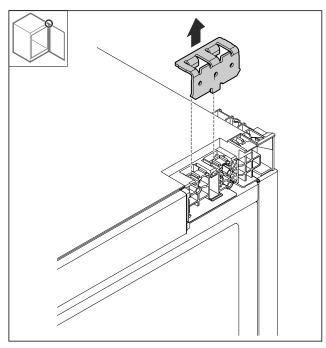


Fig. 28

► Remove the bracket.

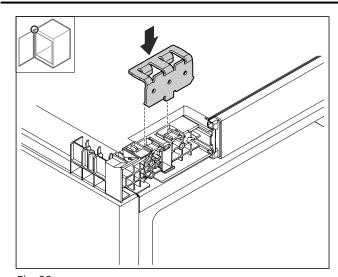


Fig. 29
Insert the bracket.

10.12 Moving the bottom bracket

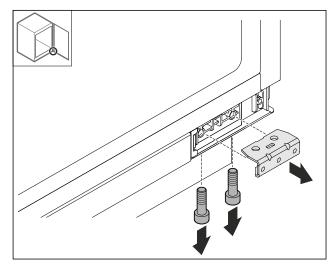


Fig. 30
▶ Pull off the bracket.



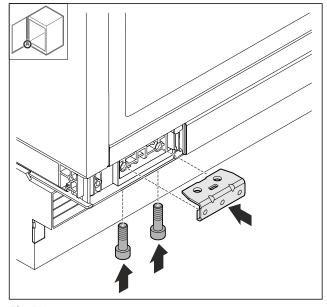


Fig. 31
► Mount the bracket.

10.13 Installing the door

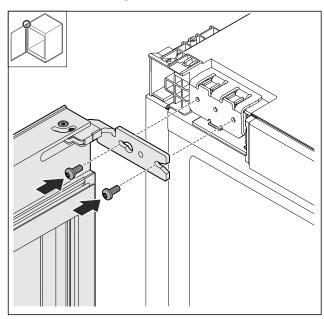

► Screw on the door at the top.

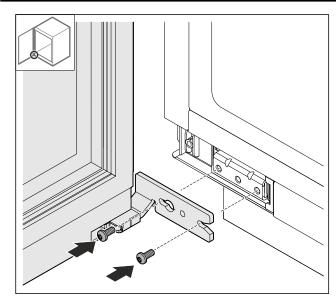

▶ Screw on the door at the bottom.

10.14 Putting on the covers

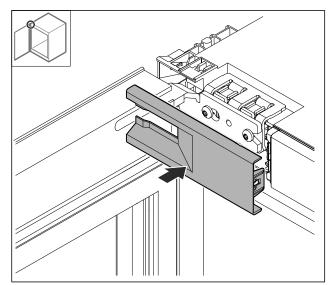


Fig. 34 ▶ Put on the cover.


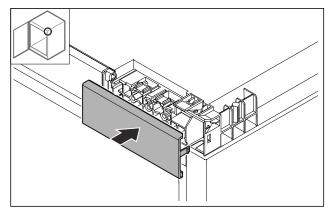


Fig. 35

▶ Put on the cover.

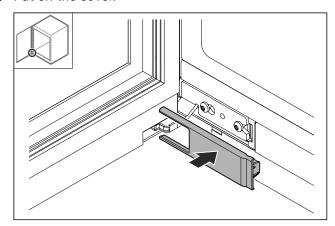

▶ Put on the cover.

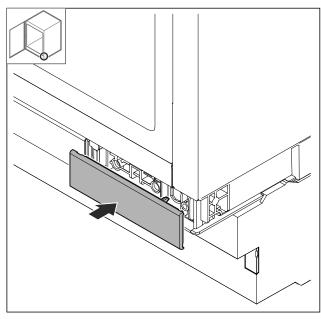


Fig. 37 ▶ Put on the cover.

11 Changing the door hinge with multi-joint hinge (suitable for decoration)

11.1 Safety instructions



Risk of injury if the door is not reversed correctly!

► Have a specialist change the door hinge.



WARNING

Risk of injury and material damage from the door weight!

- ▶ Only replace the door hinge if you are able to carry a weight of 15 kg (33.07 lb).
- ► Have two people replace the door hinge.

NOTICE

Live parts!

Damage to electrical components.

▶ Pull the power plug before changing the door hinges.

11.2 Tool









11.3 Removing the covers

▶ Open the door.

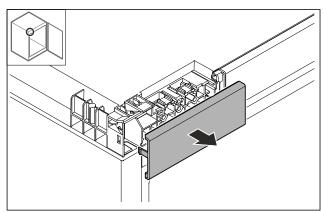


Fig. 38

► Remove the cover.

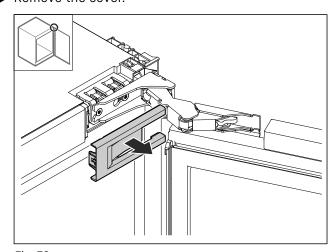


Fig. 39

► Remove the cover.

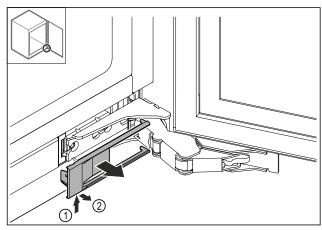


Fig. 40

► Remove the cover.

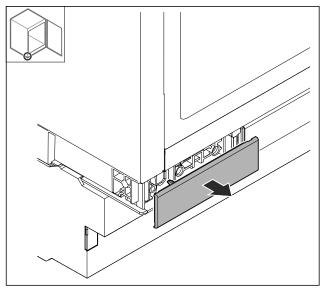


Fig. 41

► Remove the cover.

11.4 Removing the door

NOTICE

Risk of injury if the door tips out!

► Hold the door.

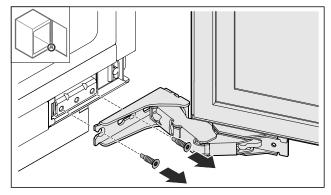


Fig. 42

▶ Release the screws at the bottom.

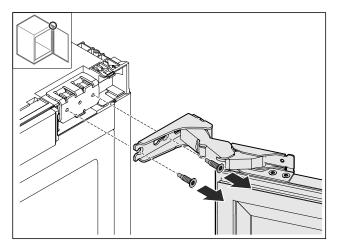


Fig. 43

- ► Release the screws at the top.
- ► Remove the door.
- ▶ Place the door on a soft support.

11.5 Removing the hinge

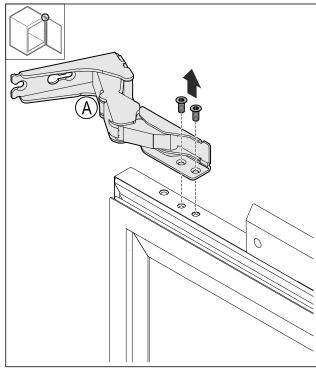


Fig. 44

▶ Unscrew the screws.


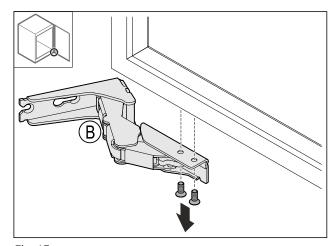


Fig. 45 ► Unscrew the screws.

11.6 Moving the door stopper

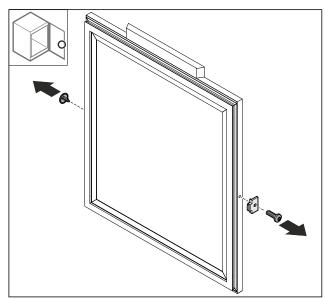

- ▶ Remove the Fig. 46 (1) cover.▶ Pull off the door stopper Fig. 46 (2).

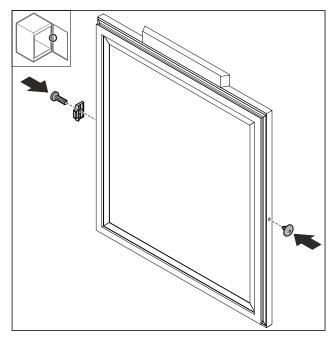


Fig. 47

- ▶ Mount the door stopper *Fig. 47 (1)* turned by 180° on the opposite side.
- ▶ Insert the cover *Fig. 47 (2)* on the opposite side.

11.7 Attaching the hinges

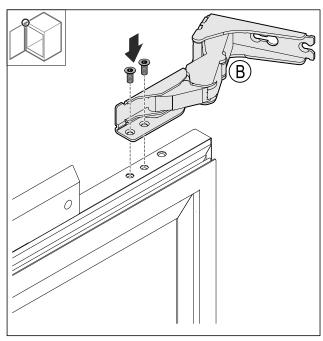


Fig. 48
► Attach the top hinge.

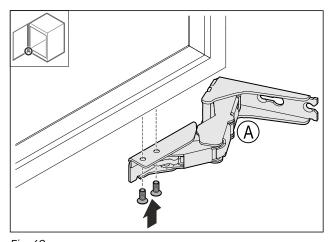


Fig. 49

► Attach the bottom hinge.

11.8 Moving the top bracket

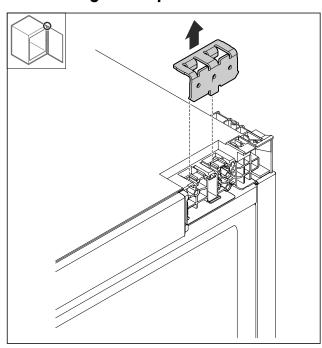


Fig. 50
► Remove the bracket.

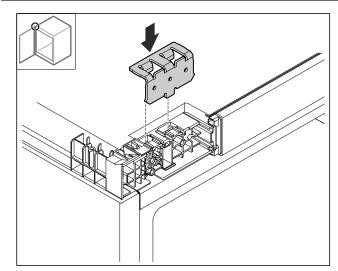


Fig. 51
► Insert the bracket.

11.9 Moving the bottom bracket

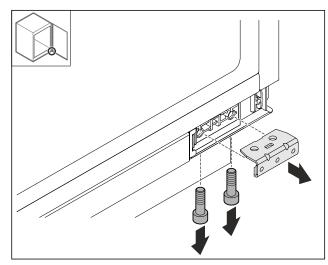


Fig. 52
▶ Pull off the bracket.

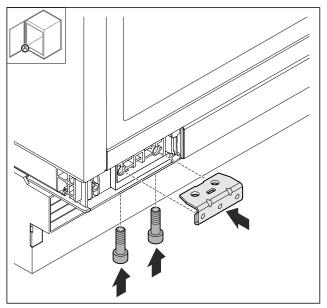


Fig. 53

▶ Mount the bracket.

11.10 Installing the door

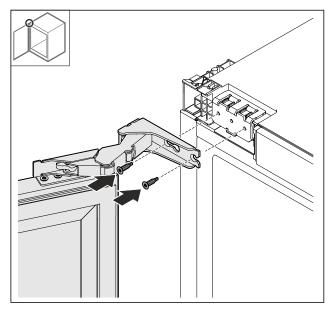


Fig. 54

► Screw on the door at the top.

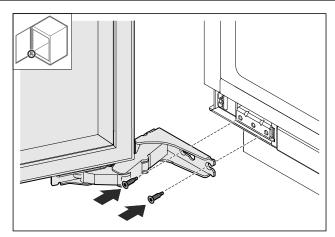


Fig. 55 Screw on the door at the bottom.

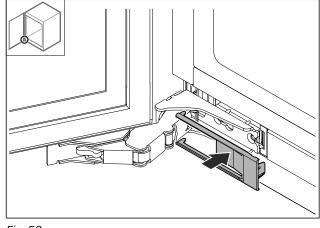


Fig. 58 ▶ Put on the cover.

11.11 Putting on the covers


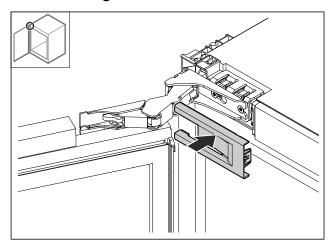


Fig. 56 ▶ Put on the cover.

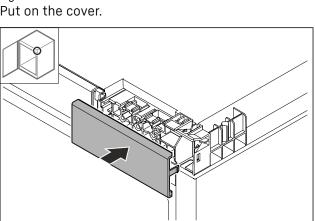

▶ Put on the cover.

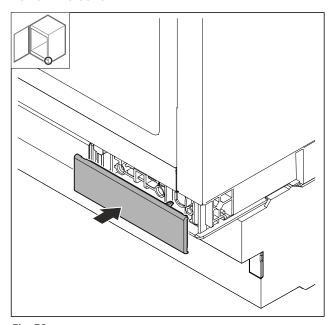


Fig. 59 ▶ Put on the cover.

12 Aligning the door hinge with bearing bracket hinge

You can align the door at the hinge angle bracket if the door is not straight.

Aligning the door hinge with multi-joint hinge (not suitable for

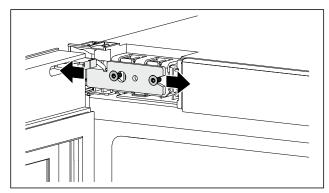


Fig. 60 Example illustration

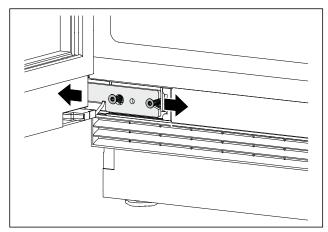


Fig. 61 Example illustration

- ► Slightly loosen the screws.
- ► Slide the door with the hinge angle bracket to the right or left.
- ▶ Tighten the screws as far as they will go.
- ▶ The door is aligned.

13 Aligning the door hinge with multi-joint hinge (not suitable for decoration)

You can align the door at the hinge angle bracket if the door is not straight.

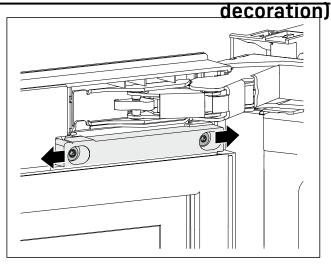


Fig. 62 Example illustration

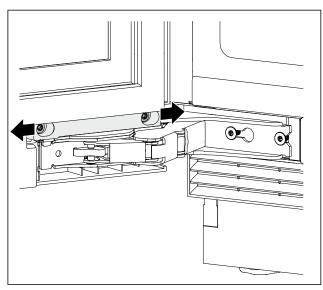


Fig. 63 Example illustration

- ► Slightly loosen the screws.
- ► Slide the door with the hinge angle bracket to the right or left.
- ▶ Tighten the screws as far as they will go.
- ▶ The door is aligned.

14 Recessed installation

14.1 Tool

Make sure that the following tools are available:

- ☐ Torx® 20
- Slotted screwdriver
- Measuring tape
- Pencil
- String
- Level

Recessed installation

Before pushing the appliance into the recess, observe the fastening method:

Lateral fastening

Substructure under hard countertop such as granite

The appliance is lower than the countertop when the adjustable feet are fully extended.

Ceiling fastening

No granite plate

The appliance sits slightly braced under the countertop when the adjustable feet are

Unit	side	panel	is	available
for s	crewi	ng.		

14.2 Preparing the appliance

Make sure that the following requirements are fulfilled before you install the appliance in a recess:

- □ The door hinge has been mounted. You can only mount the door hinge outside of the recess, because you need sufficient space to do so.
- ▶ Insert the IEC socket of the power cable completely into the appliance plug on the rear side of the appliance.
- ► Ensure the IEC socket is firmly in place.
- ► Use a string to route the power plug to a socket outlet that is freely accessible.



fully extended.

NOTICE

Risk of damage when moving the appliance! When moving the appliance, you may damage the floor or the appliance's adjustable feet may break off. Before moving it:

- ► Turn the adjustable feet in fully.
- ▶ Place one strip of cardboard (e. g. from the packaging) under each adjustable foot with approx. 100 mm (3 5/16 in) x 600 mm (23 1/2 in).

While moving:

- ► Move the appliance carefully.
- ► If the floor is not level: Lift the appliance carefully. After moving it:
- ► Remove the cardboard strips.

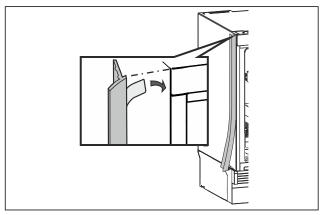


Fig. 65 Example illustration

- ► For 600 mm (23 1/2 in) wide recess: Do not use piping.
- ► For 610 mm (24 in) wide recess: Attach piping to the side.
- Appliance rests against neighboring unit on the right: Install piping on the left.
- Appliance rests against neighboring unit on the left: Install piping on the right.
- ▶ Place the piping at the top below the upper edge and glue it to the side panel. Do not shorten the piping.

14.3 Fastening the appliance to the ceiling

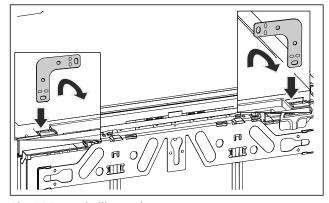


Fig. 66 Example illustration

► Insert the bracket into the opening in the appliance ceiling and bend it forward.



WARNING

Risk of fire from short circuit!

- ► If you are pushing the appliance into the recess: Do not kink, trap, or damage the power cable.
- ▶ Do not operate the appliance with a defective power cable.
- ▶ Push the appliance into the recess and align it, see point (see 14.5 Leveling out the appliance).

14.4 Fastening the appliance laterally

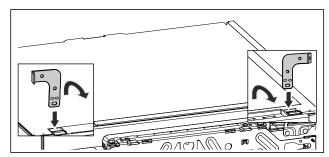


Fig. 67 Example illustration

▶ Bend both brackets at one end before installing. Insert the straight side into the opening in the appliance ceiling and bend it forward.



WARNING

Risk of fire from short circuit!

- ▶ If you are pushing the appliance into the recess: Do not kink, trap, or damage the power cable.
- ▶ Do not operate the appliance with a defective power cable
- ▶ Push the appliance into the recess and align it, see point (see 14.5 Leveling out the appliance).

14.5 Leveling out the appliance

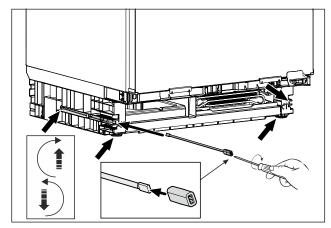


Fig. 68 Example illustration

- ▶ Unscrew the adjustable feet to below the worktop.
- ► Align the appliance so it stands up straight using a level.

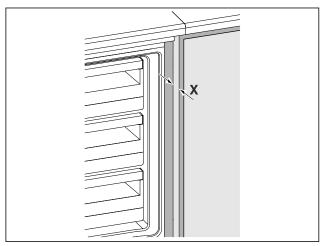


Fig. 69 Example illustration

- ▶ The distance from the front edge of the unit side panel to the appliance body on both sides is X = 41.5 mm (15/8 in).
- > If there is no unit side panel, use the worktop as a quide.

For units with door hinge parts (knobs, sealing lips, etc.):

- ➤ Subtract the installation dimension (depth of the door hinge parts) from the 41.5 mm (1 5/8 in) insertion depth.
- ► Unscrew the adjustable feet alternately to the maximum. The maximum adjustment range is 60 mm (2 3/8 in).
- ▶ The appliance is aligned so it stands up straight
- ▶ The appliance is slightly braced in the recess between the floor and worktop.

14.6 Installing the base

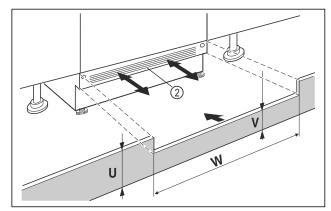


Fig. 70 Example illustration

- ▶ Put on the appliance base cover Fig. 70 (2) but do not fix it yet.
- ▶ Position the unit door and unit base cover for testing
- ▶ If the base cover Fig. 70 (2) is visible, pull it so far forward that the front edge of the ventilation grille and the unit base cover form one level.

-or-

▶ If the base cover is concealed Fig. 70 (2), push it all the way back.

Installing the unit door

- ► Ensure that the ventilation slots are completely free: If necessary, cut the height of the unit base cover Fig. 70 (U) to size!
- Adjust the bar height *Fig. 70 (V)* under the appliance base cover *Fig. 70 (2)* along the recess width *Fig. 70 (W)*.

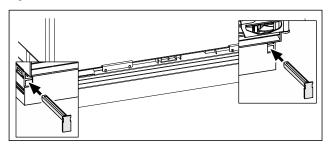


Fig. 71 Example illustration

- ► Fix the appliance base cover: Insert the latch while holding the appliance base cover.
- ► Fasten the unit base cover.

14.7 Fastening the appliance in the recess

Ceiling fastening:

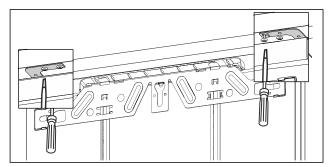


Fig. 72 Example illustration

► For fastening under the worktop, screw on the mounting brackets with two screws each underneath the worktop.

Lateral fastening:

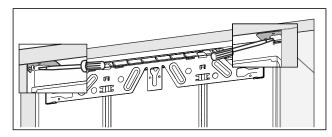


Fig. 73 Example illustration

► For lateral fastening, screw the mounting bracket into the recess with one screw each on the right and left.

15 Installing the unit door



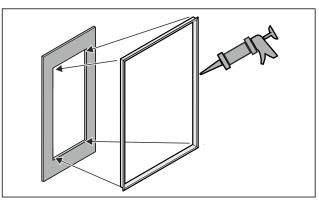


Fig. 74


- ► Glue the optional profile frame into the cutout. *
- ▶ Install the handle on the unit door; it is not possible to install it later.

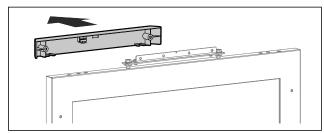


► Remove the cover.

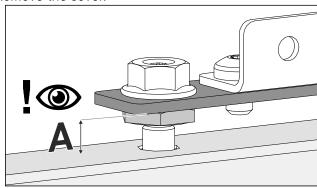

- ► Check the presetting (A) of 8 mm (5/16 in) (distance between appliance door and lower edge of mounting plate).
- ► Adjust the distance if necessary.

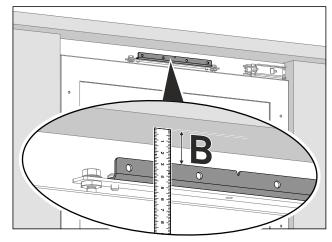

► Measure the distance (B) between the lower edge of the worktop and the upper edge of the mounting bracket.

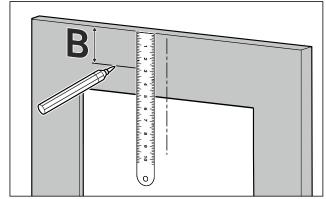

➤ Transfer the distance (B) to the back of the unit door and mark it.


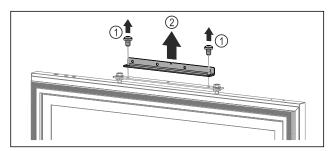


Fig. 75


- ► Remove the screws. Fig. 75 (1)
- ▶ Remove the mounting bracket. Fig. 75 (2)

Note

Pay attention to the length of the screws!

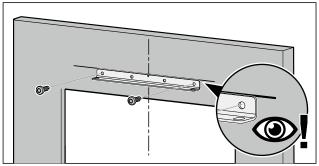

▶ Align the mounting bracket with the marked distance and screw it to the center of the unit door.

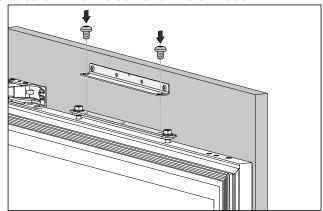

- ► Fasten the unit door to the appliance.
- Close the door.

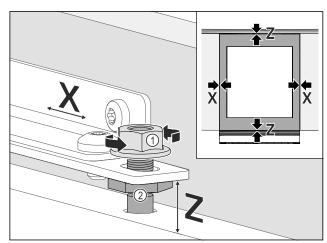


Fig. 76

- ► Check the door spacing to the surrounding unit doors.
- ► Align the unit door laterally: Loosen the lock nut *Fig. 76 (1)*, move the unit door in **X** direction.
- ► Tighten the lock nuts Fig. 76 (1).
- ▶ Align the height **Z** and lateral inclination of the unit door: Set the adjustment bolt *Fig. 76 (2)*.
- ▶ The unit door is flush and aligned with the surrounding cabinet fronts.

Note

Pay attention to the length of the screws!

Connecting the appliance to the power supply


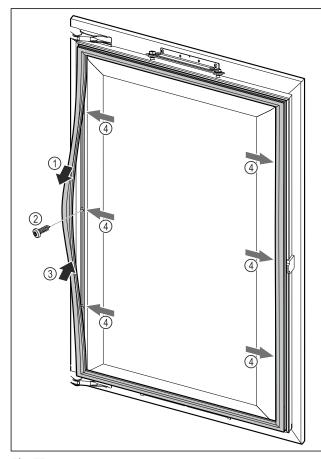


Fig. 77

- ▶ Loosen the magnetic door seal at certain points Fig. 77 (1), screw on the unit door through the drill hole underneath Fig. 77 (2) and snap the magnetic door seal back into place Fig. 77 (3).
- ▶ Repeat this step at all fastening points Fig. 77 (4).

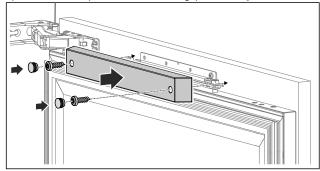

▶ Put on the top cover and screw it on to ensure a proper closing function.

16 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Cuts and fatal injury. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ► Check the appliance and the mains cable for damage after transport.
- ► Never put the appliance into operation if the appliance or the mains cable are damaged.
- Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 14 Recessed installation)
- Requirements for the electrical connection are met. (see 2 Setup conditions)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is grounded and fused in accordance with regulations.
- The tripping current for the fuse is between 10 A and 16 A.

NOTICE

Danger of damage to incorrect operation!

Damage to the electrical components of the appliance.

▶ Only use the supplied power cable.




WARNING

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cord.
- ▶ Do not use a multipoint connector strip.

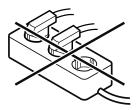

Connecting the appliance to the power supply

NOTICE

Danger of damage to incorrect connection! Damage to the appliance.

- ▶ Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- ► Connect the mains plug of the power cord to the power supply. Ensure the main plug is firmly plugged into the outlet.
- ▶ If no action is taken within 60 seconds: Standby symbol fades or disappears.*
- ▶ Appliance is connected. For initial commissioning, see the next chapter or the operating instructions.



home.liebherr.com/fridge-manuals

Wine storage cabinet, built-in

For Service in the U.S.: Liebherr Service Center Toll Free: 1-866-LIEBHER or 1-866-543-2437 Service-appliances.us@liebherr.com PlusOne Solutions, Inc. 3501 Quadrangle Blvd, Suite 120 Orlando, FL 32817

For Service in Canada: Liebherr Service Center
Toll Free: 1-888-LIEBHER or 1-888-543-2437
www.euro-parts.ca
EURO-PARTS CANADA
39822 Belgrave Road, Belgrave, Ontario, NOG 1E0
Phone: (519) 357-3320 | Fax: (519) 357-1326